




// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P10

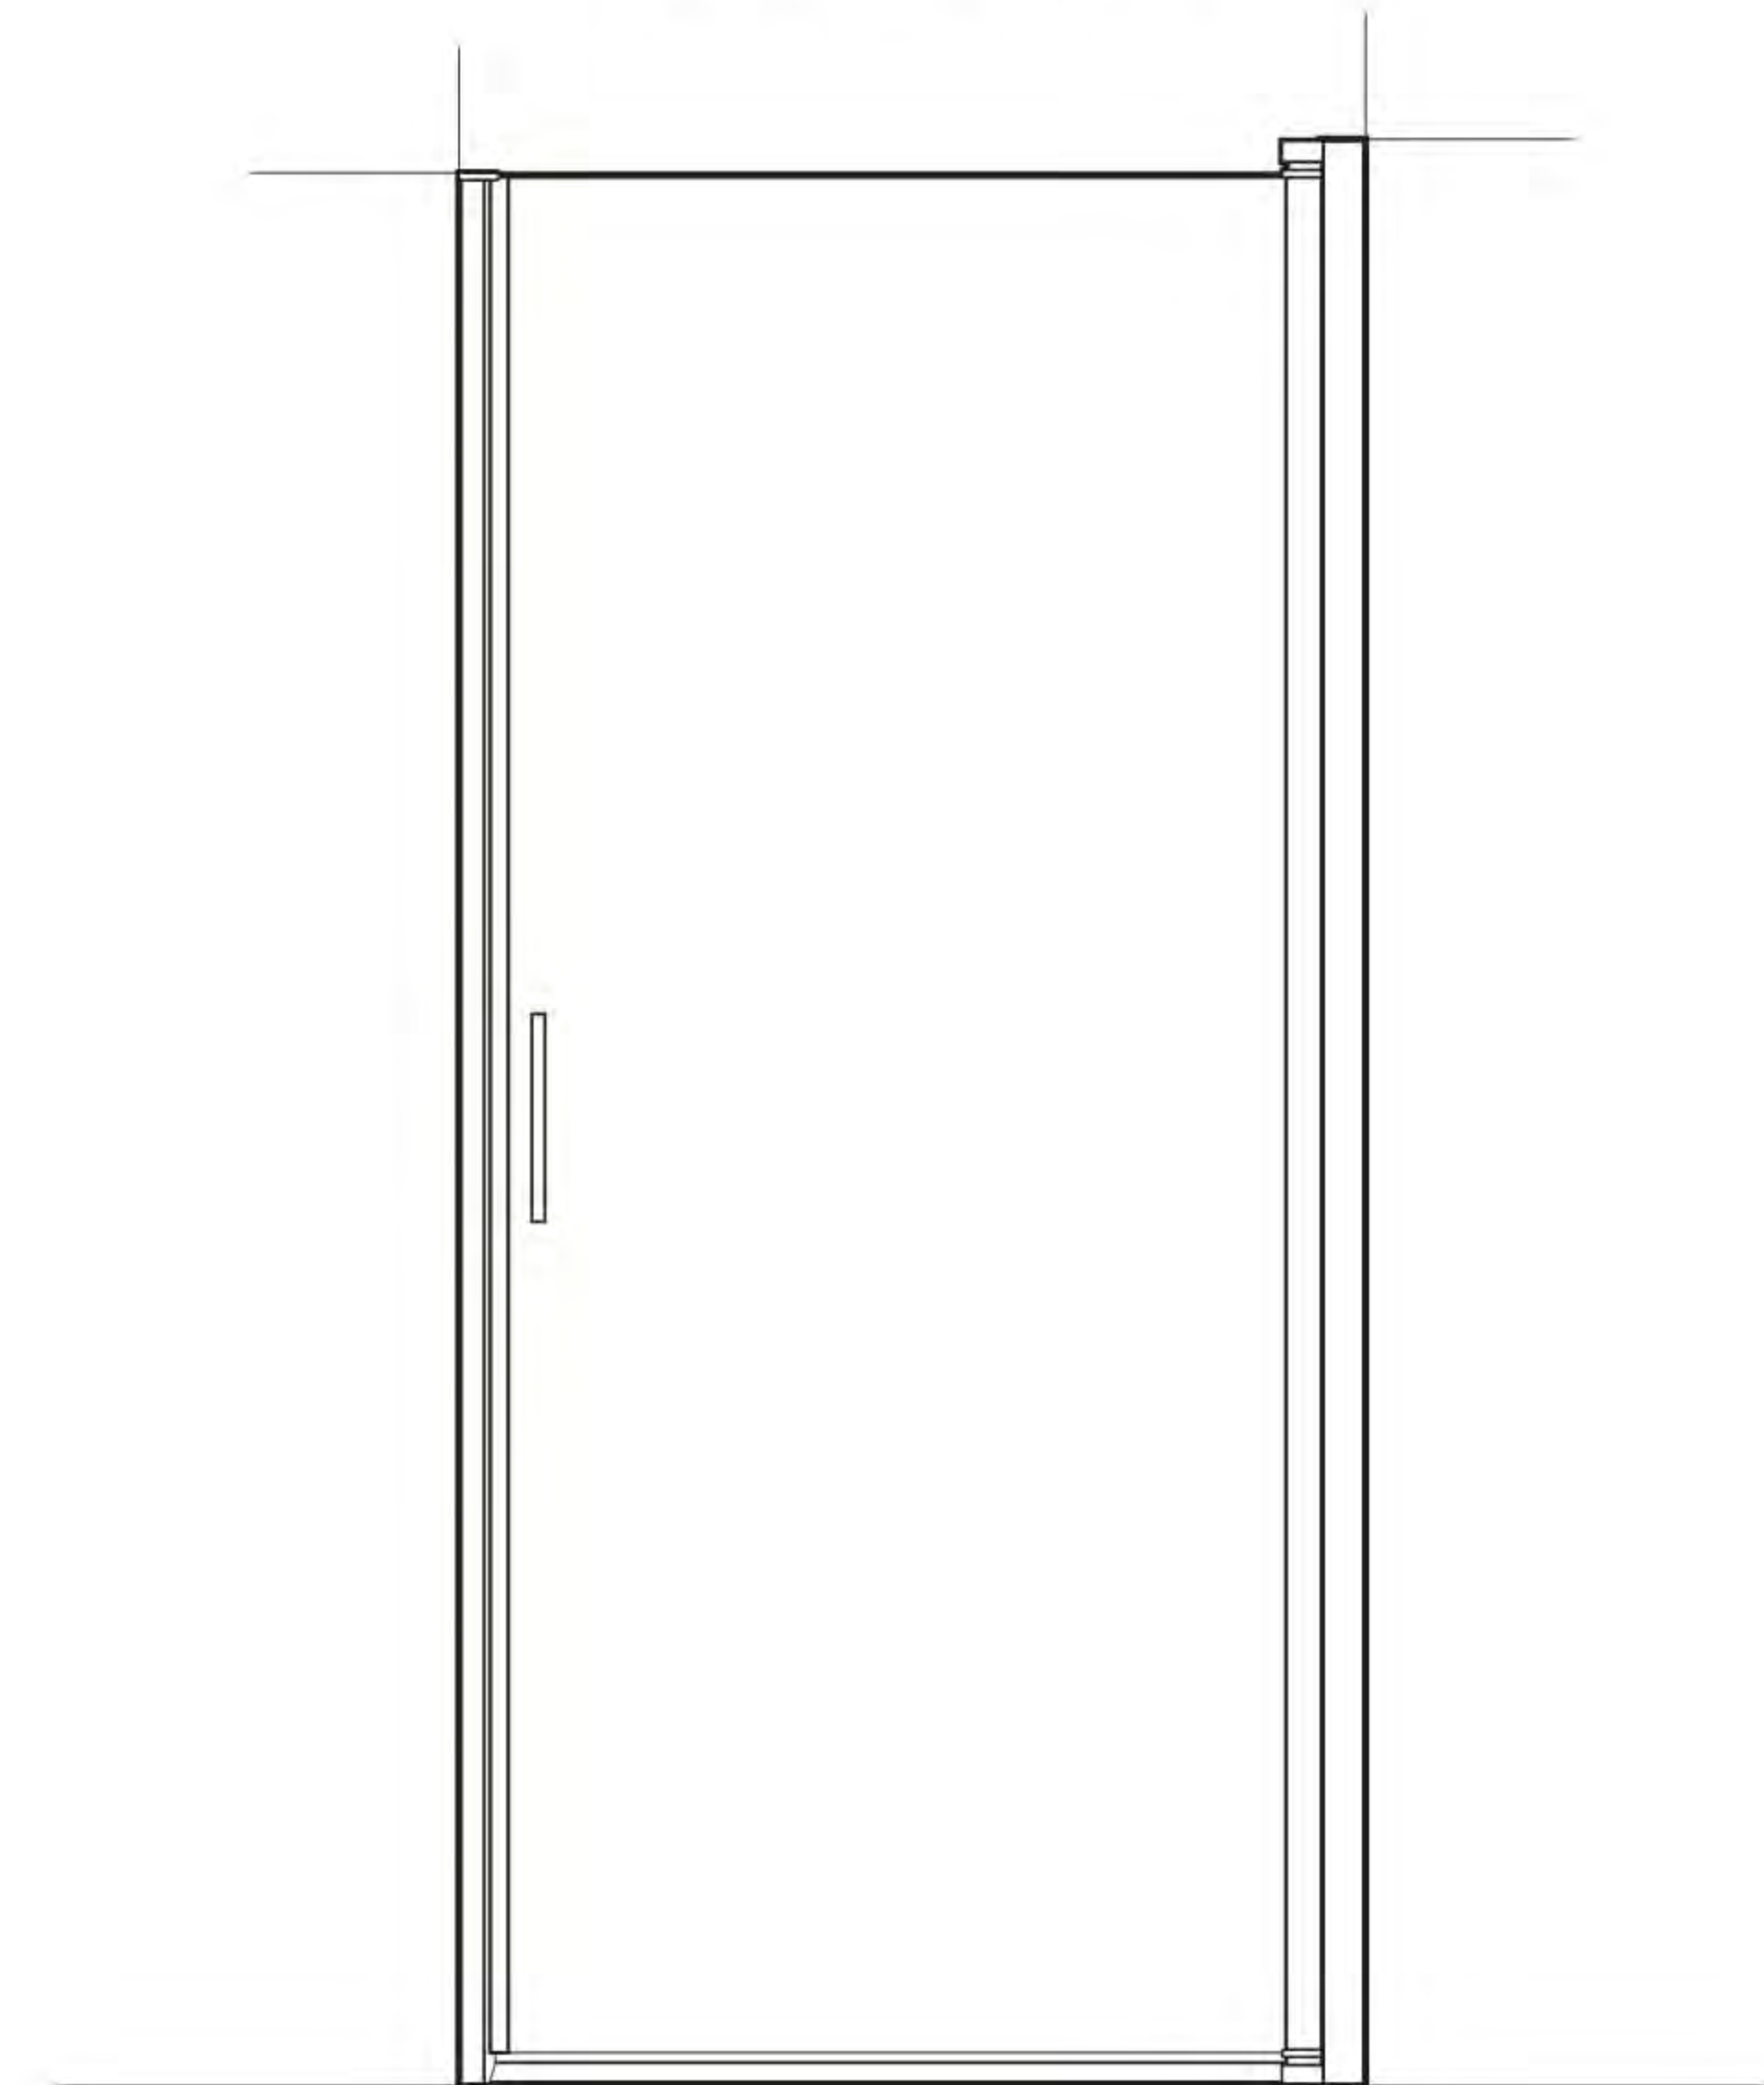


ENERO 2018 - Rev 0.1

(ES)
(FR)
(EN)
(IT)
(DE)
(PT)


A

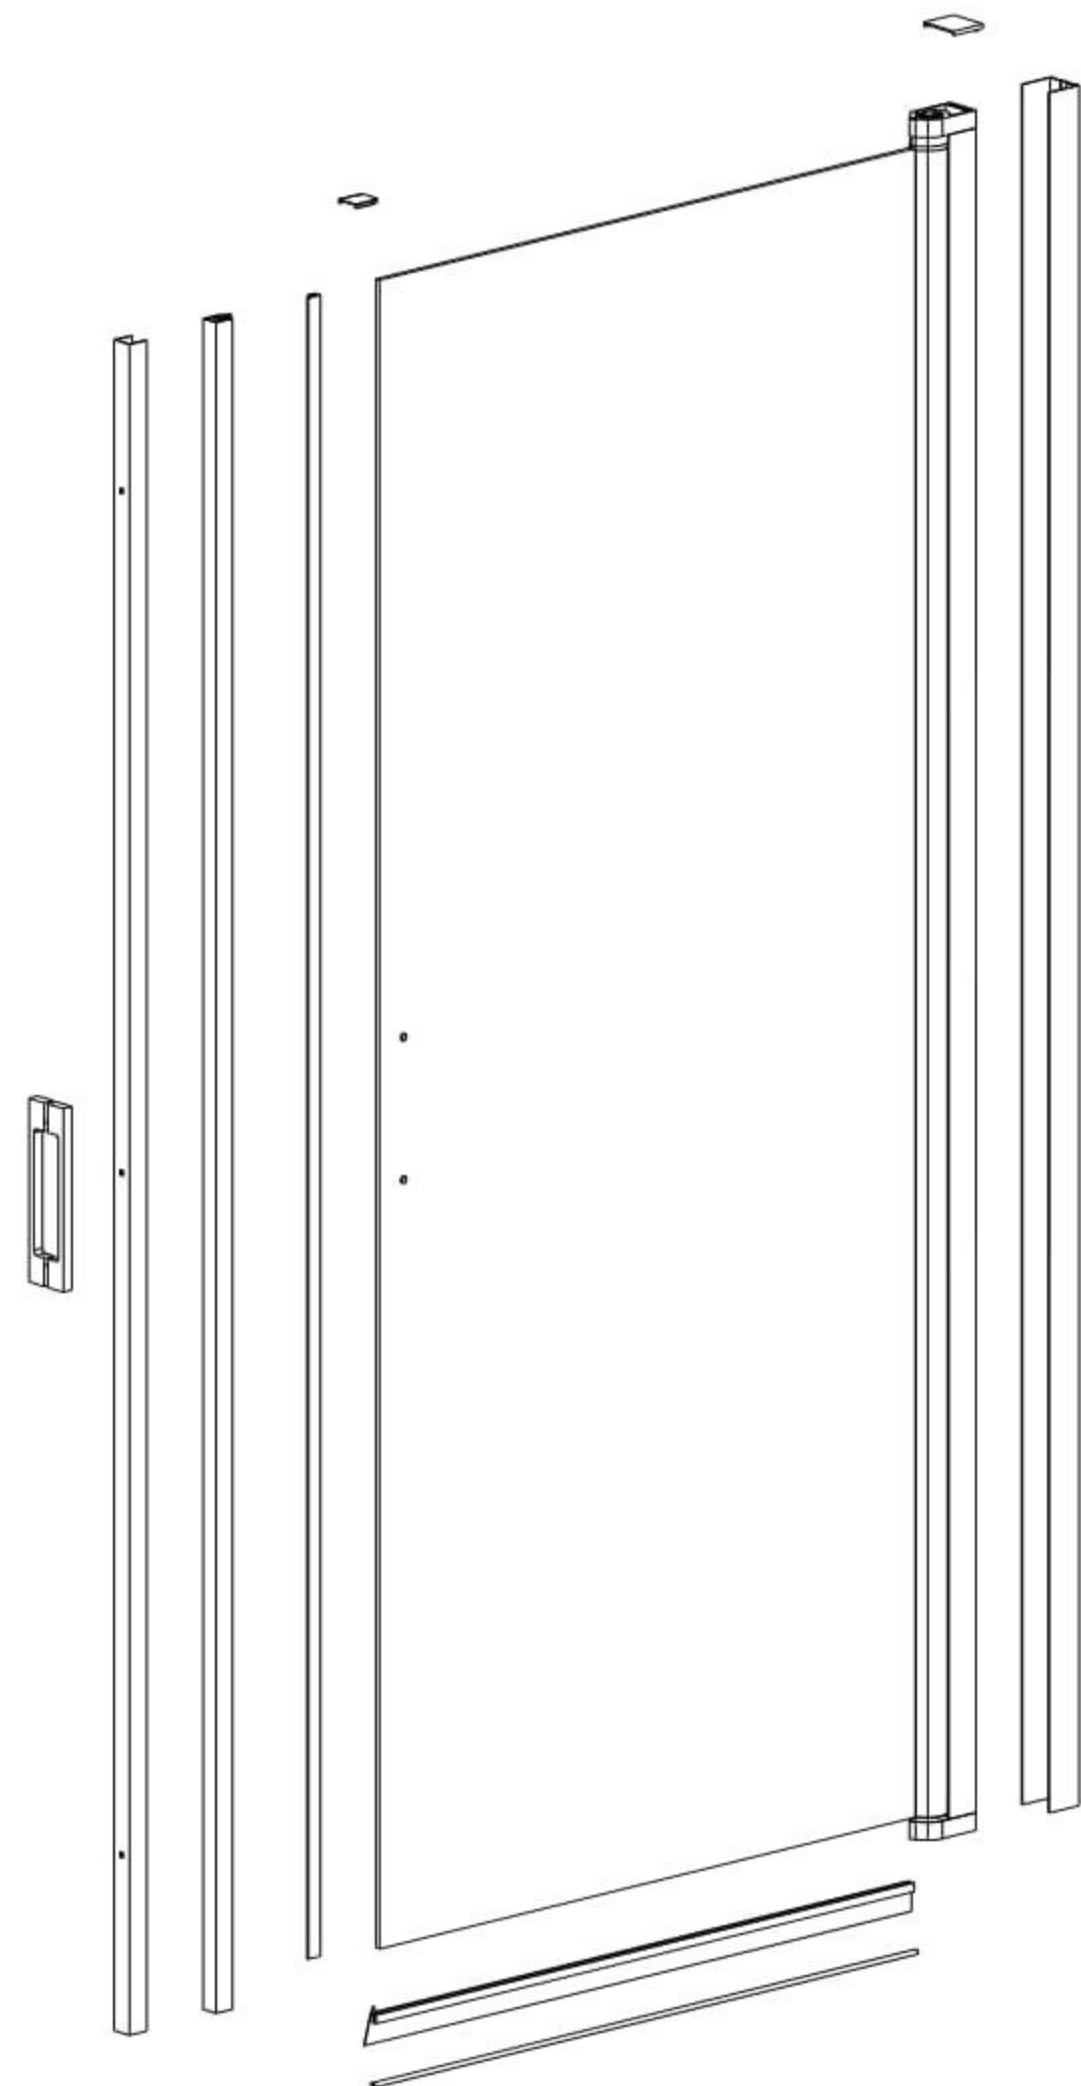





B





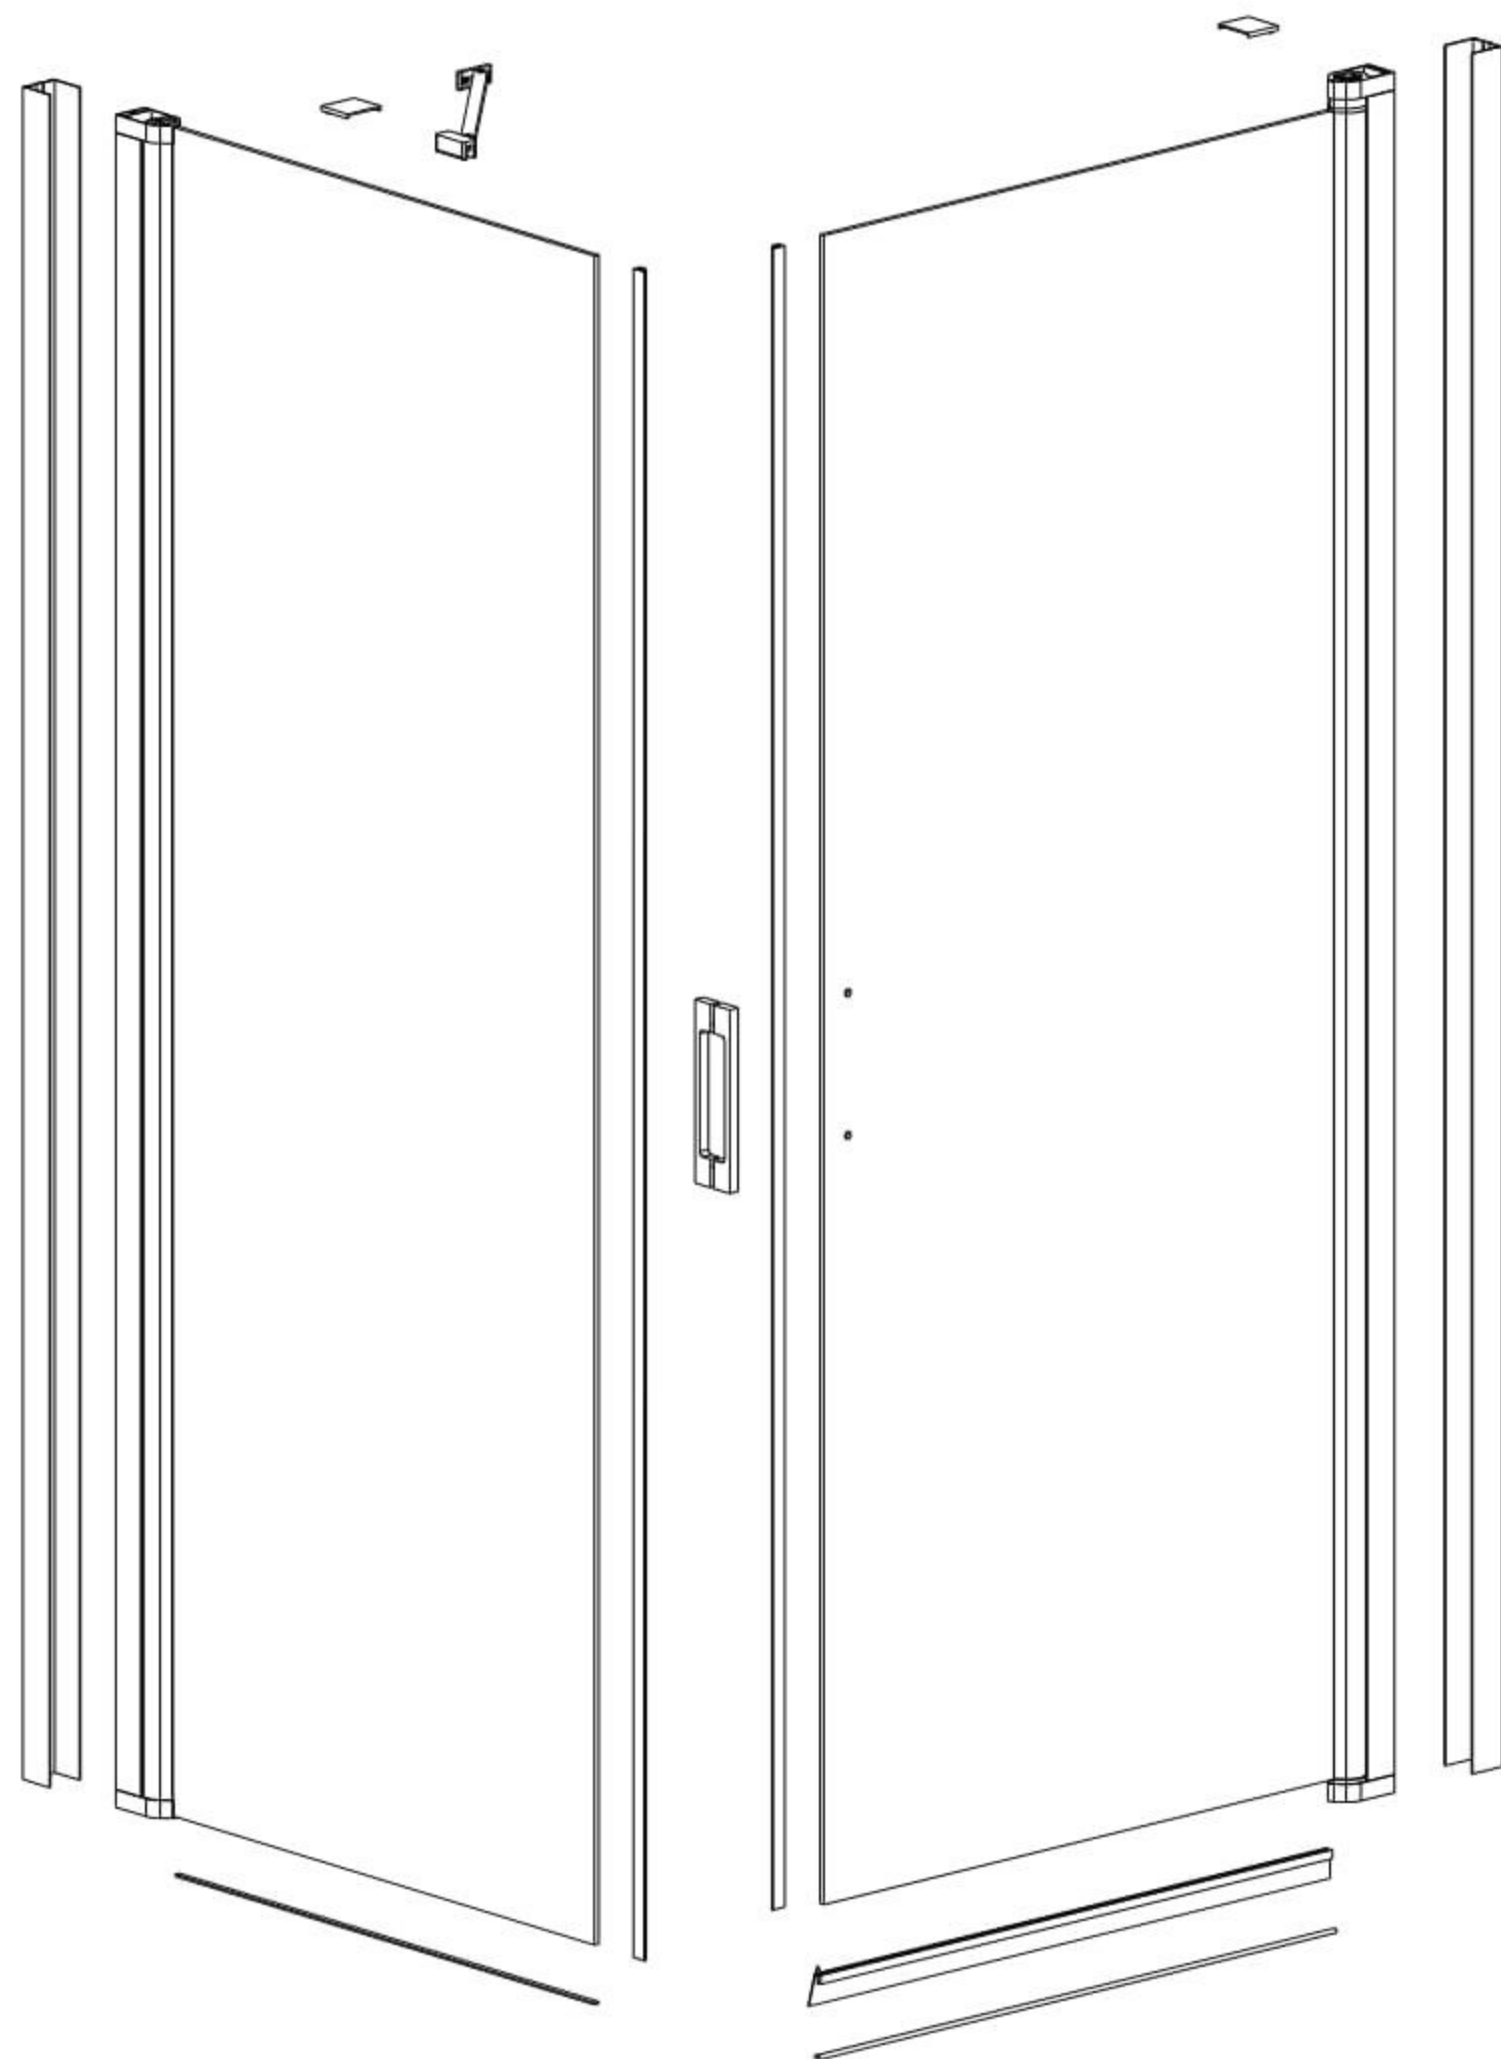


A

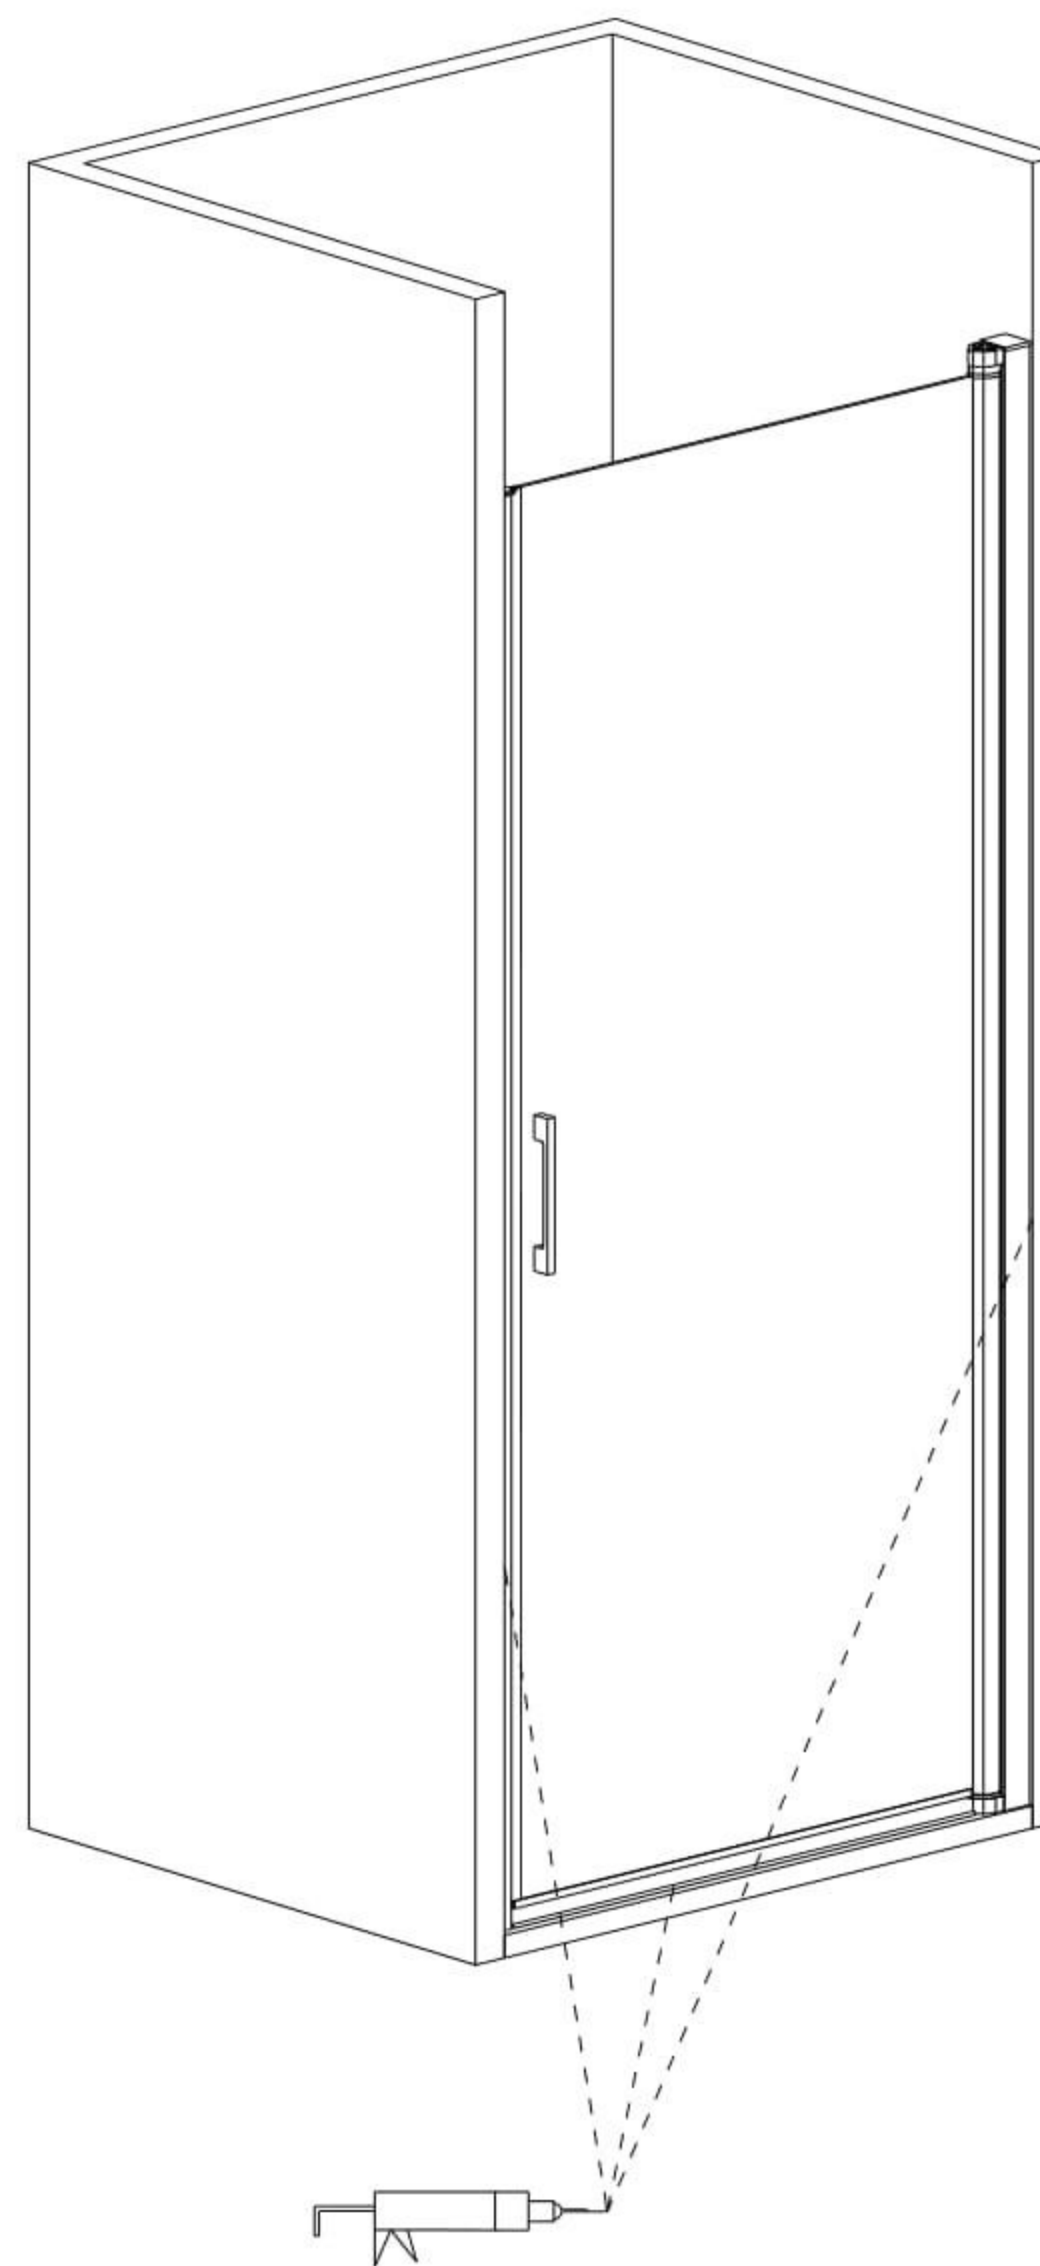


B

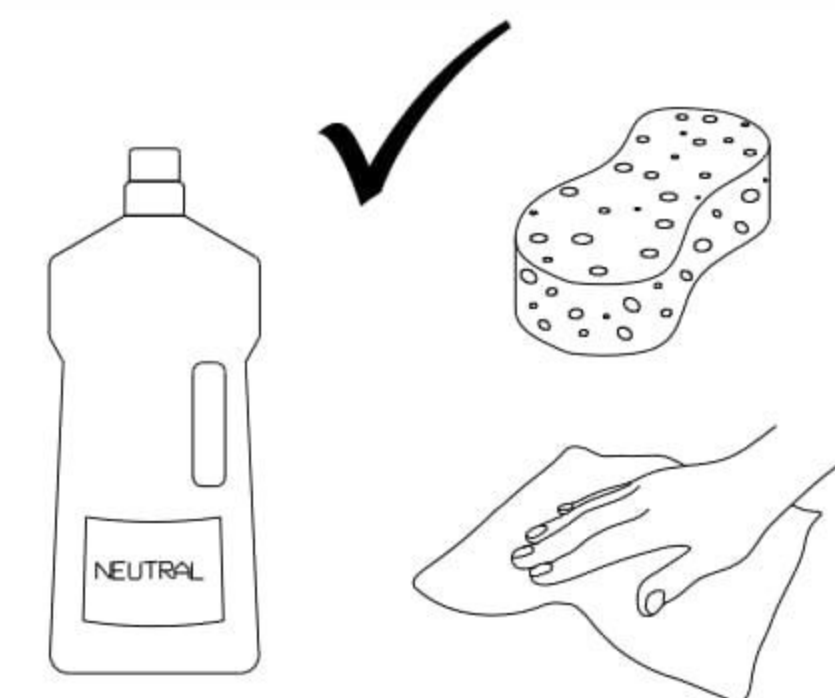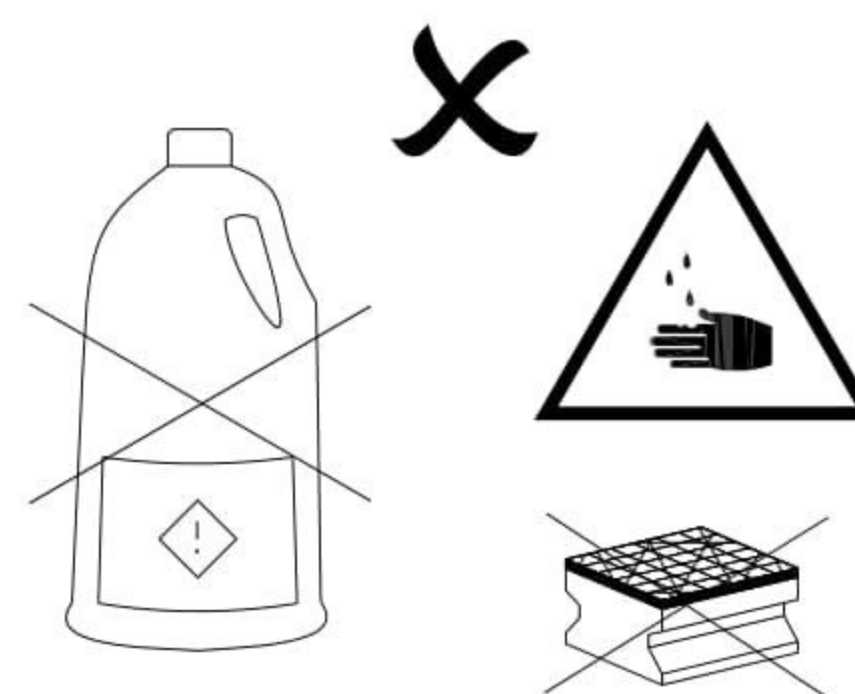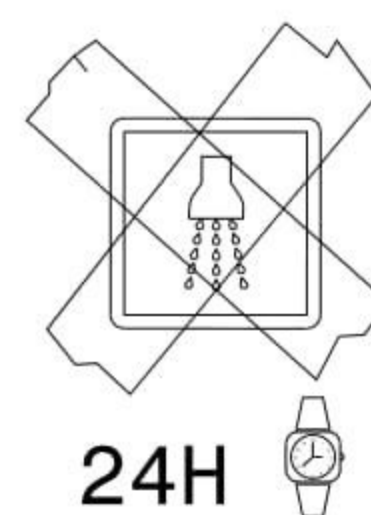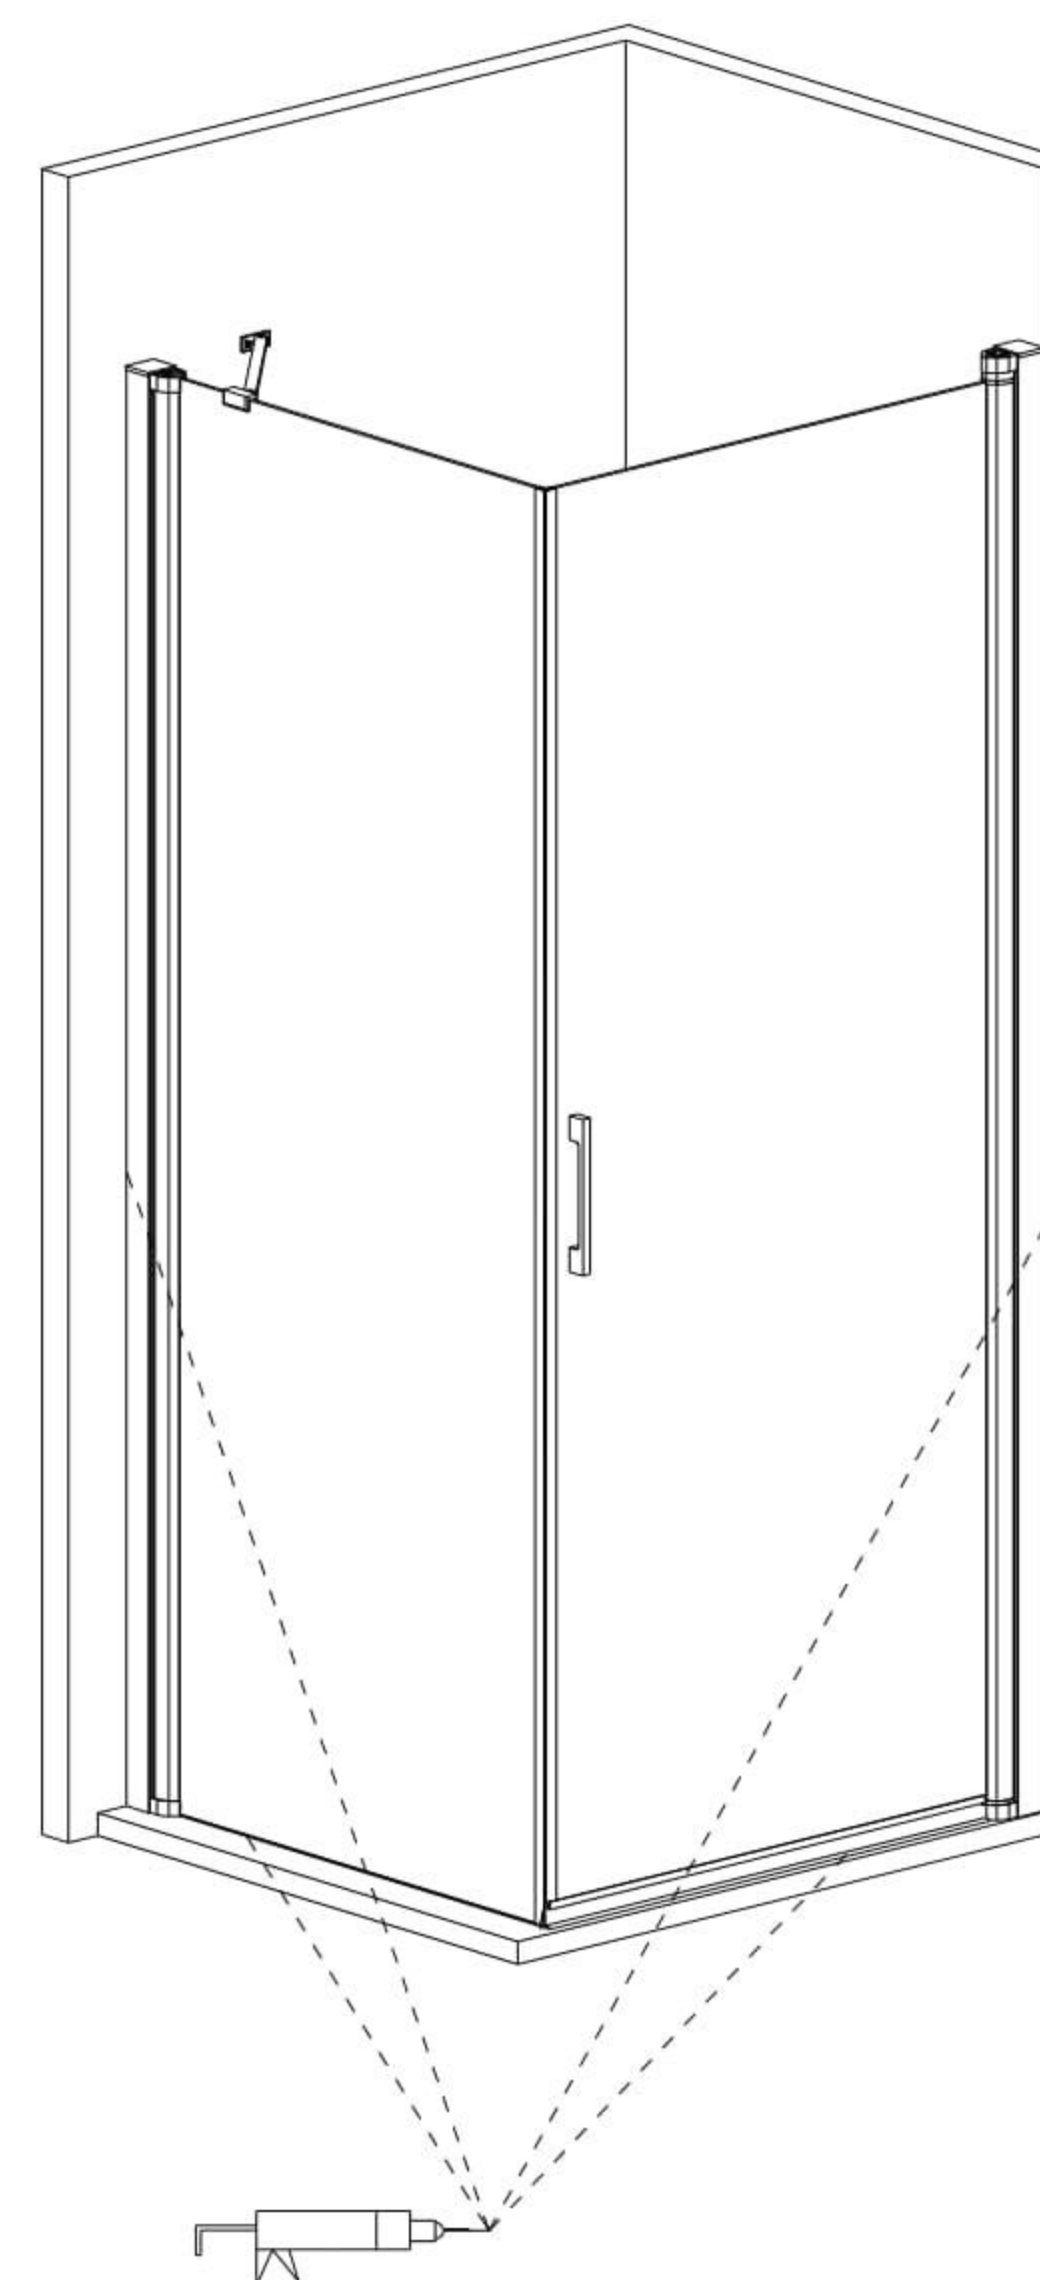

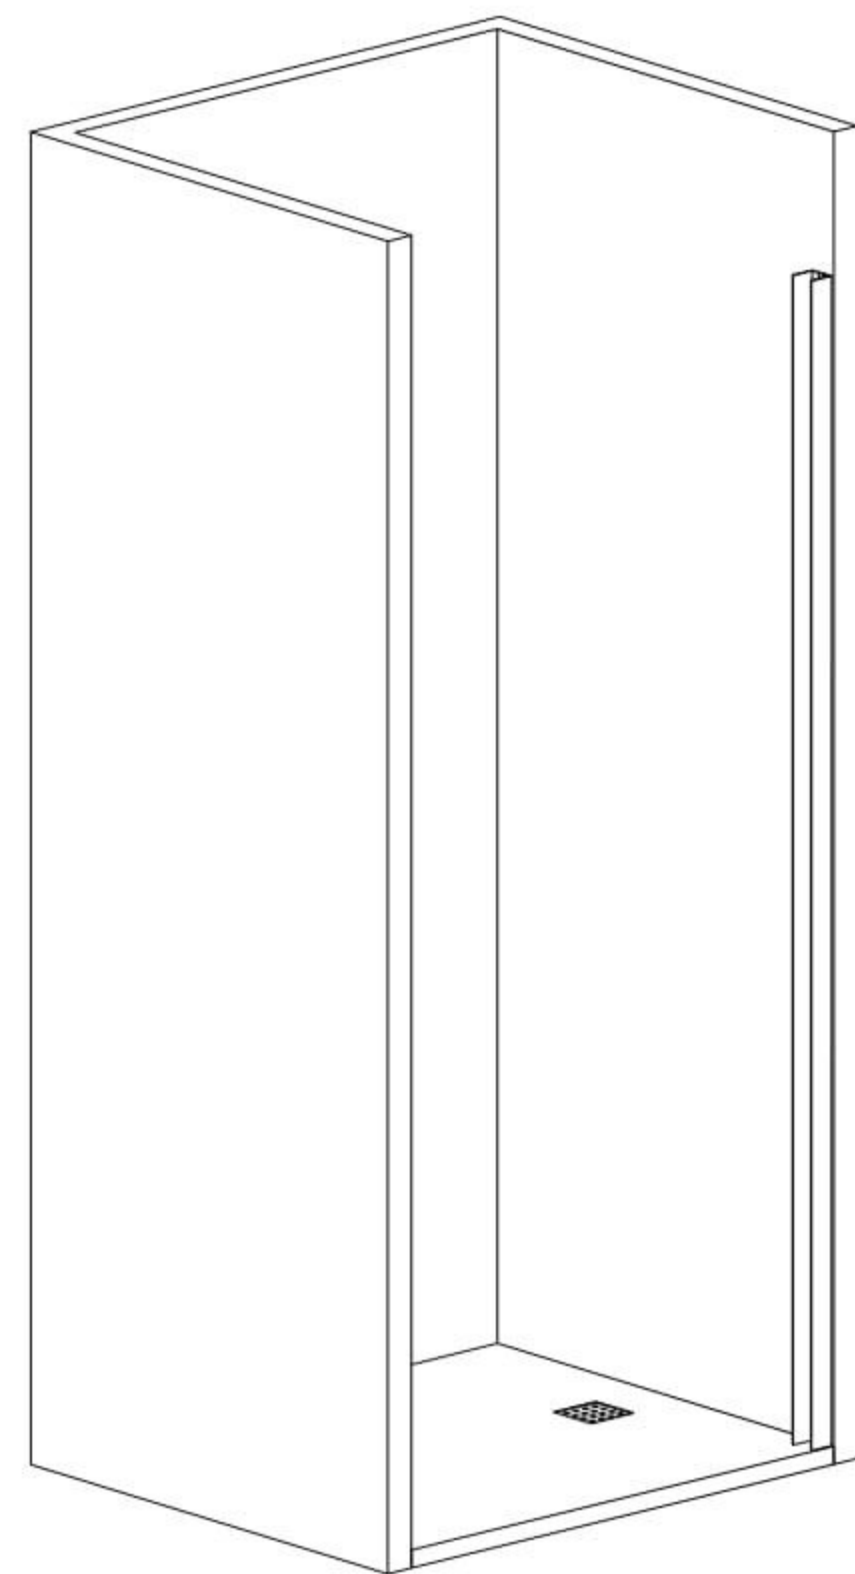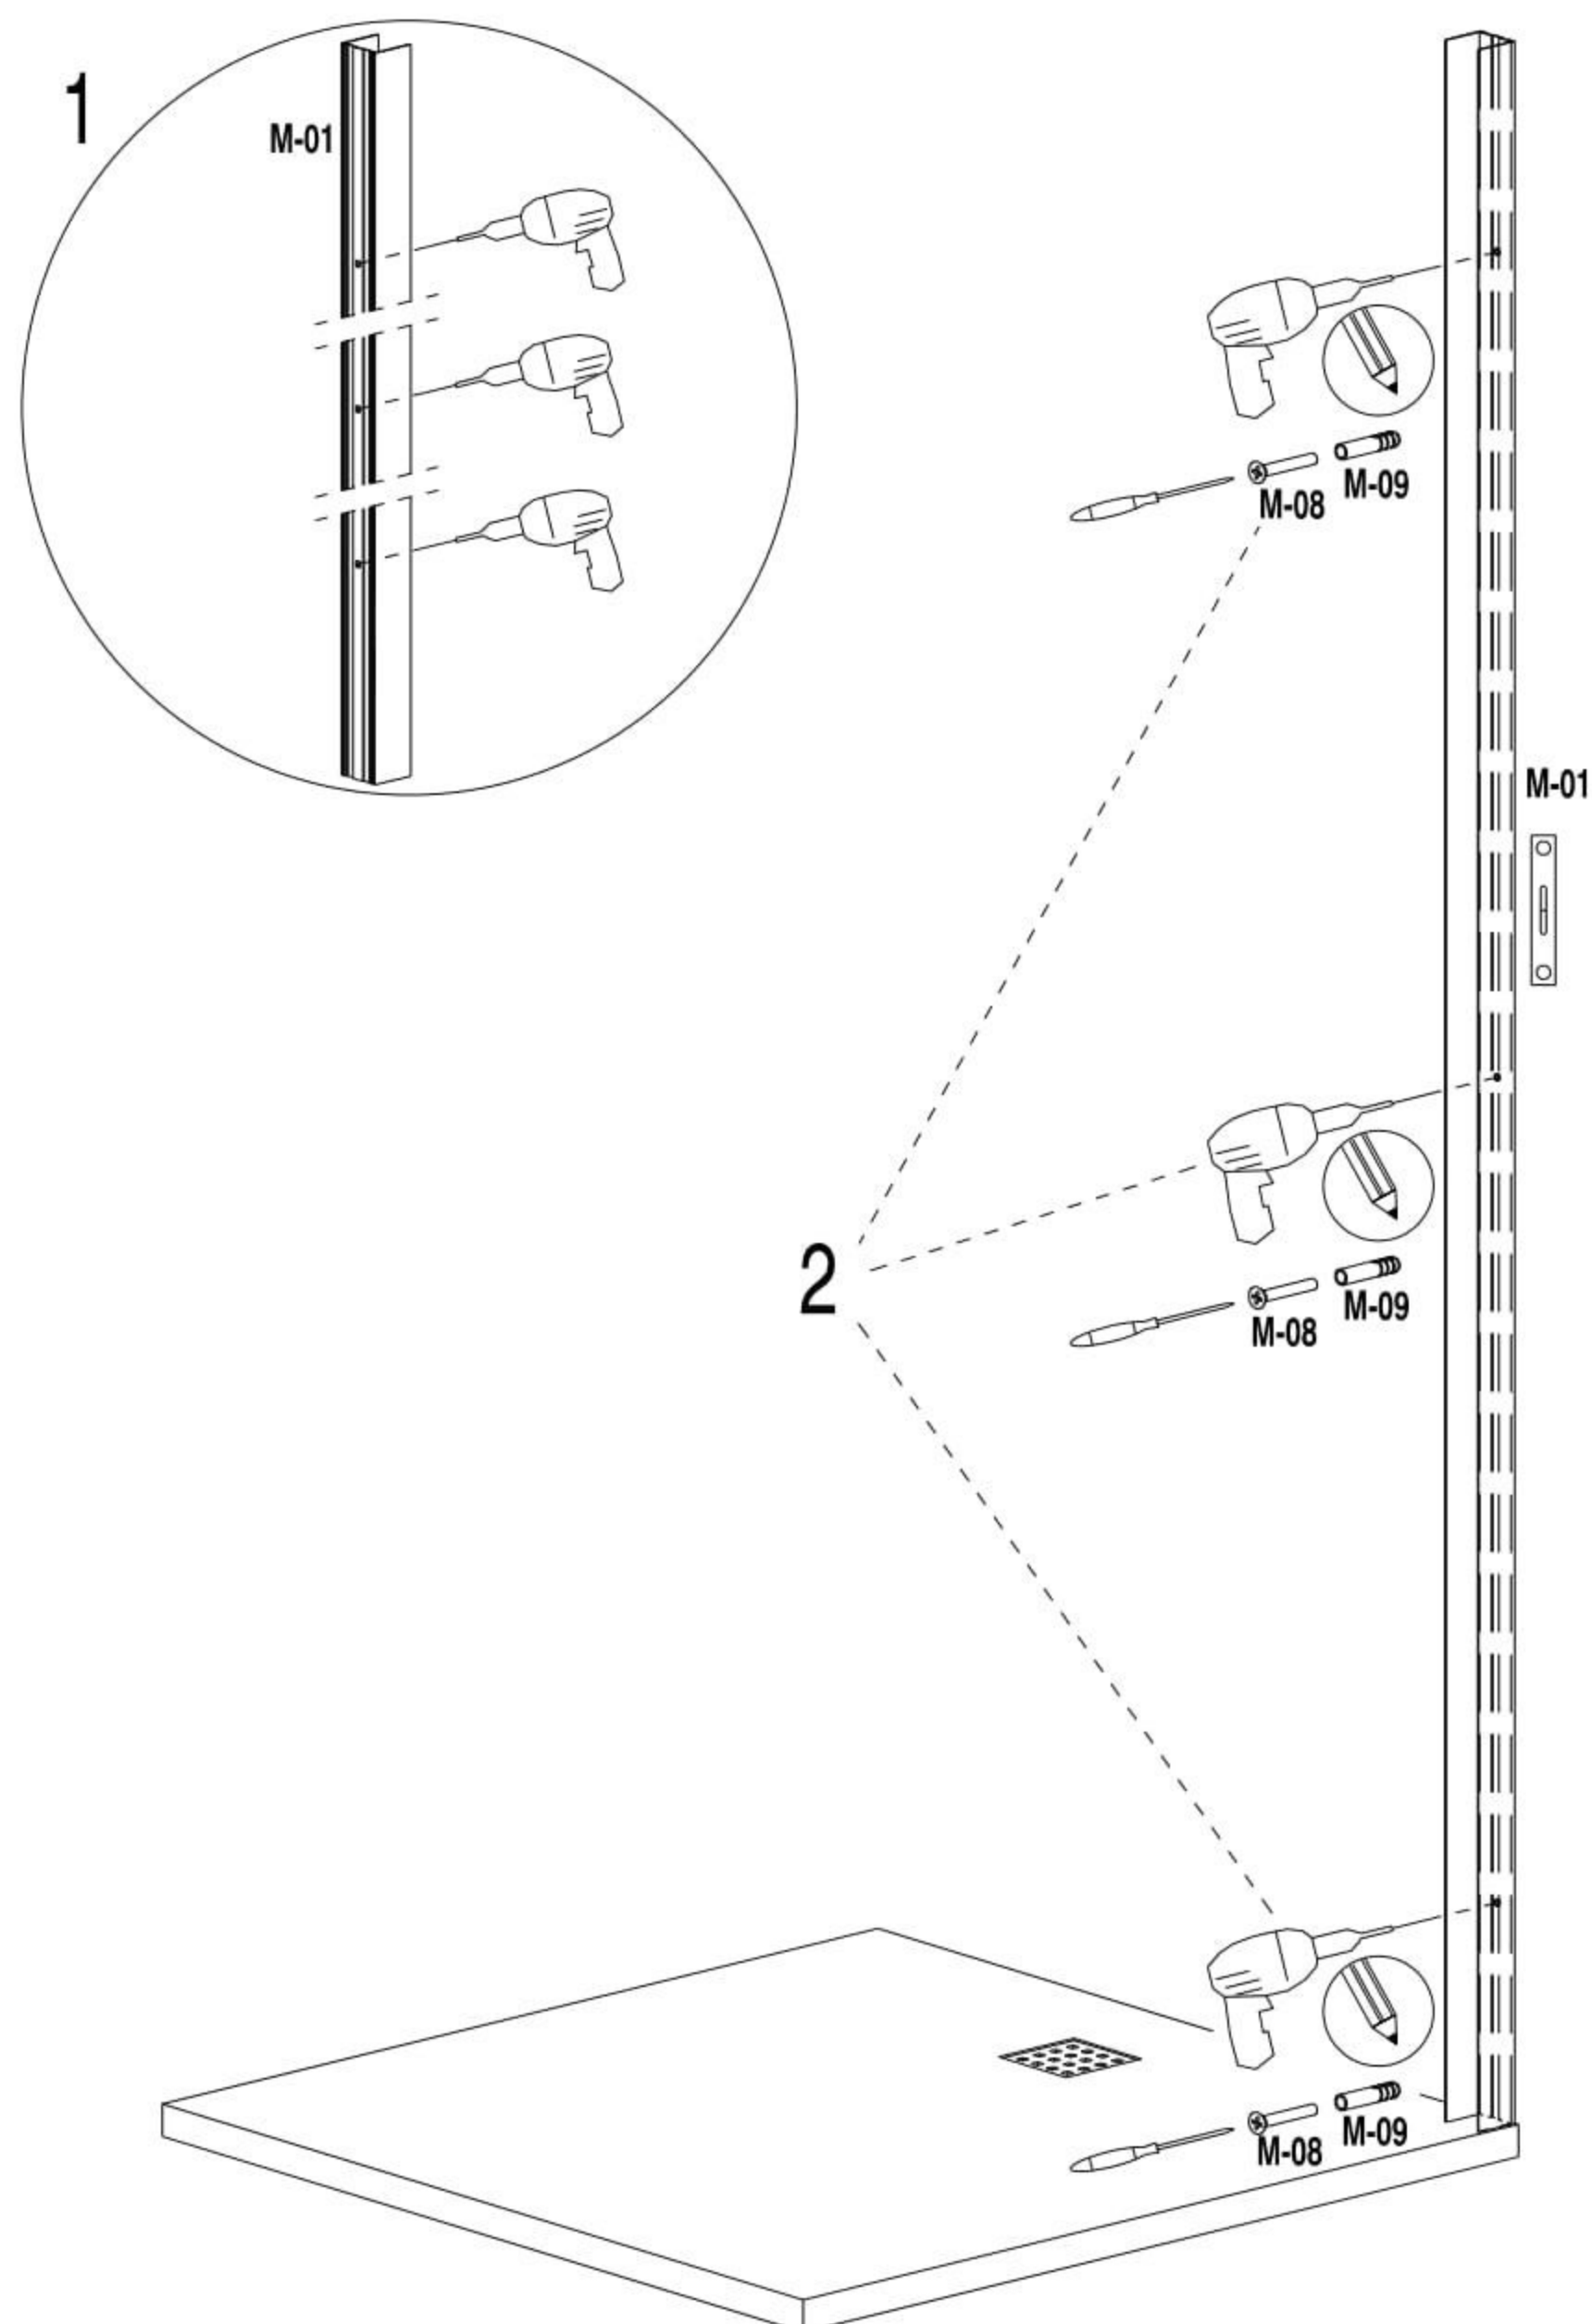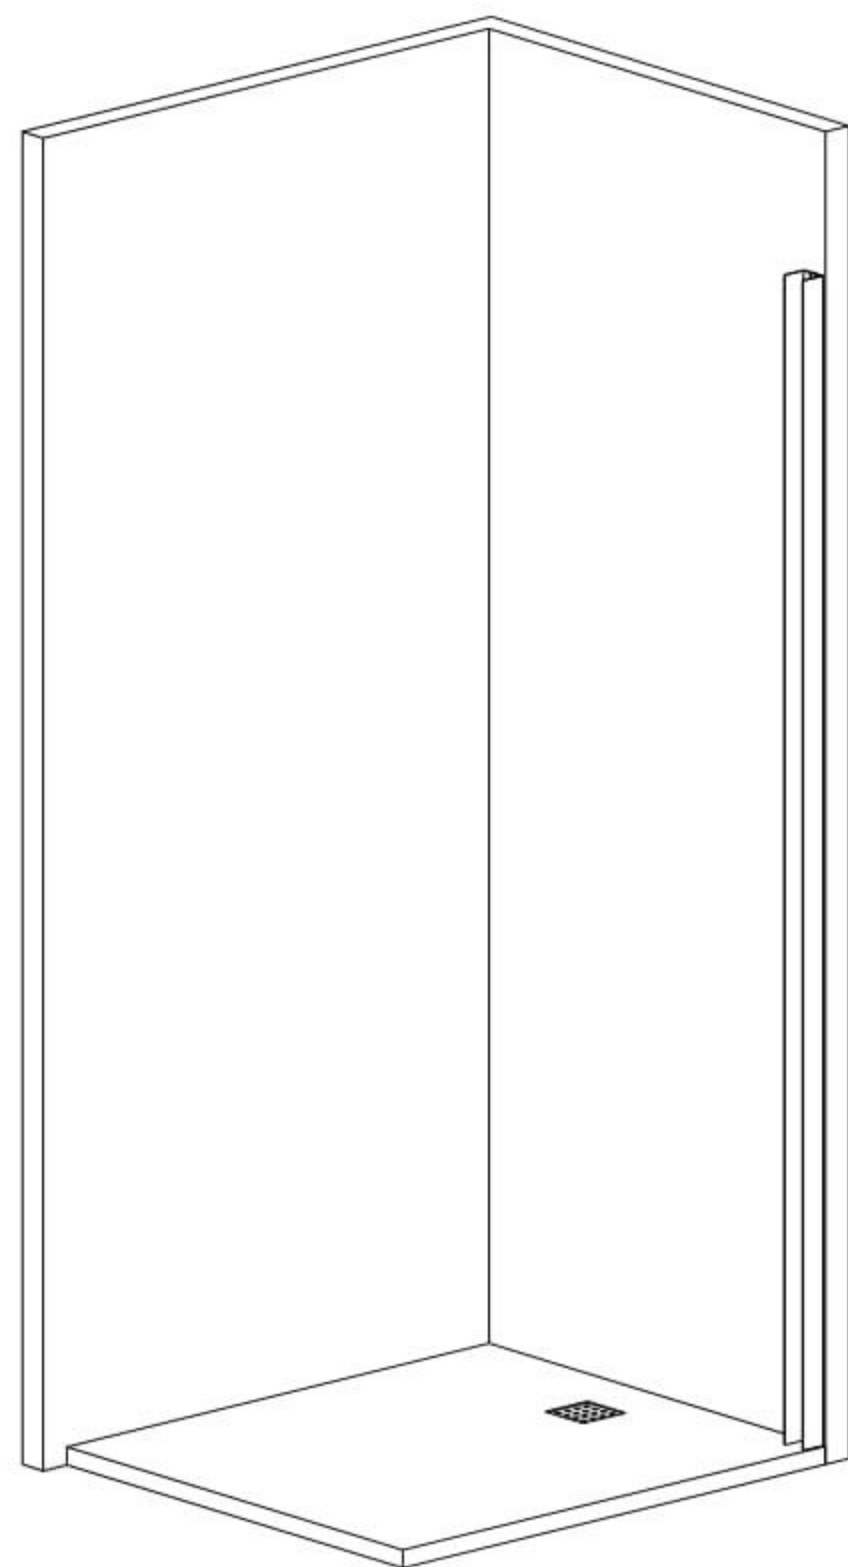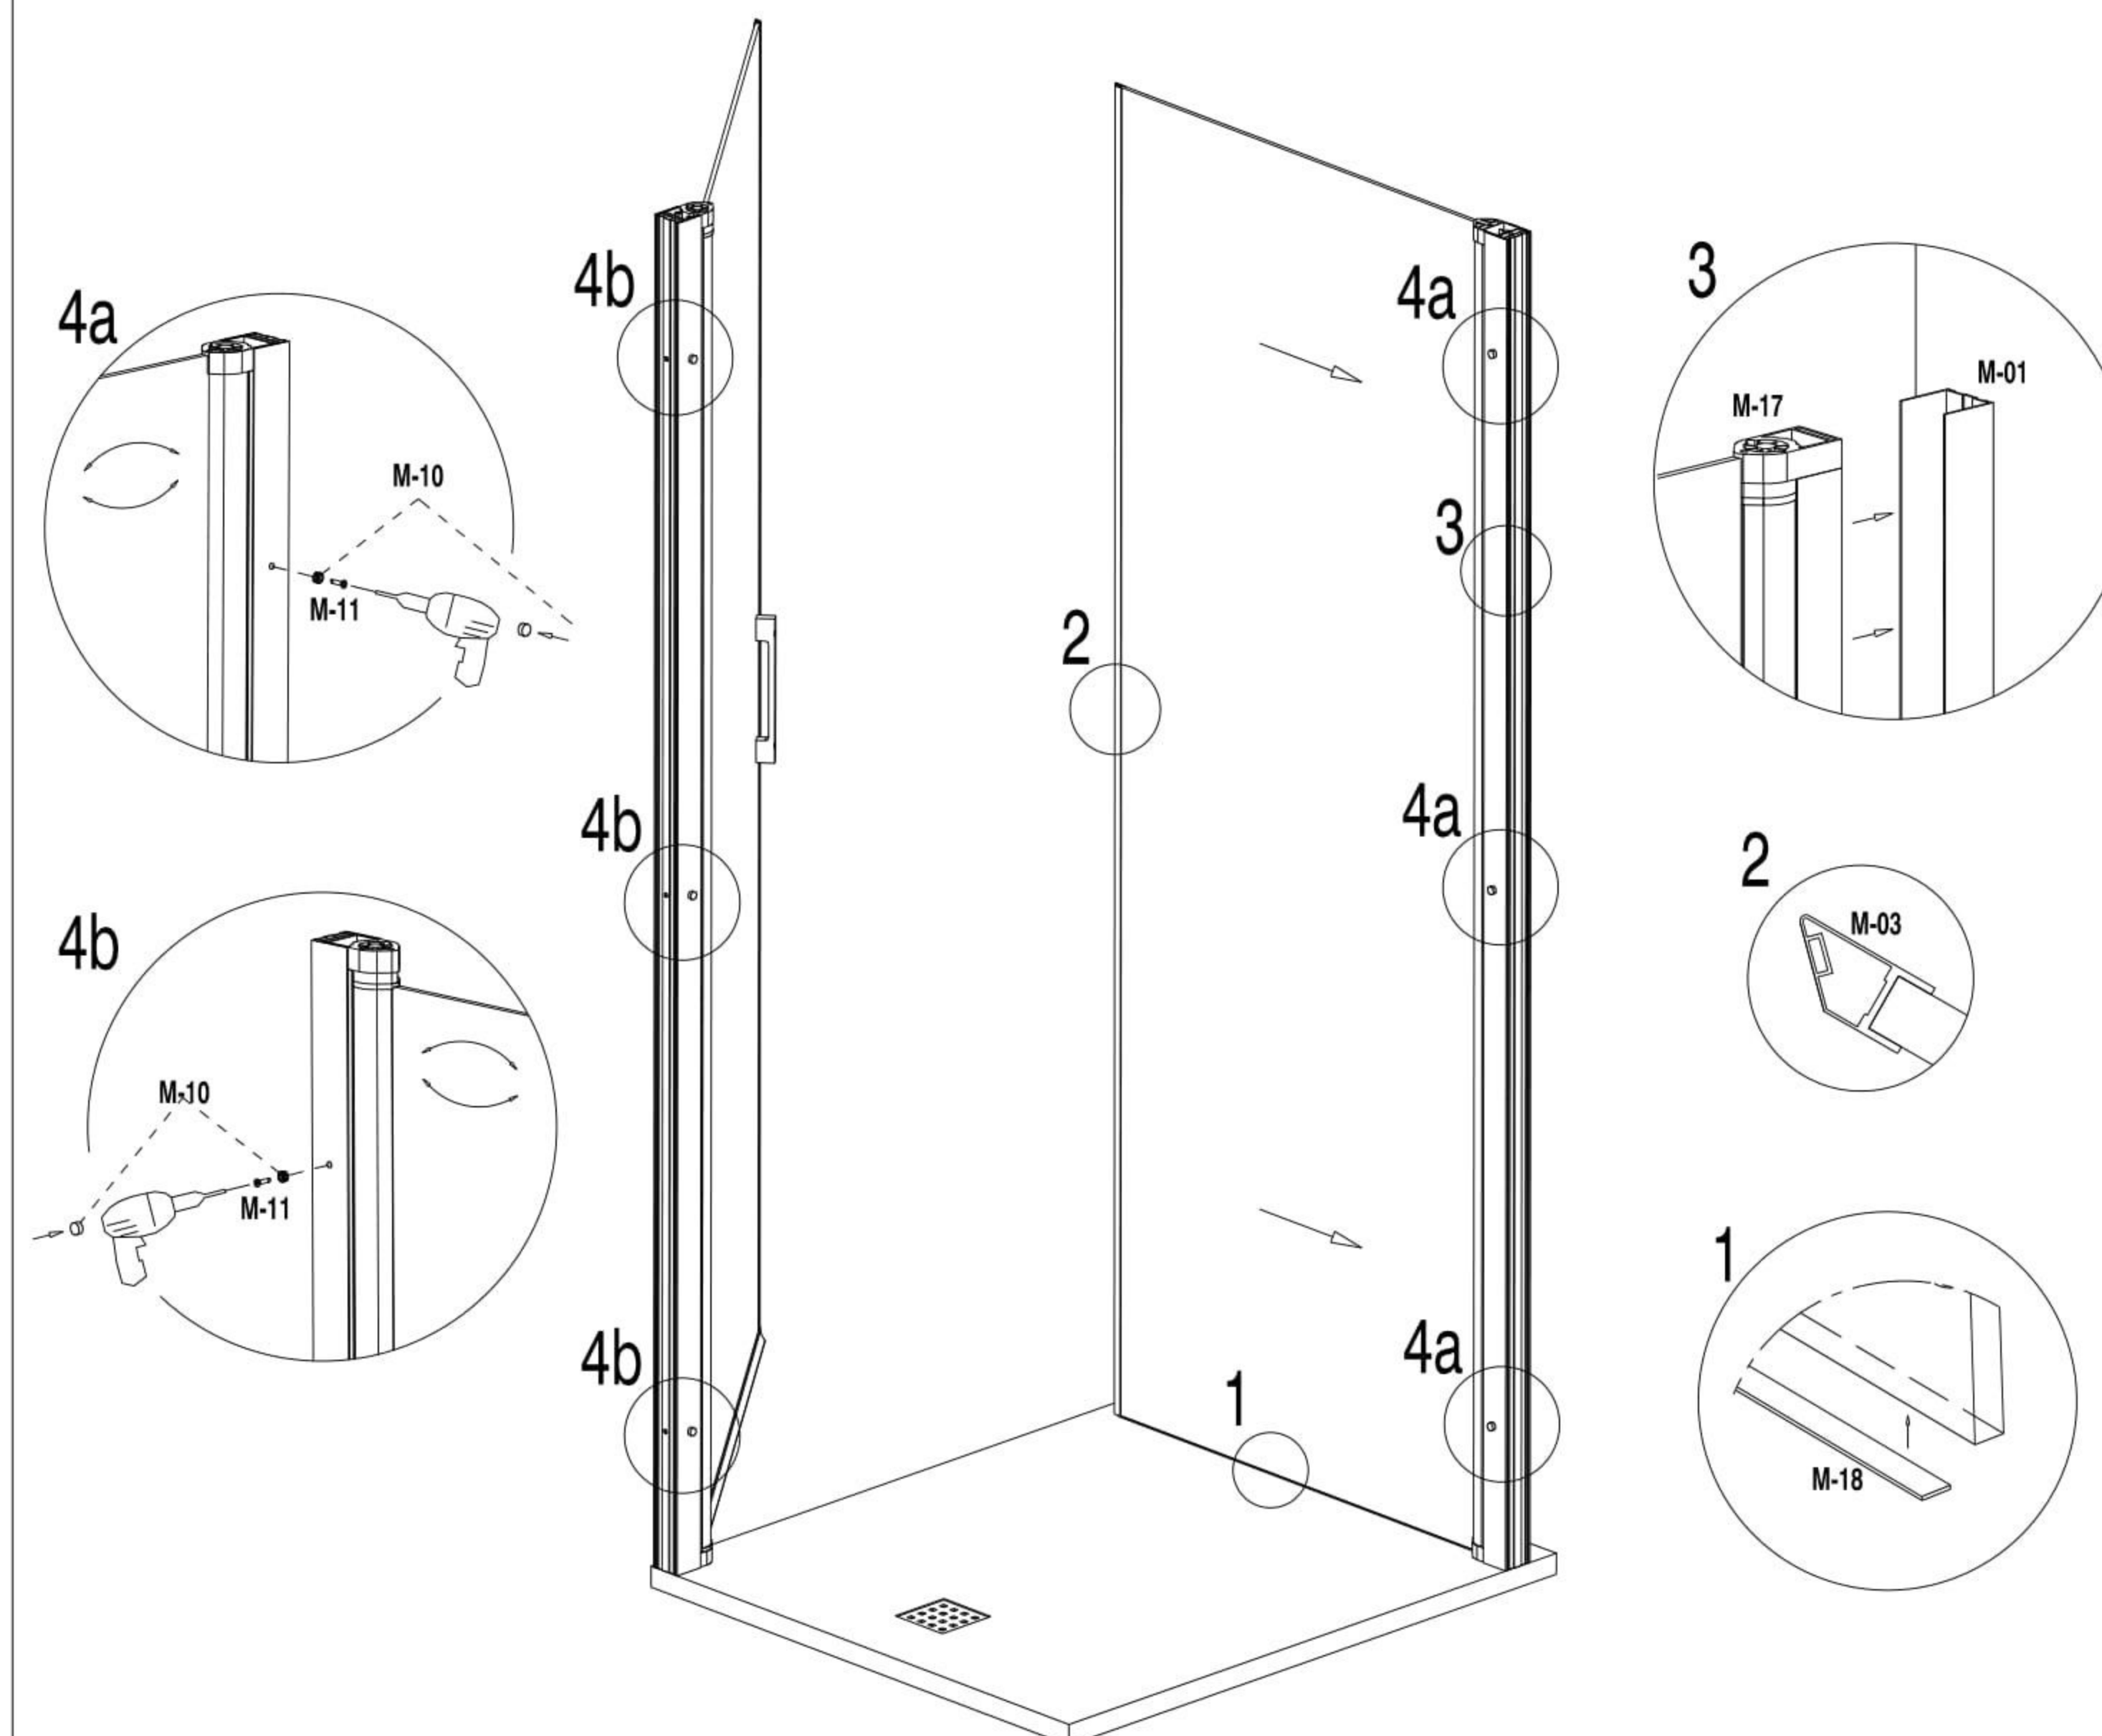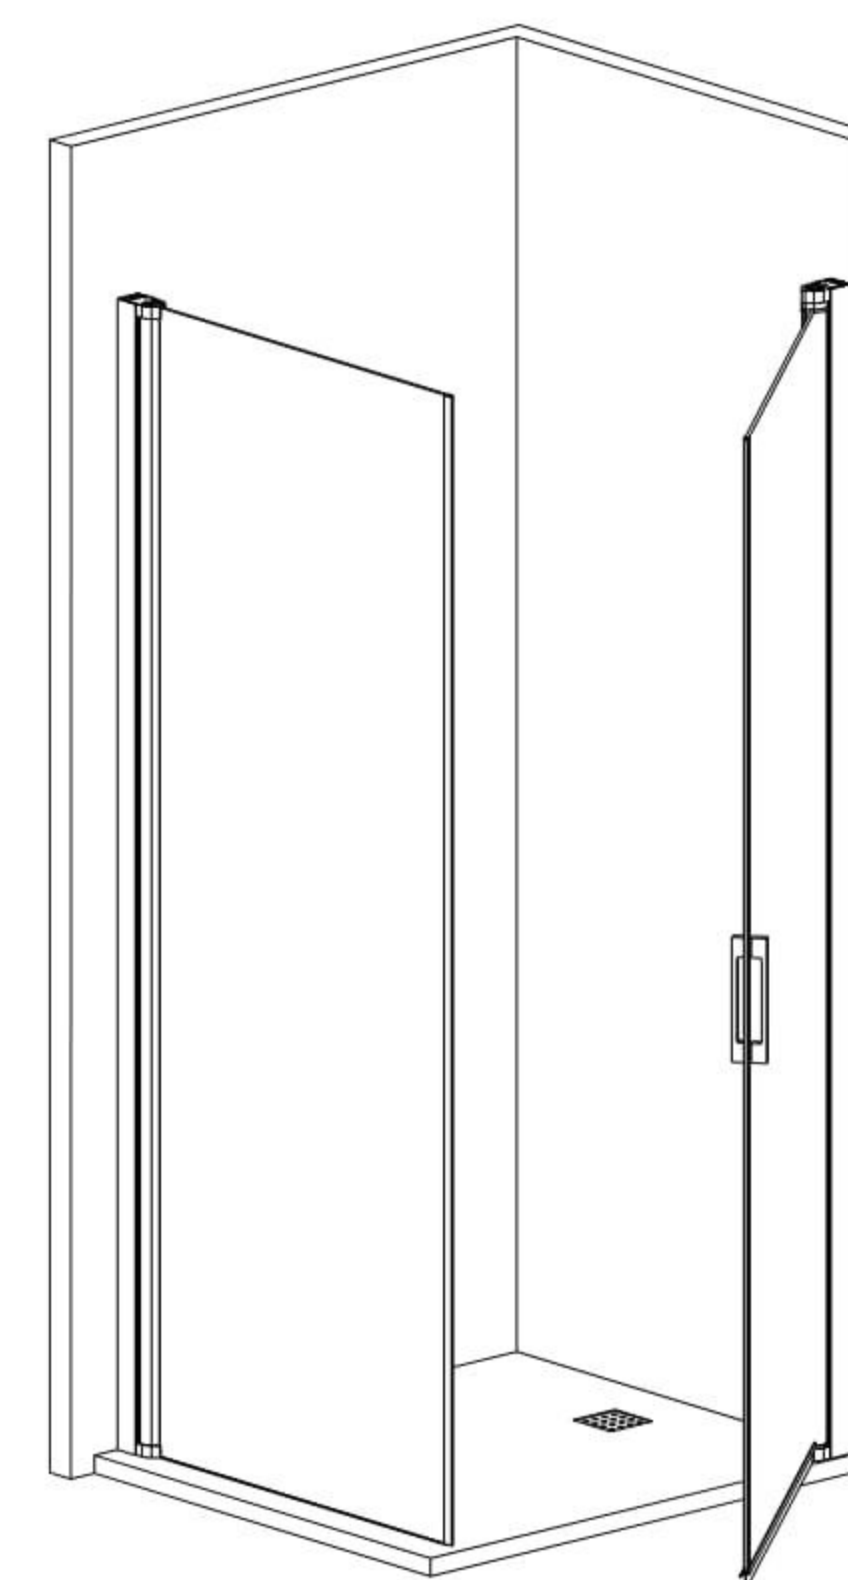
A**B****B**

B

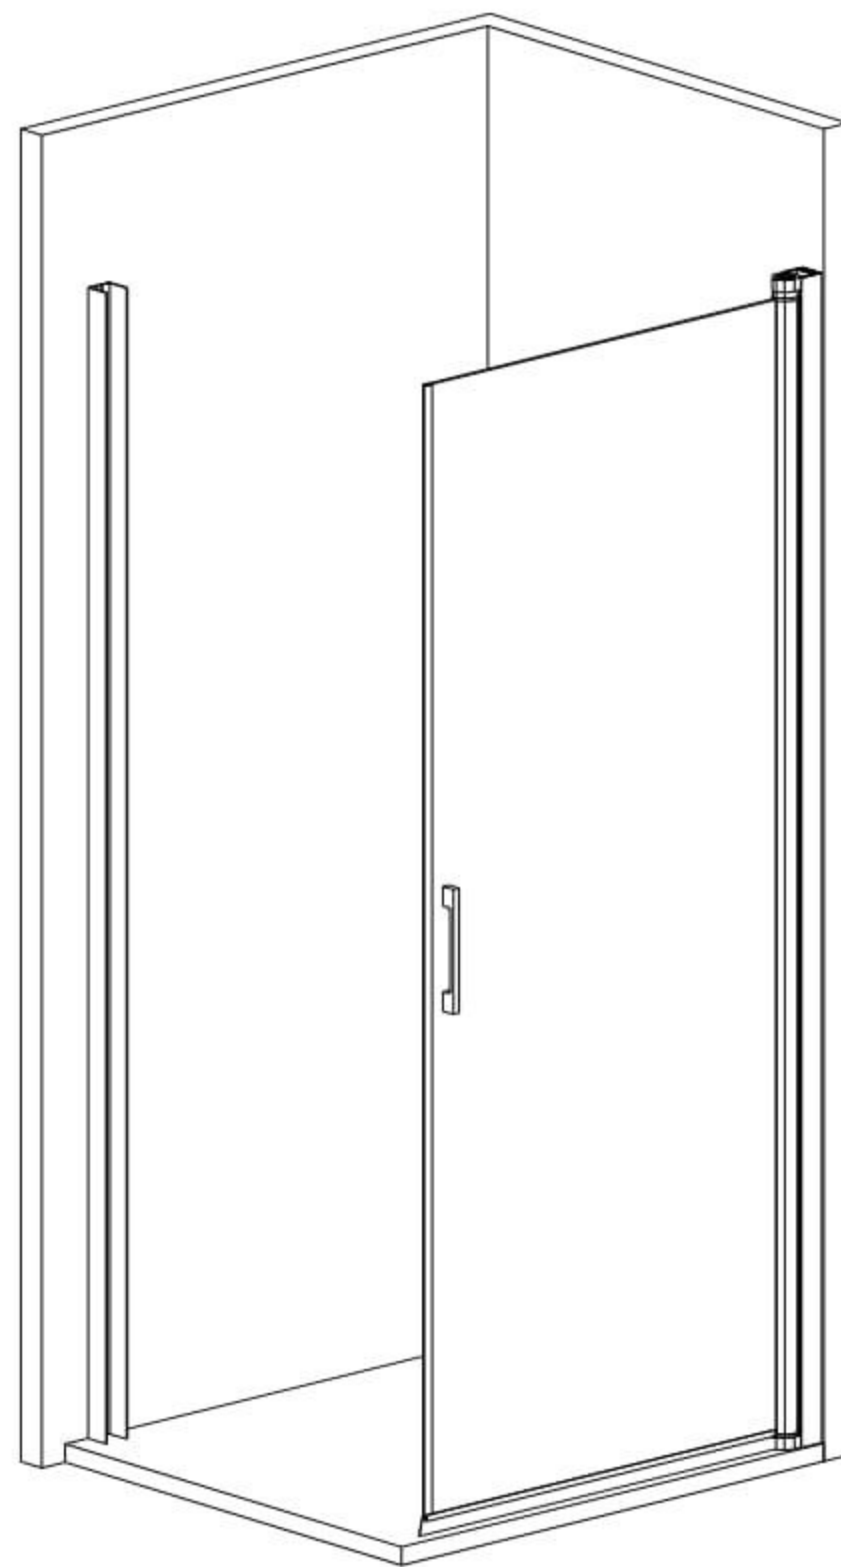

1

M-01

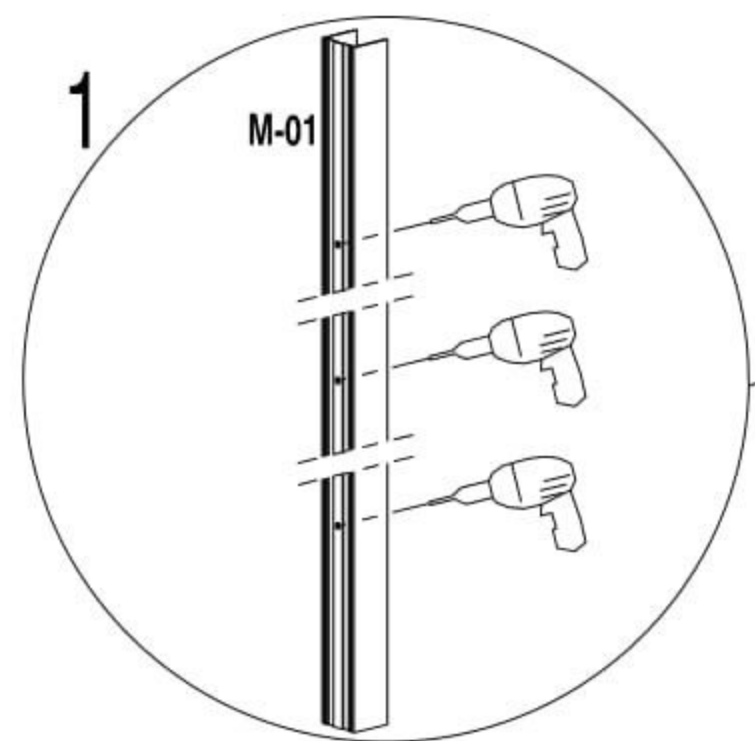

M-09

M-08

M-01


M-09

M-08


M-09

M-08


2

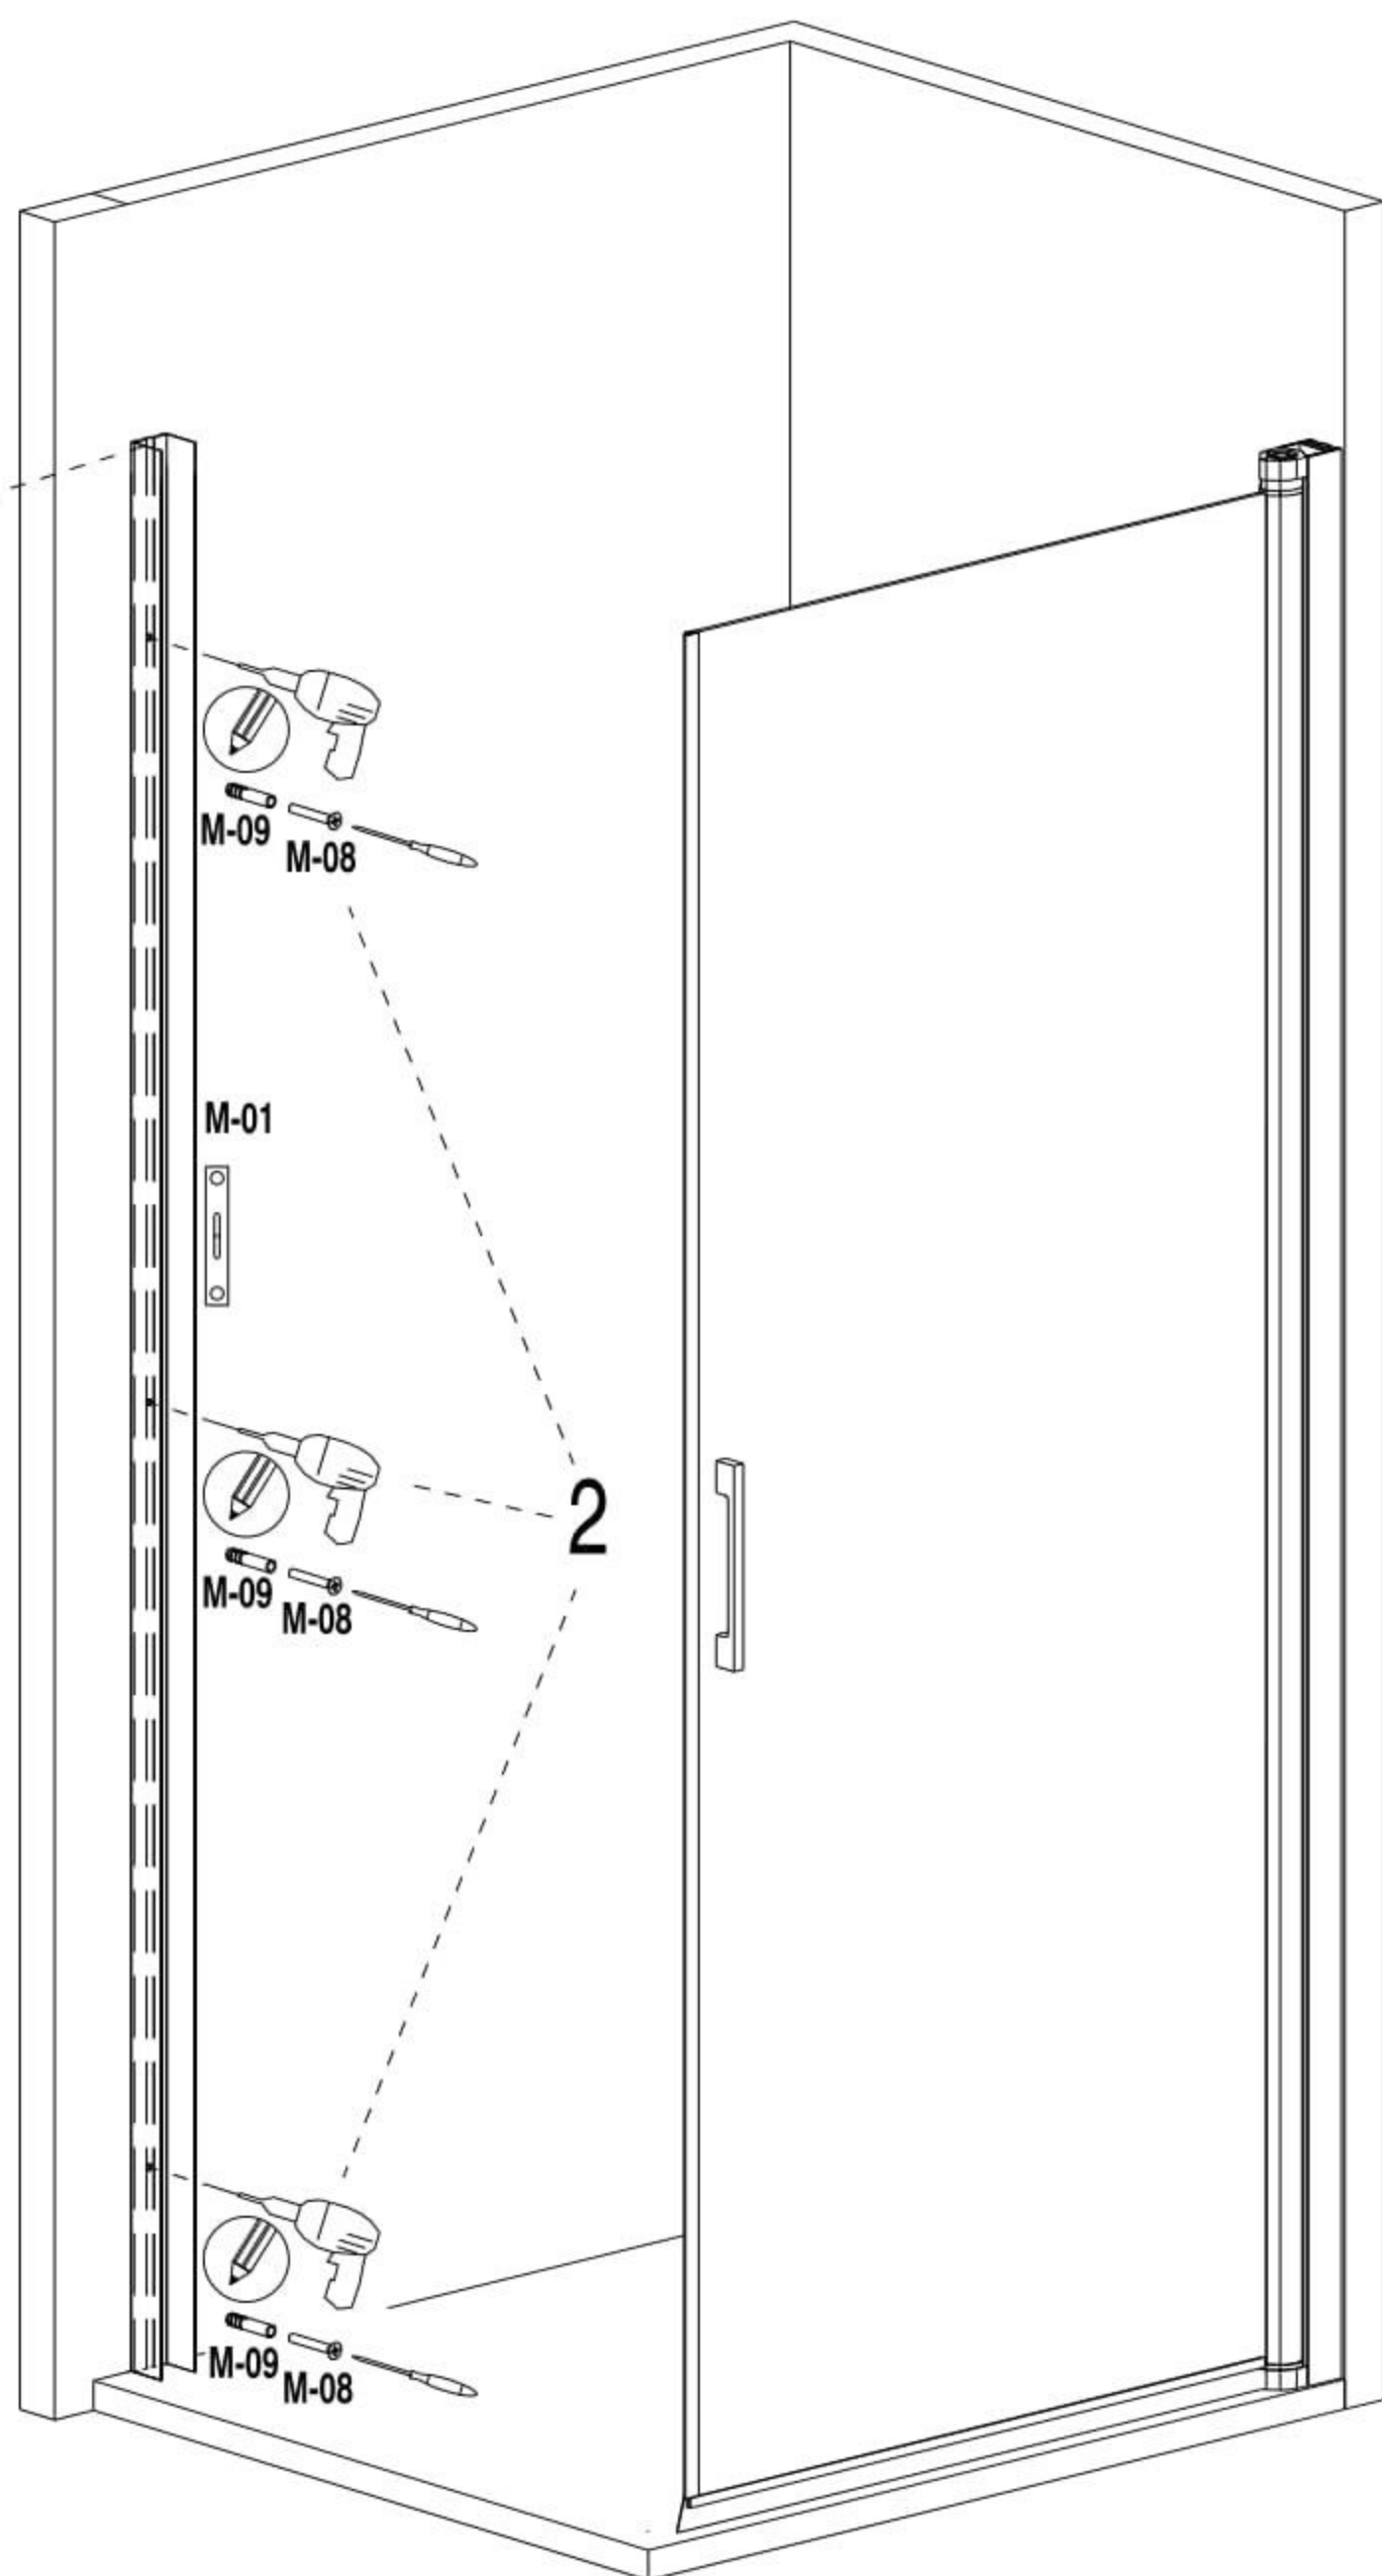

A

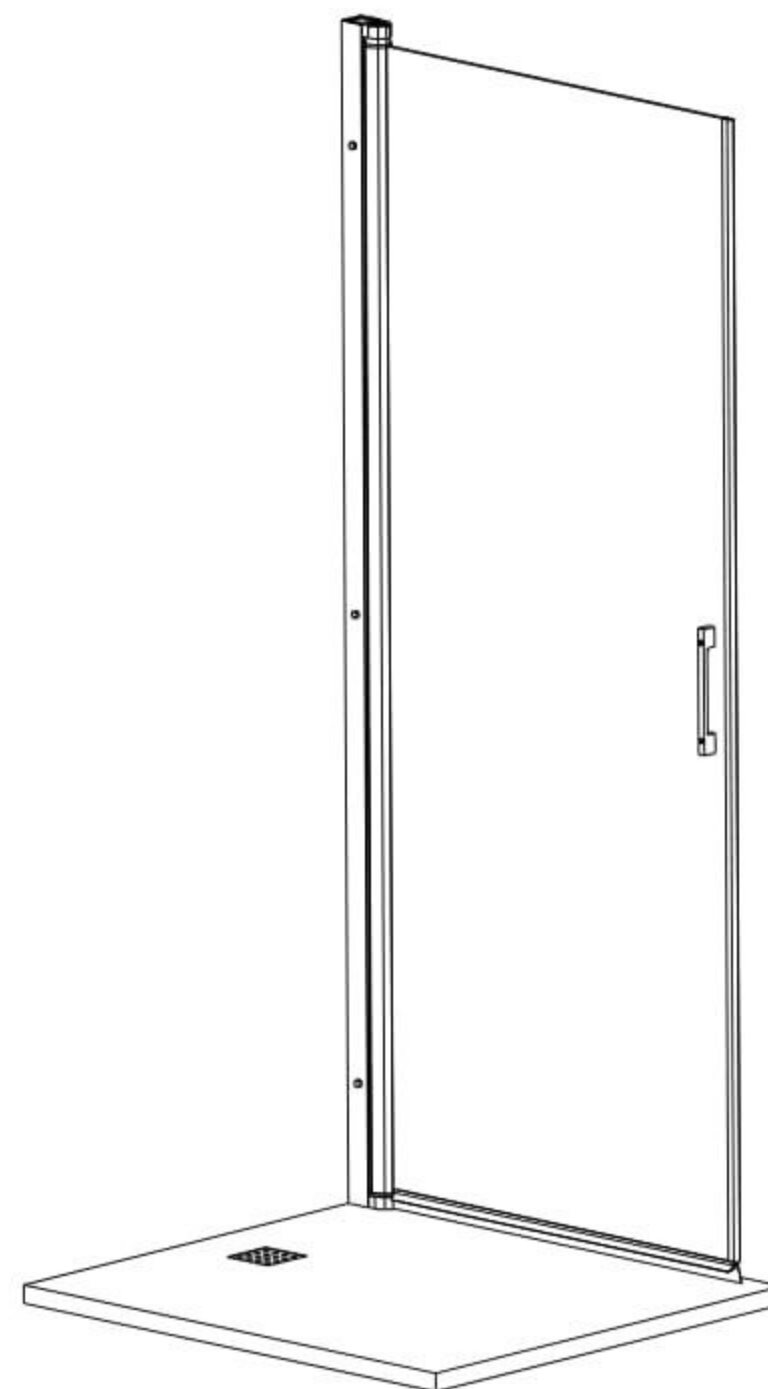


B

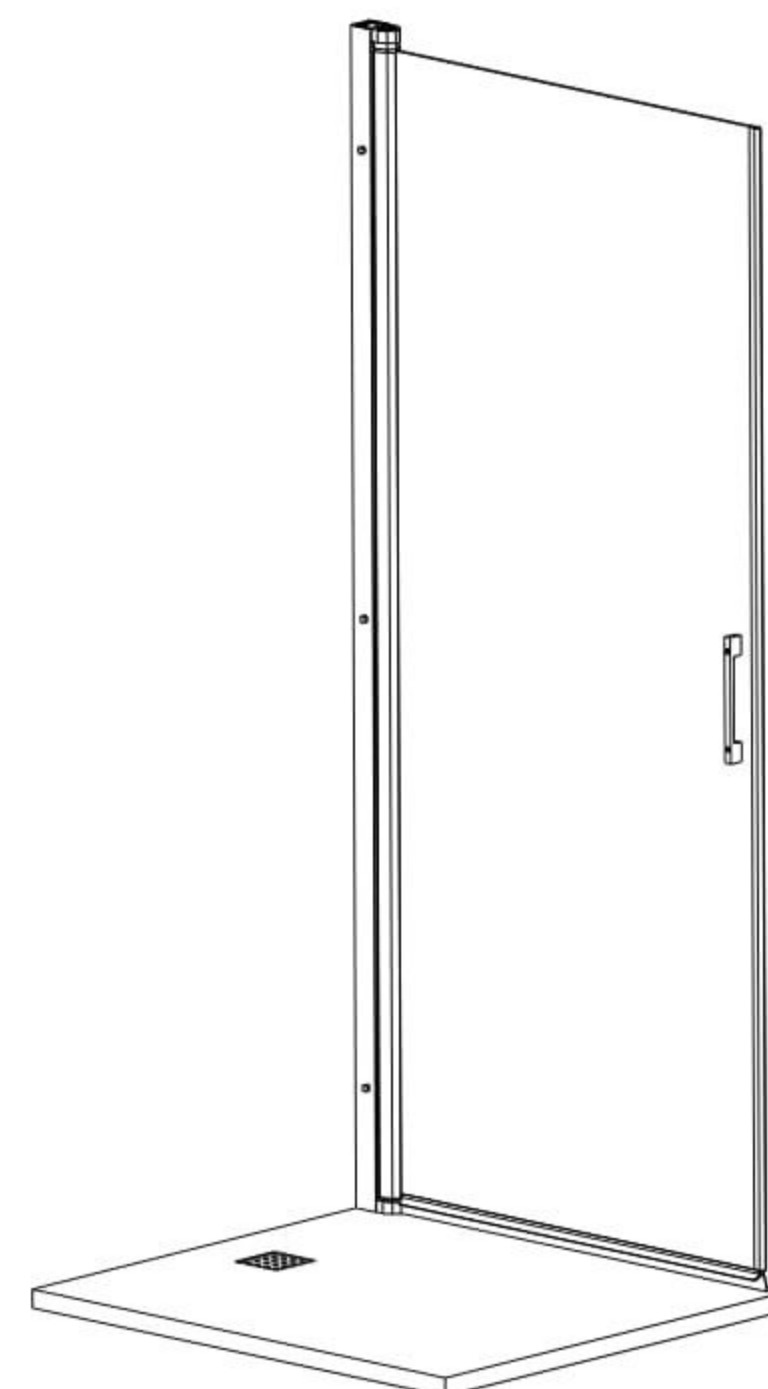

1

M-01

M-02

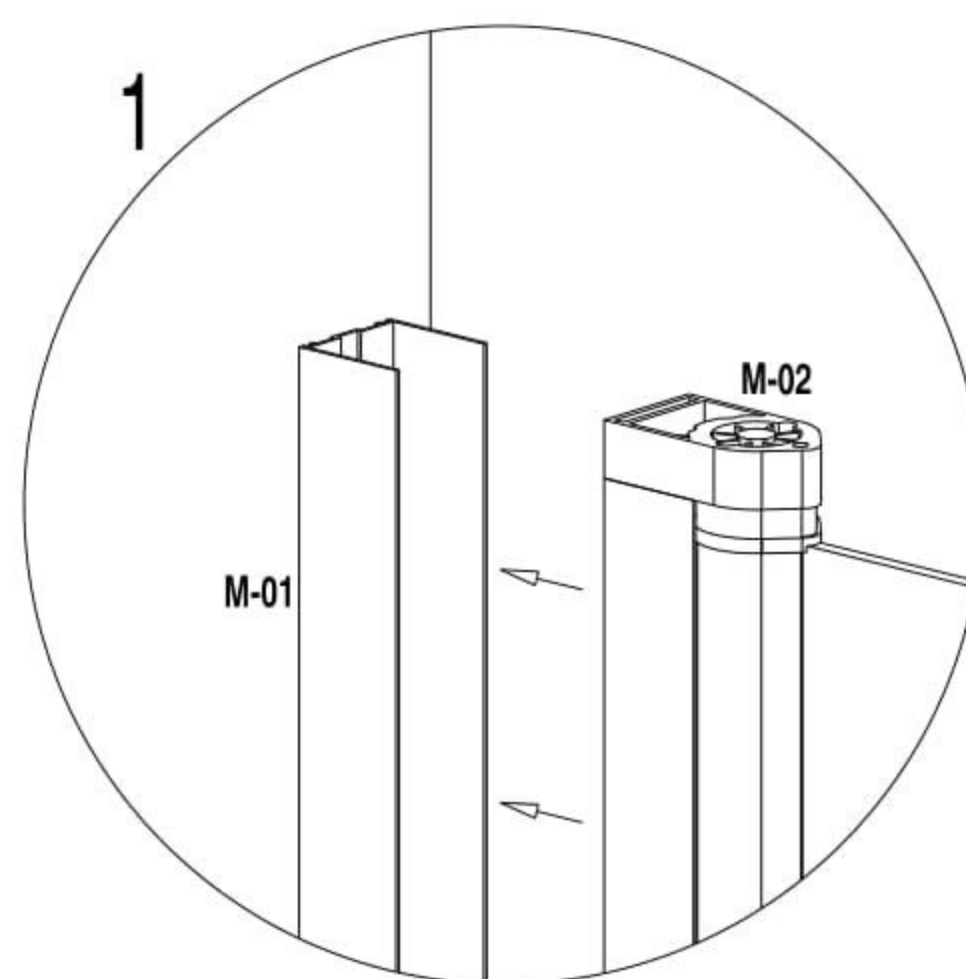

2

M-03


3

M-07



M-07

4

M-05

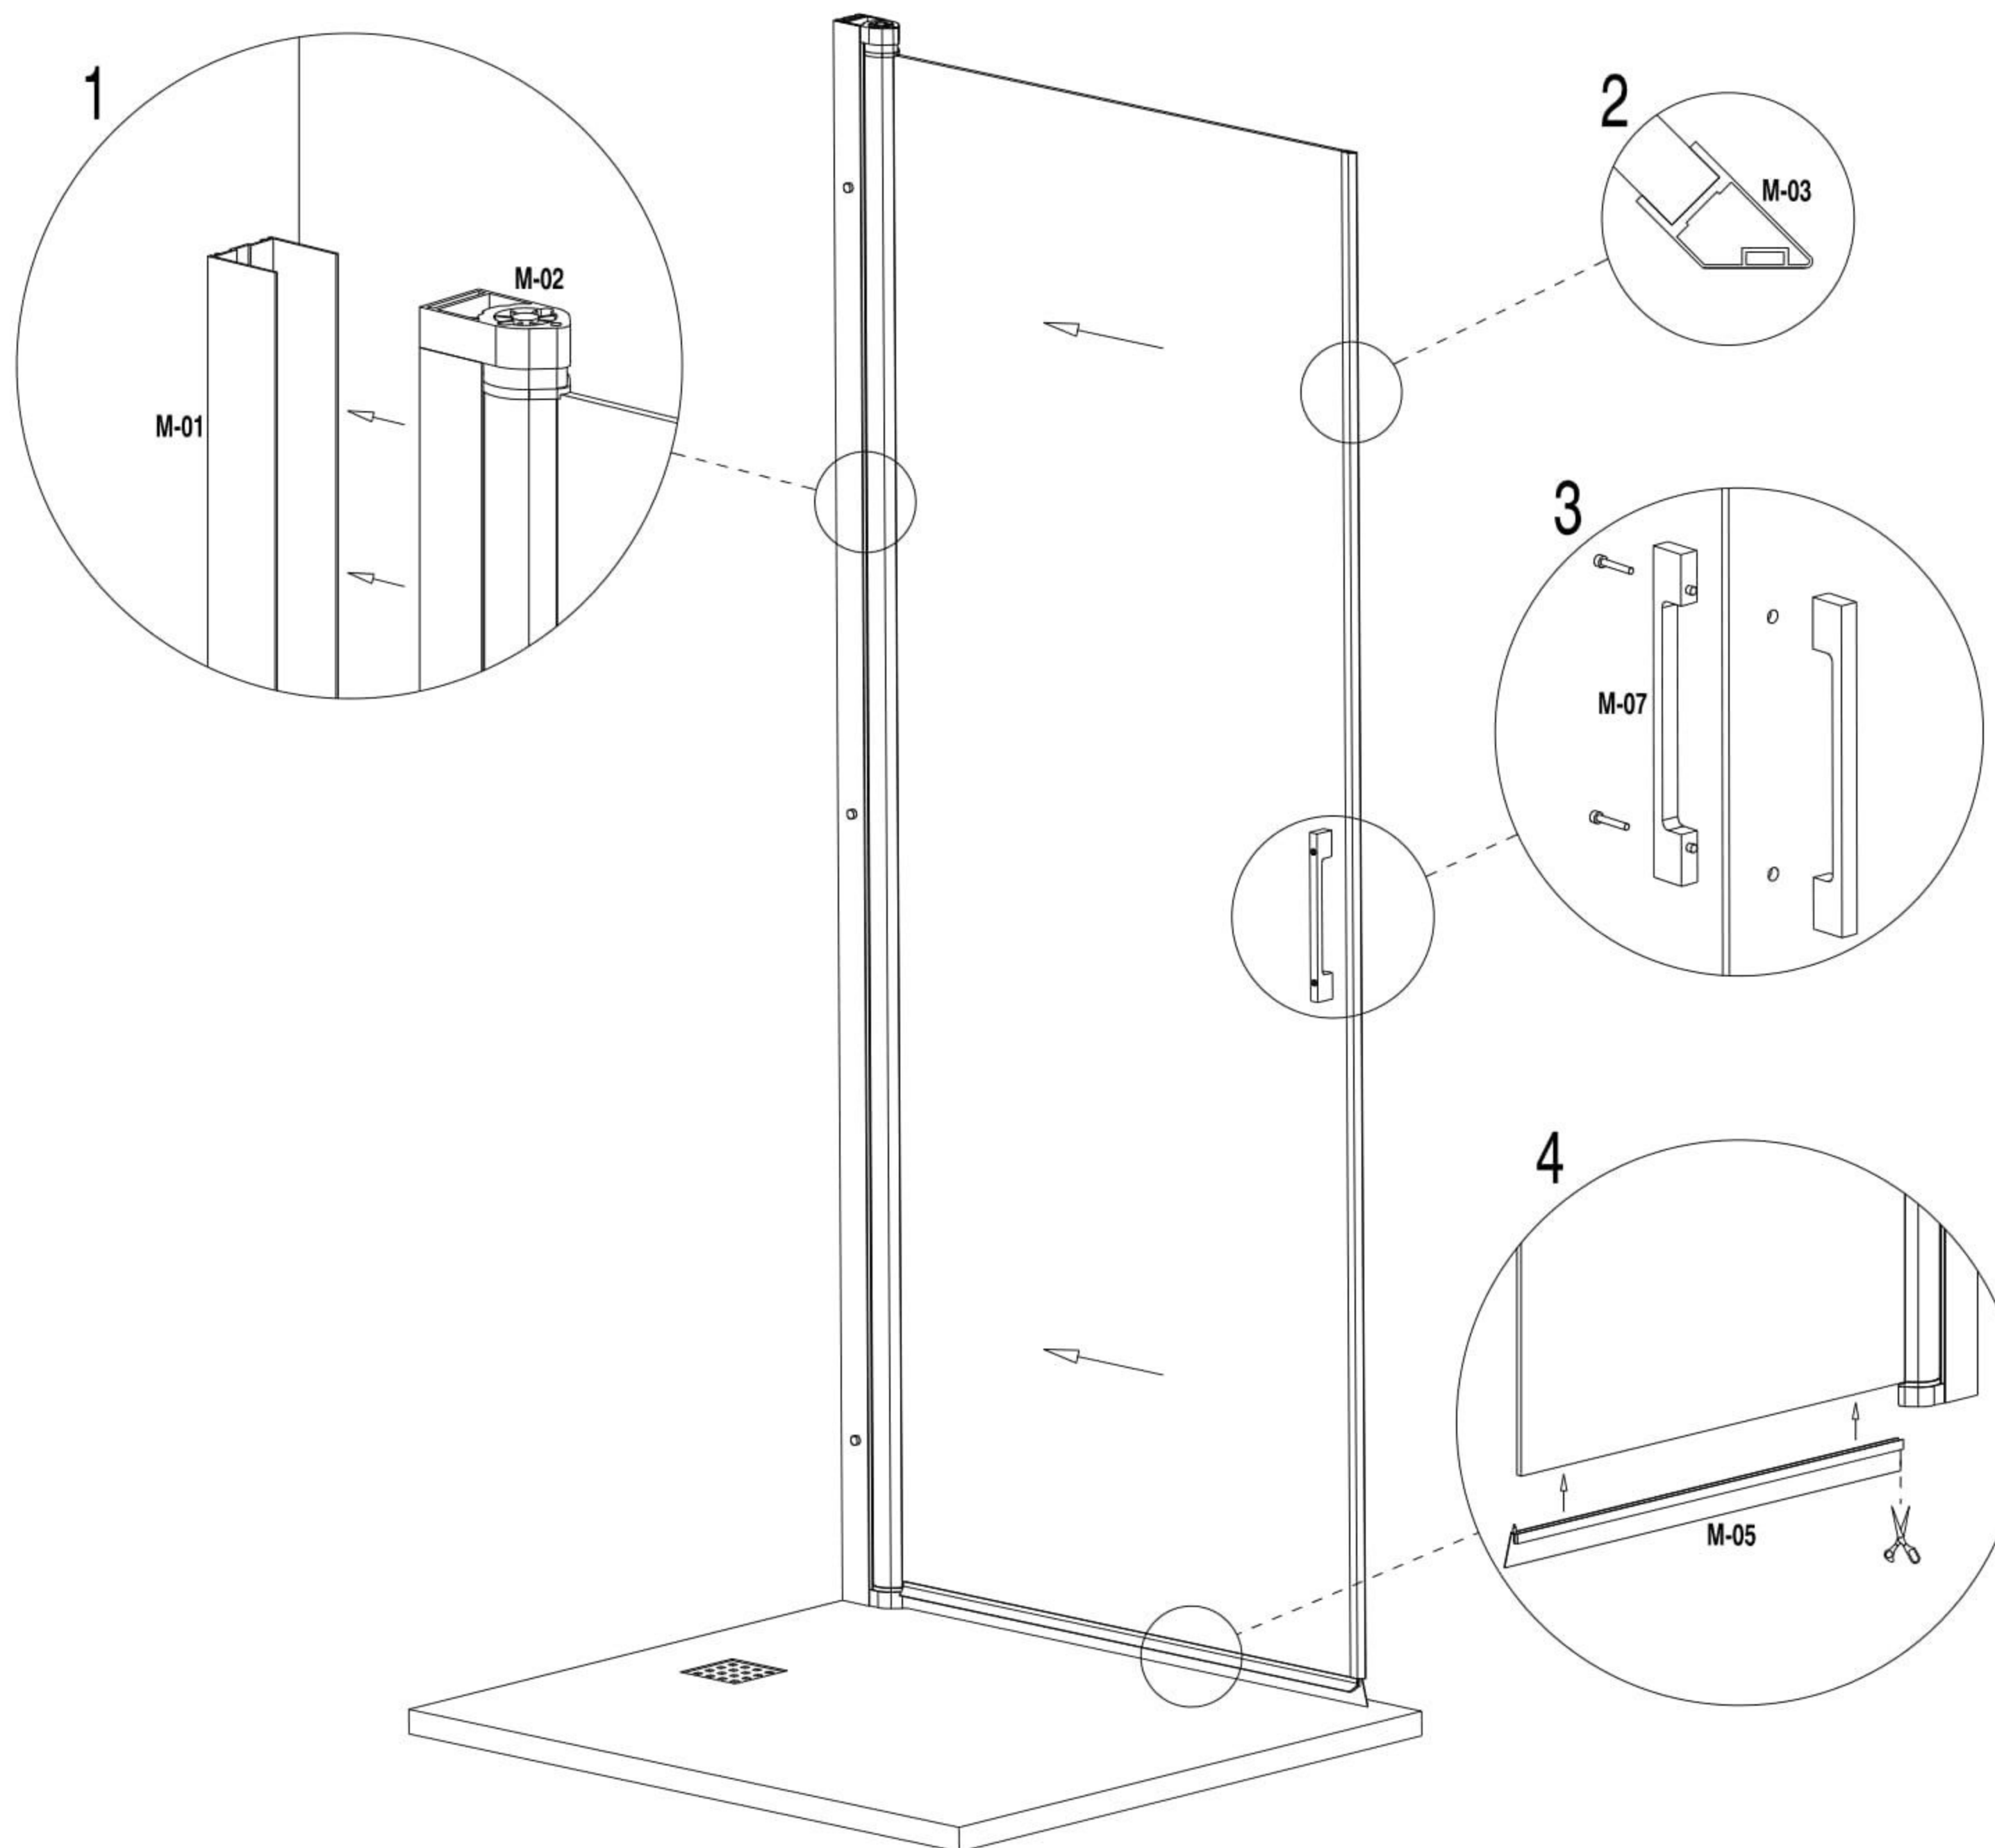

A

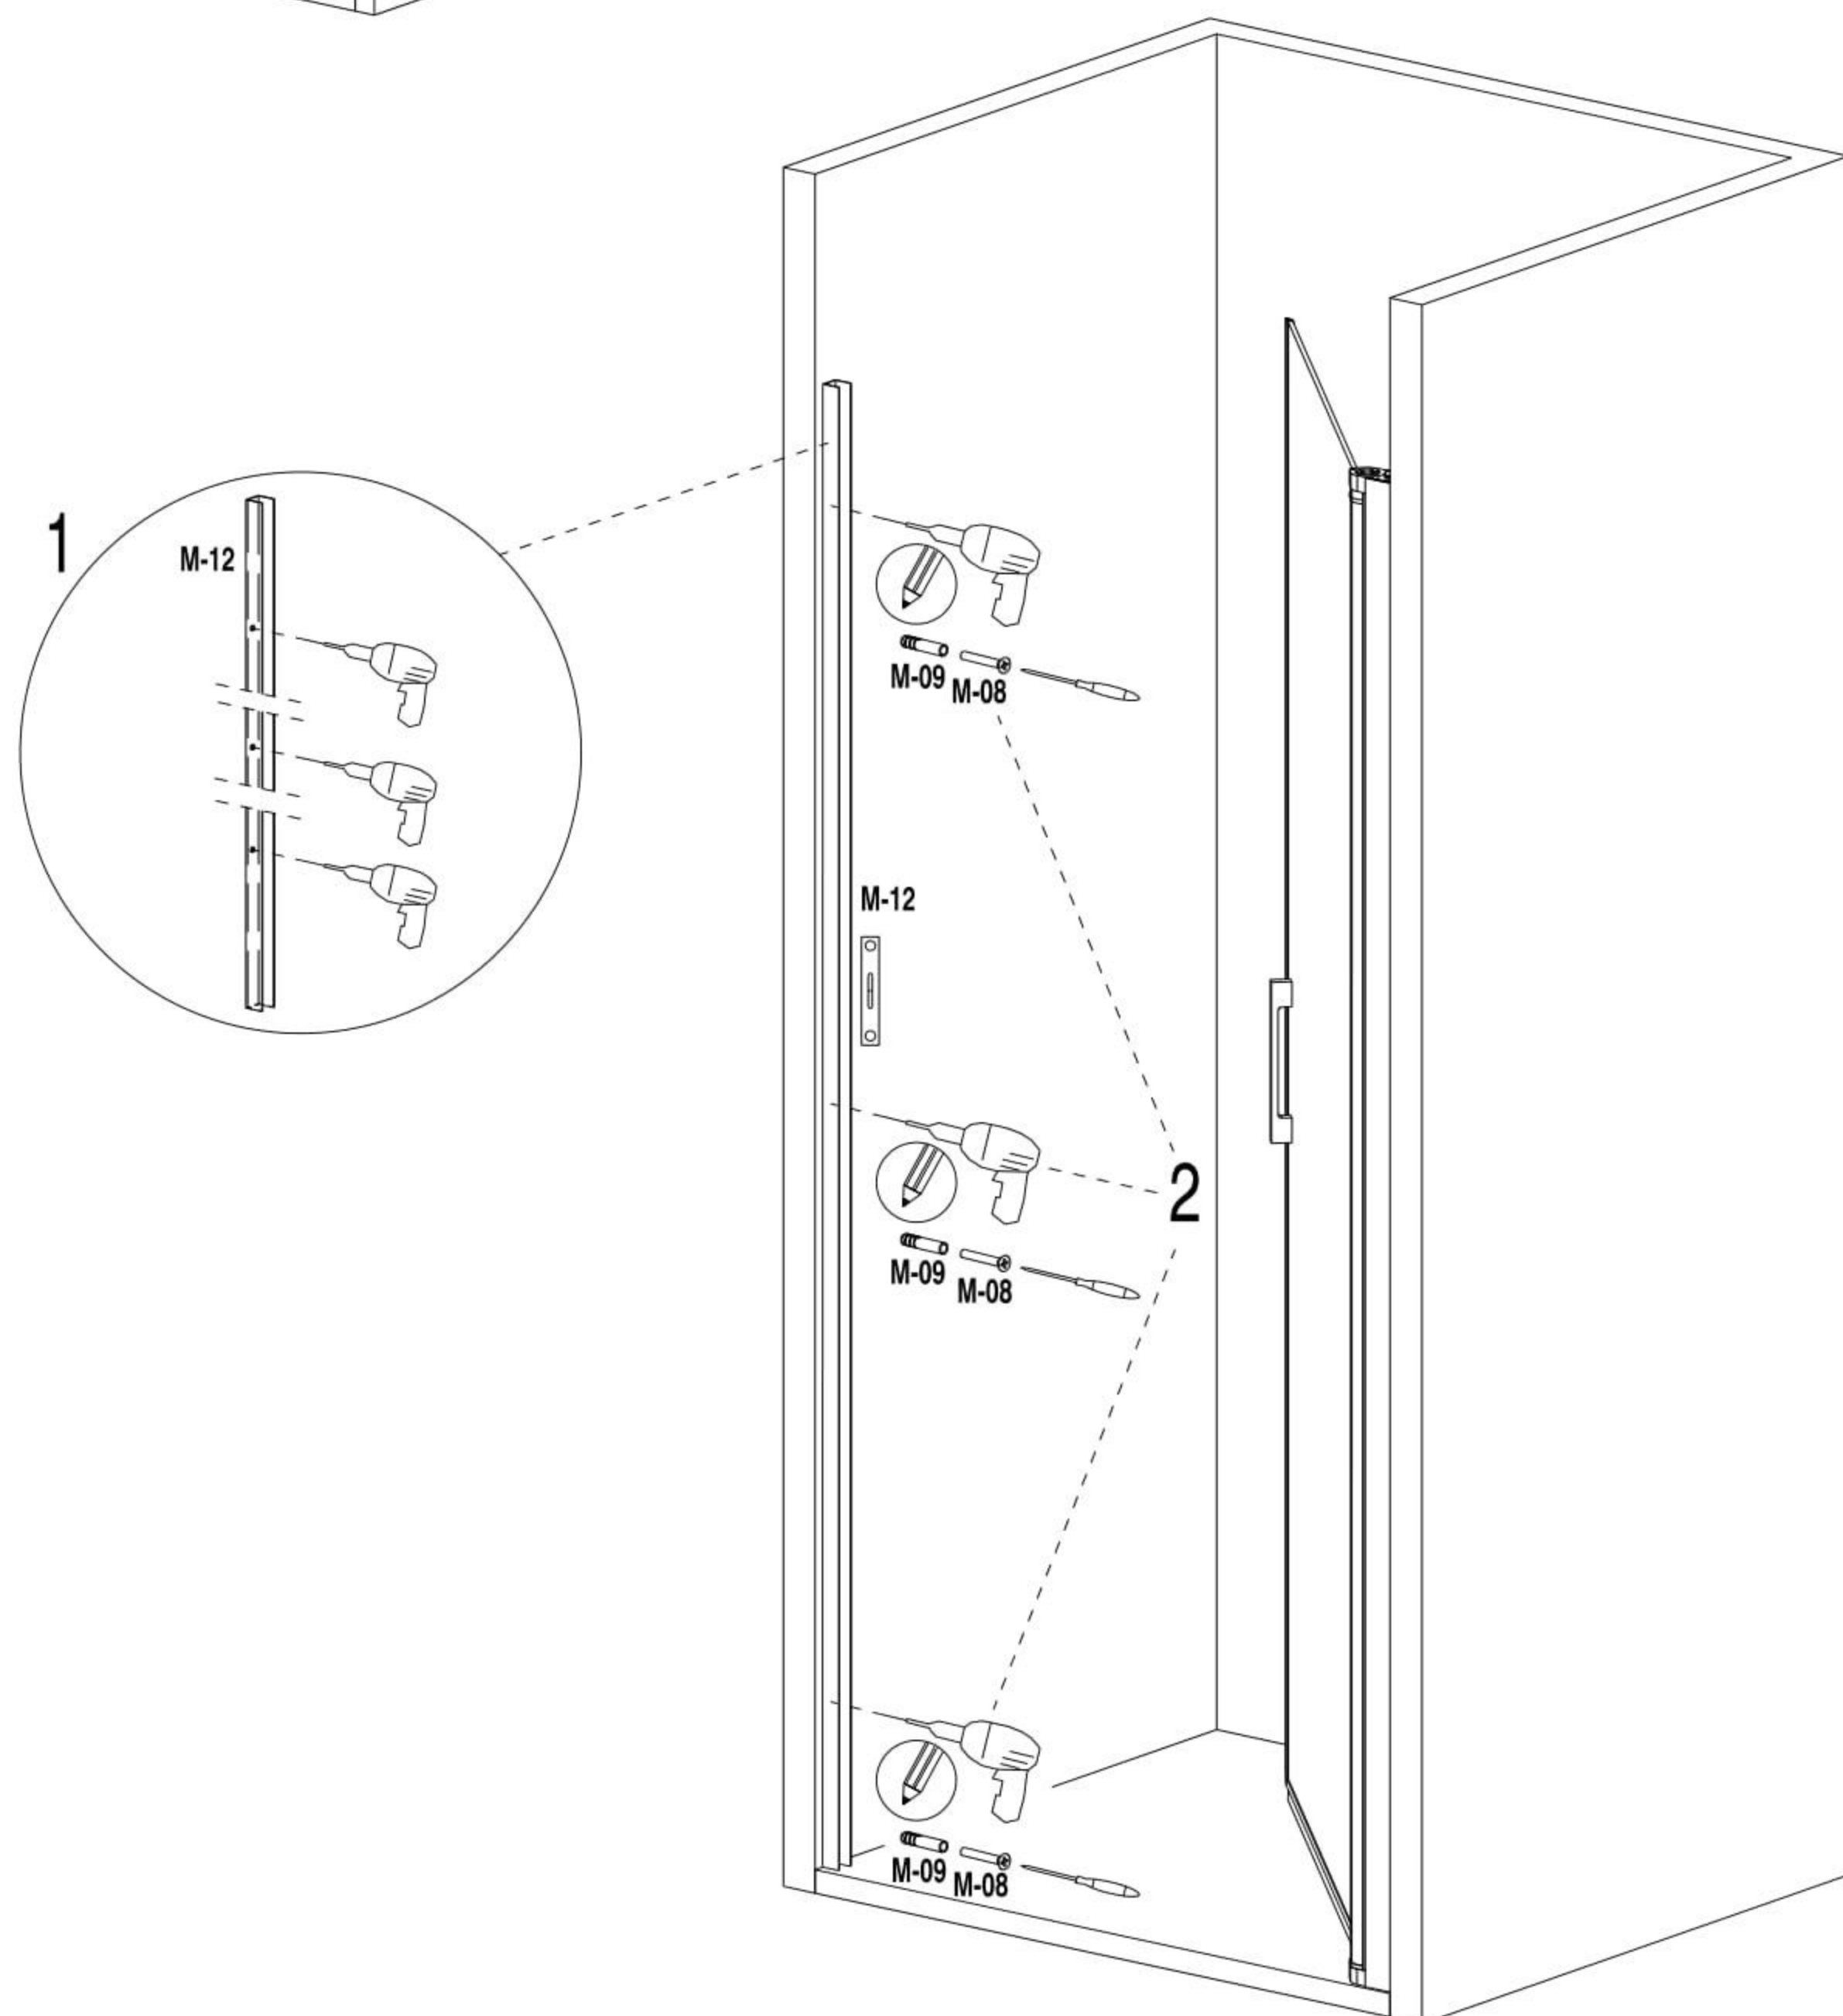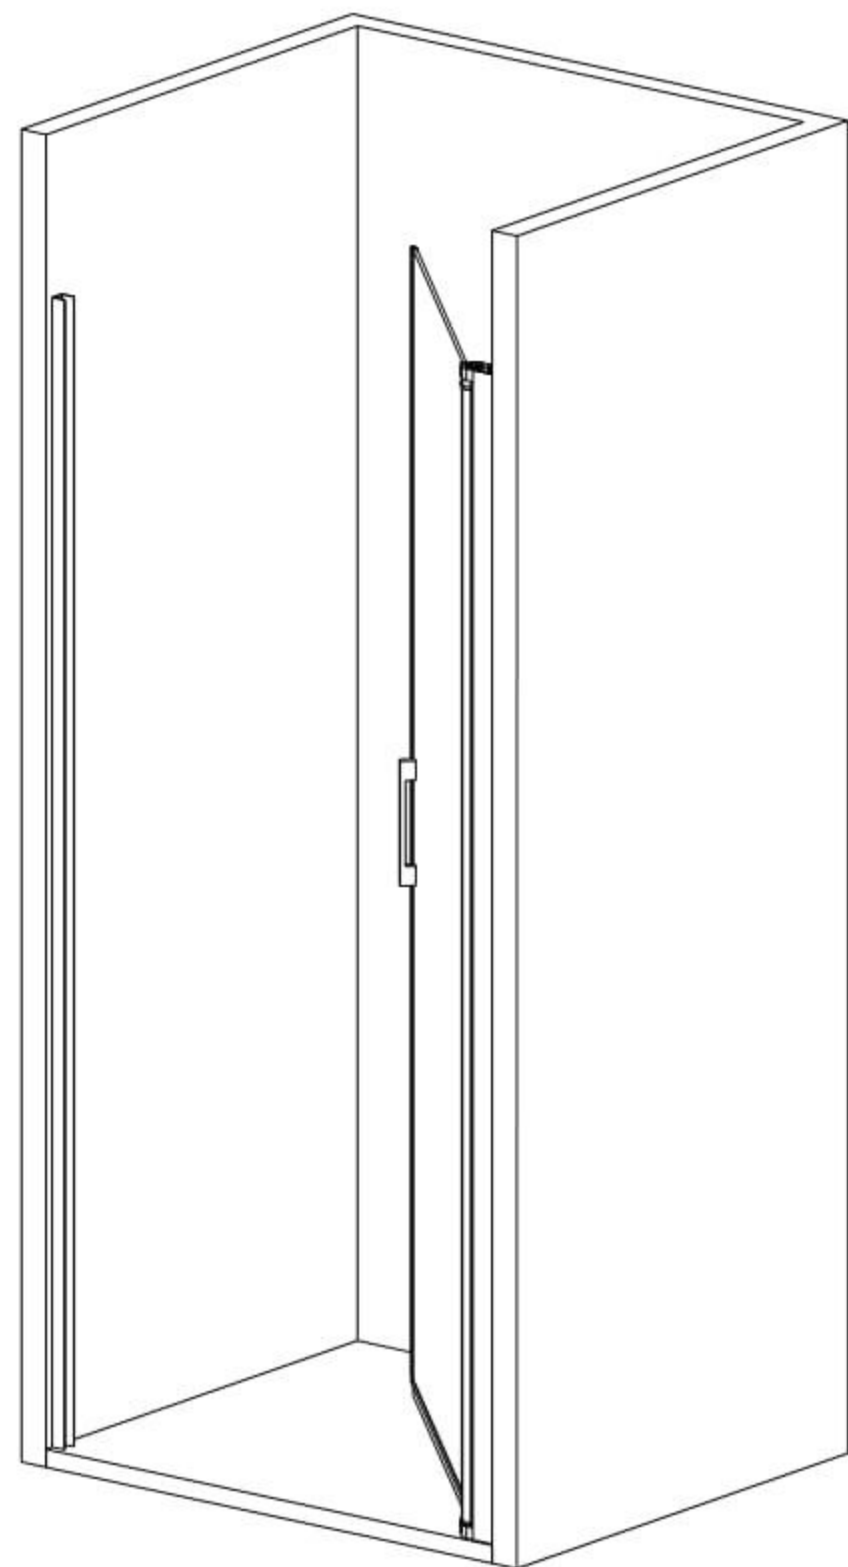

A

