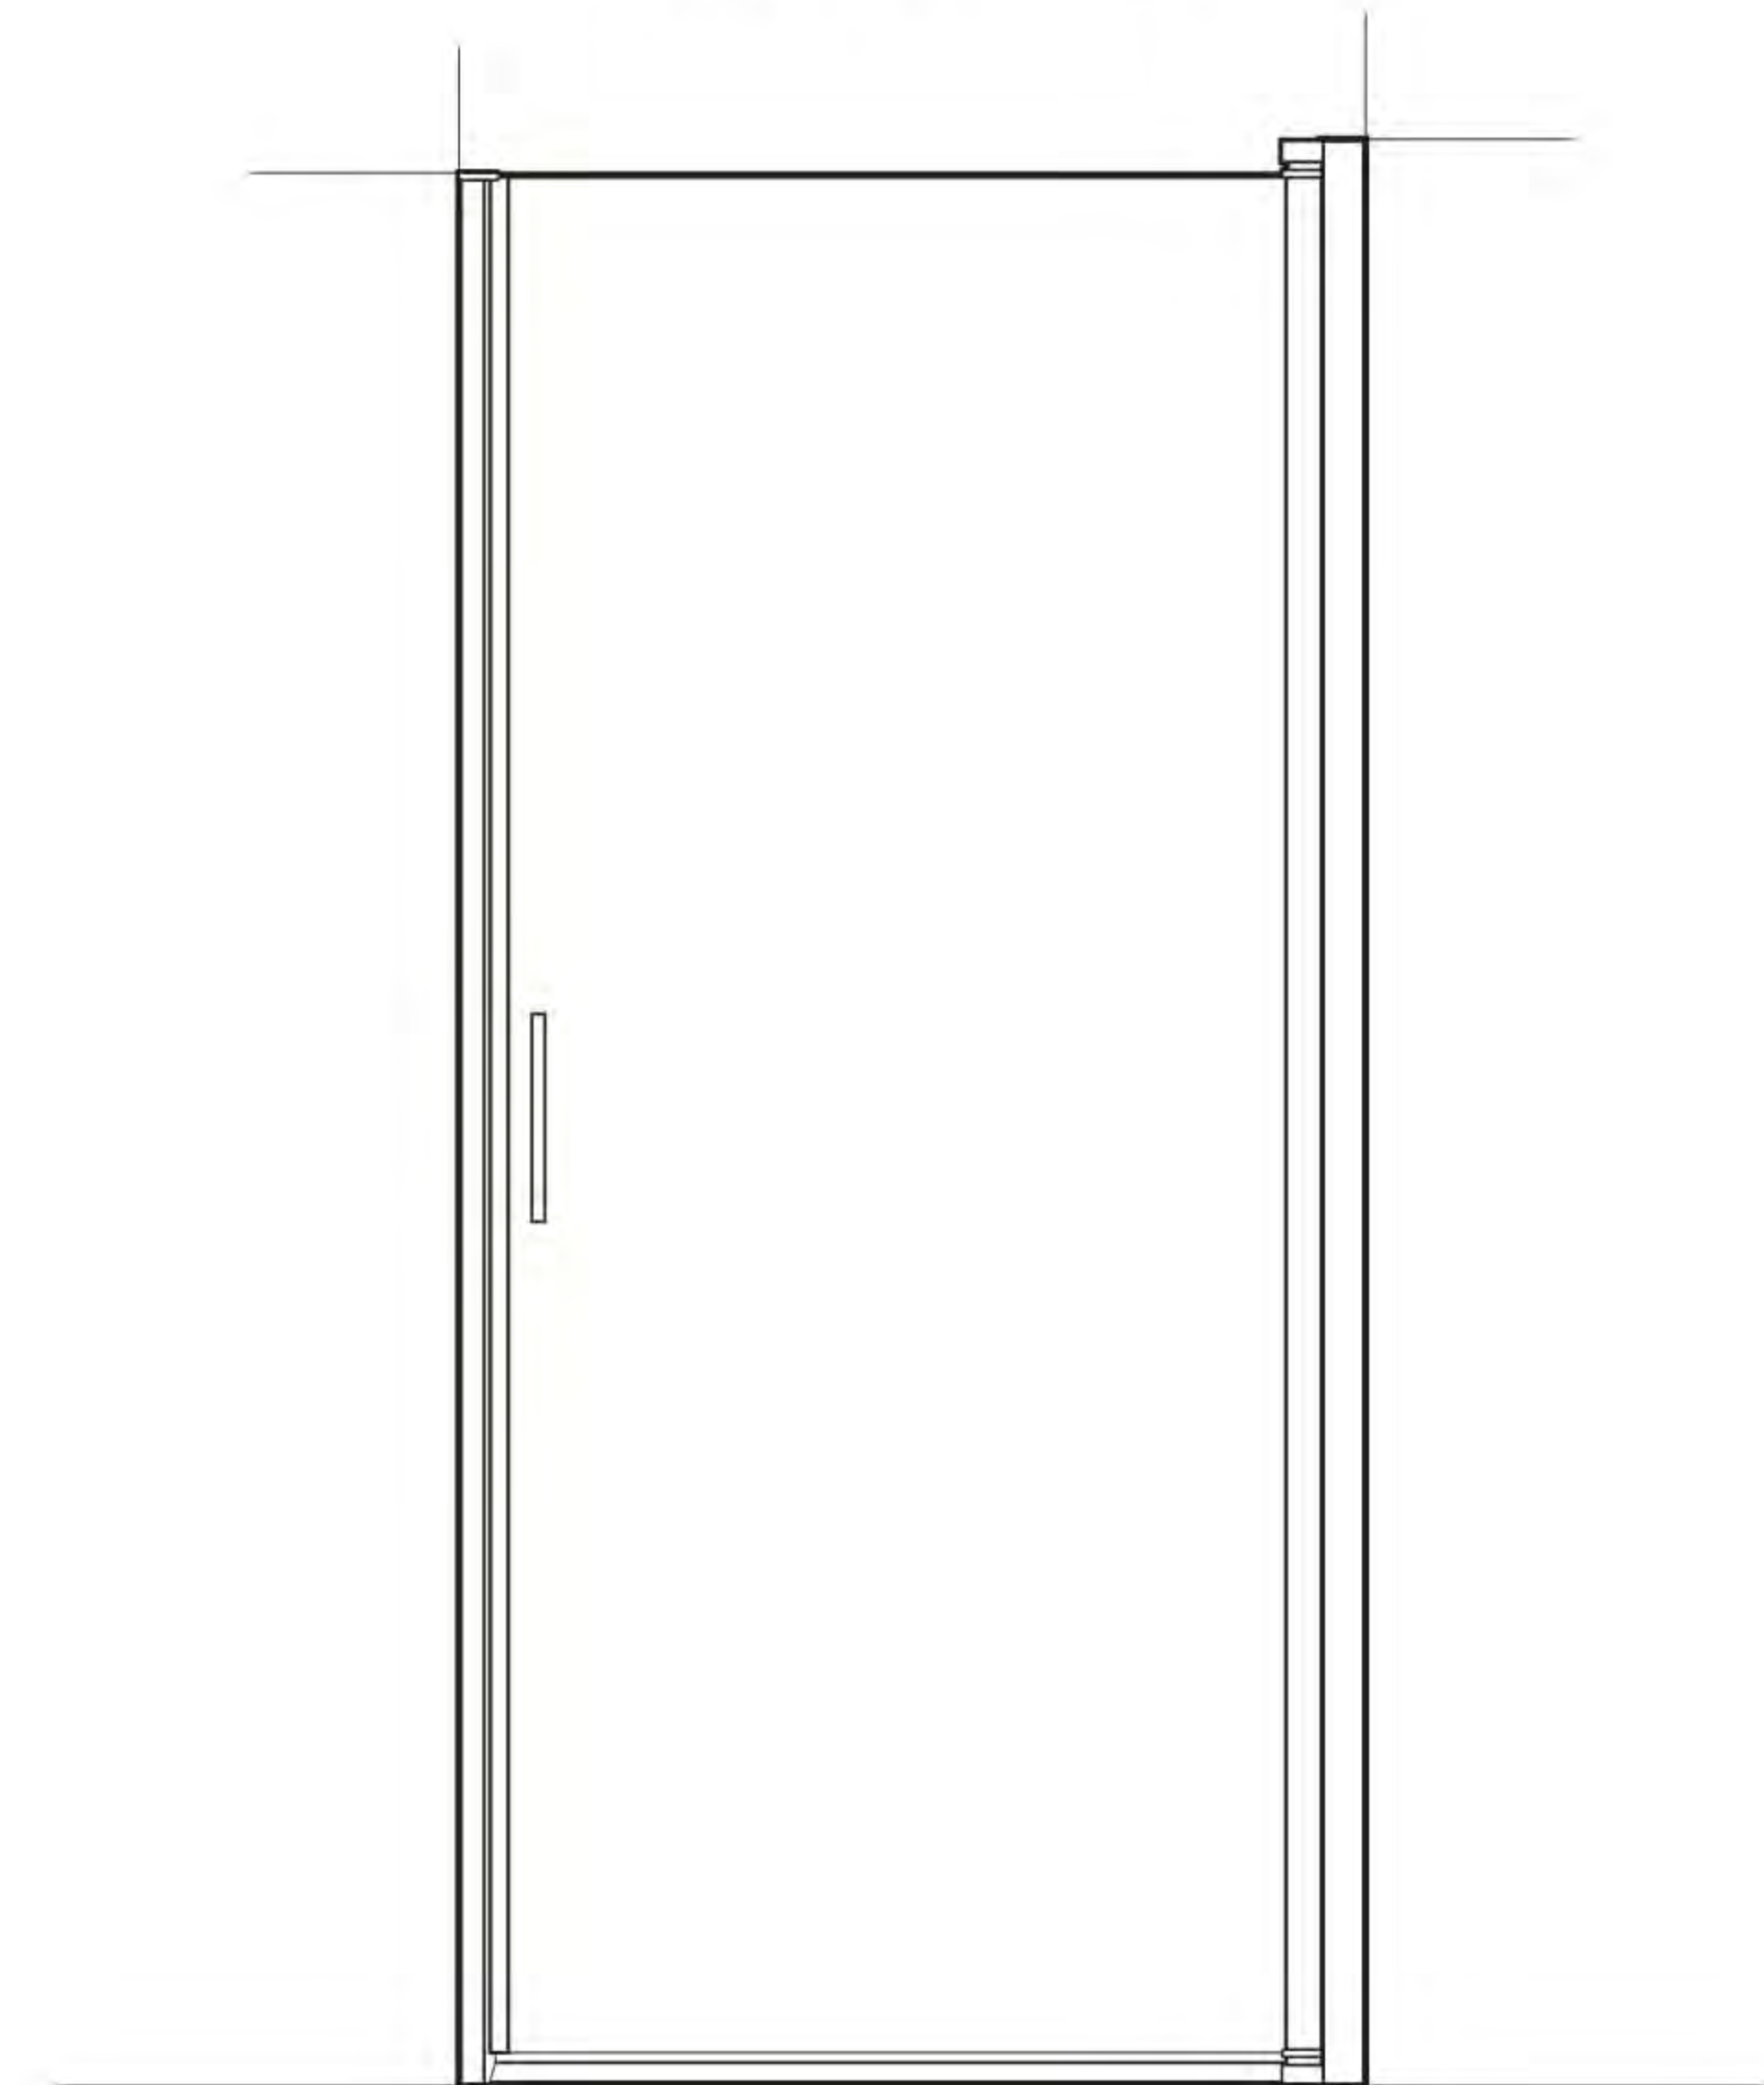




// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P19




ENERO 2018 - Rev 0.1

(ES)
(FR)
(EN)
(IT)
(DE)
(PT)

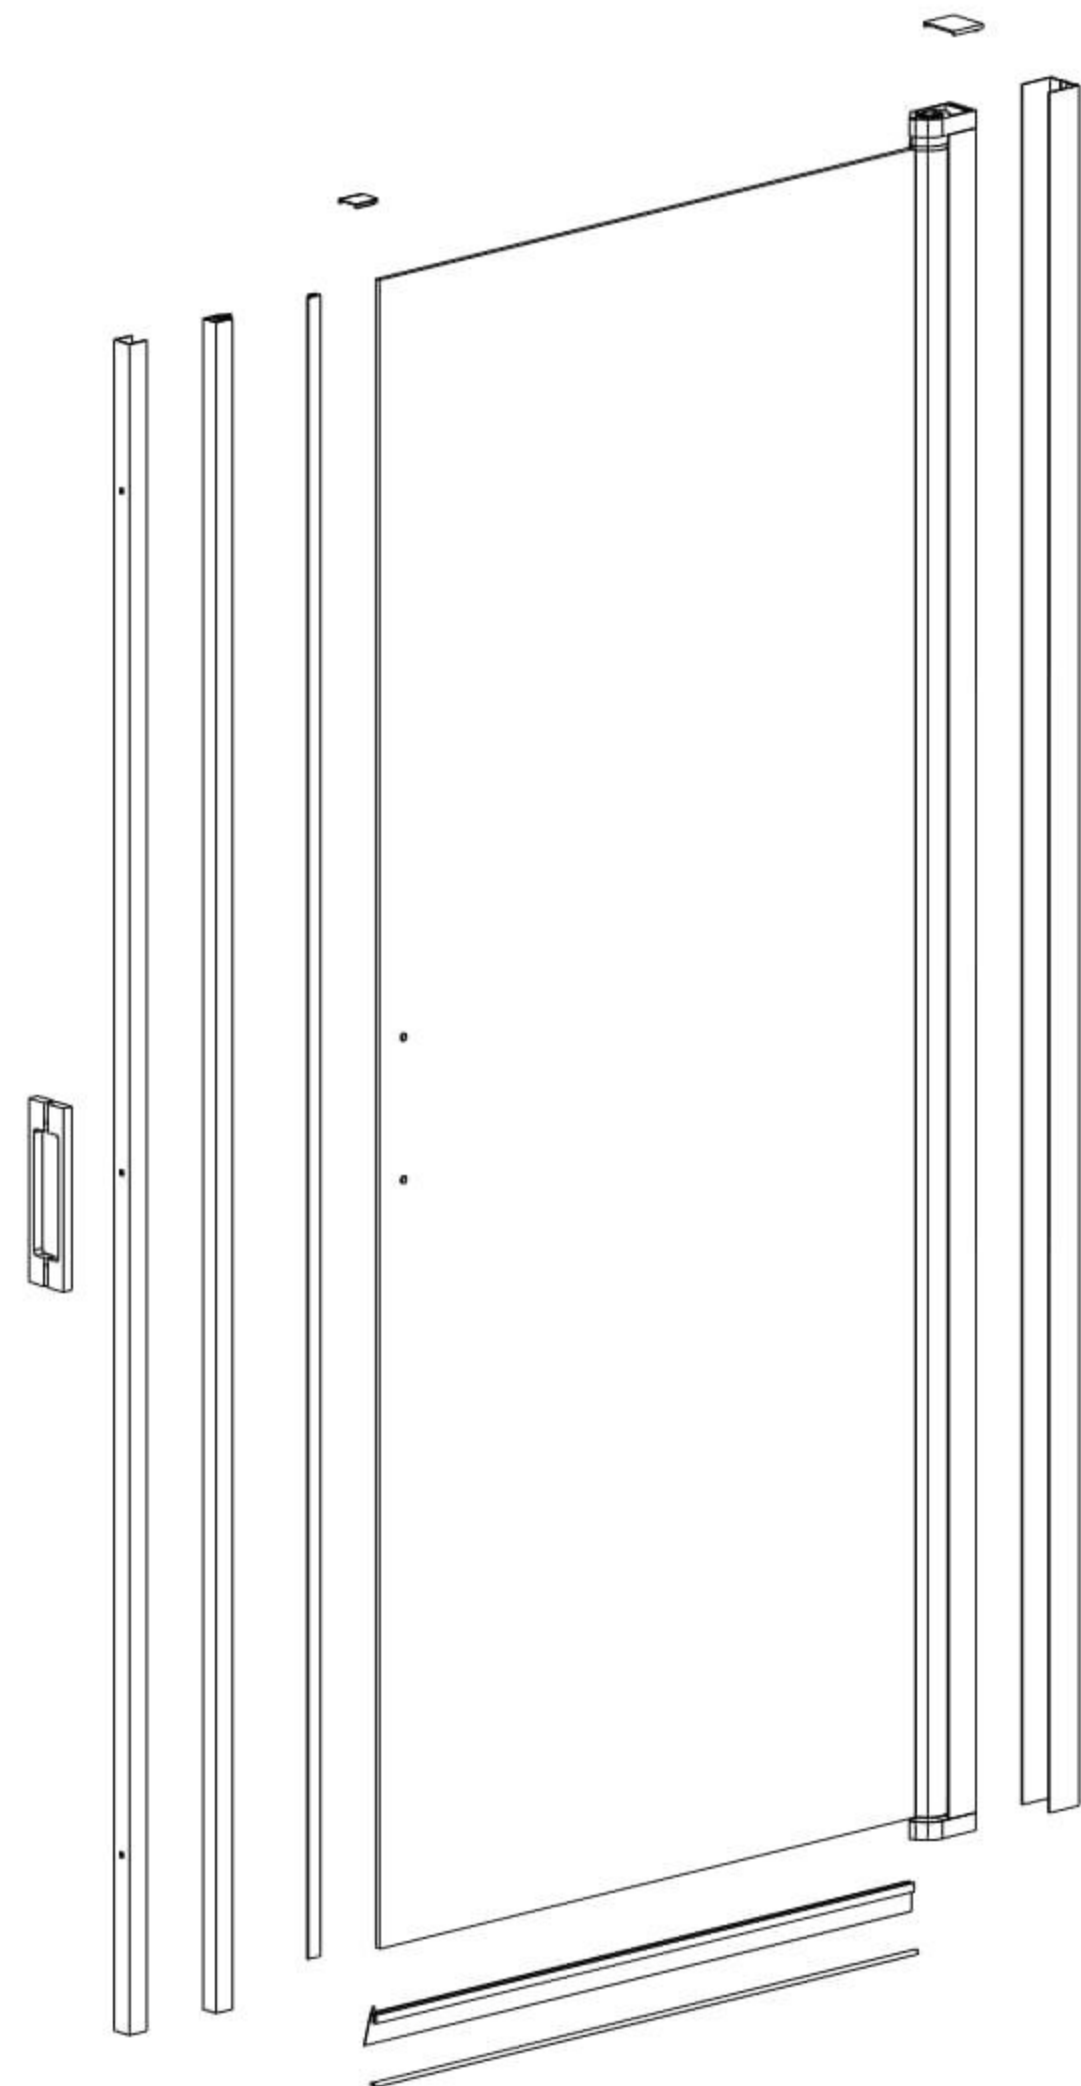
A







B





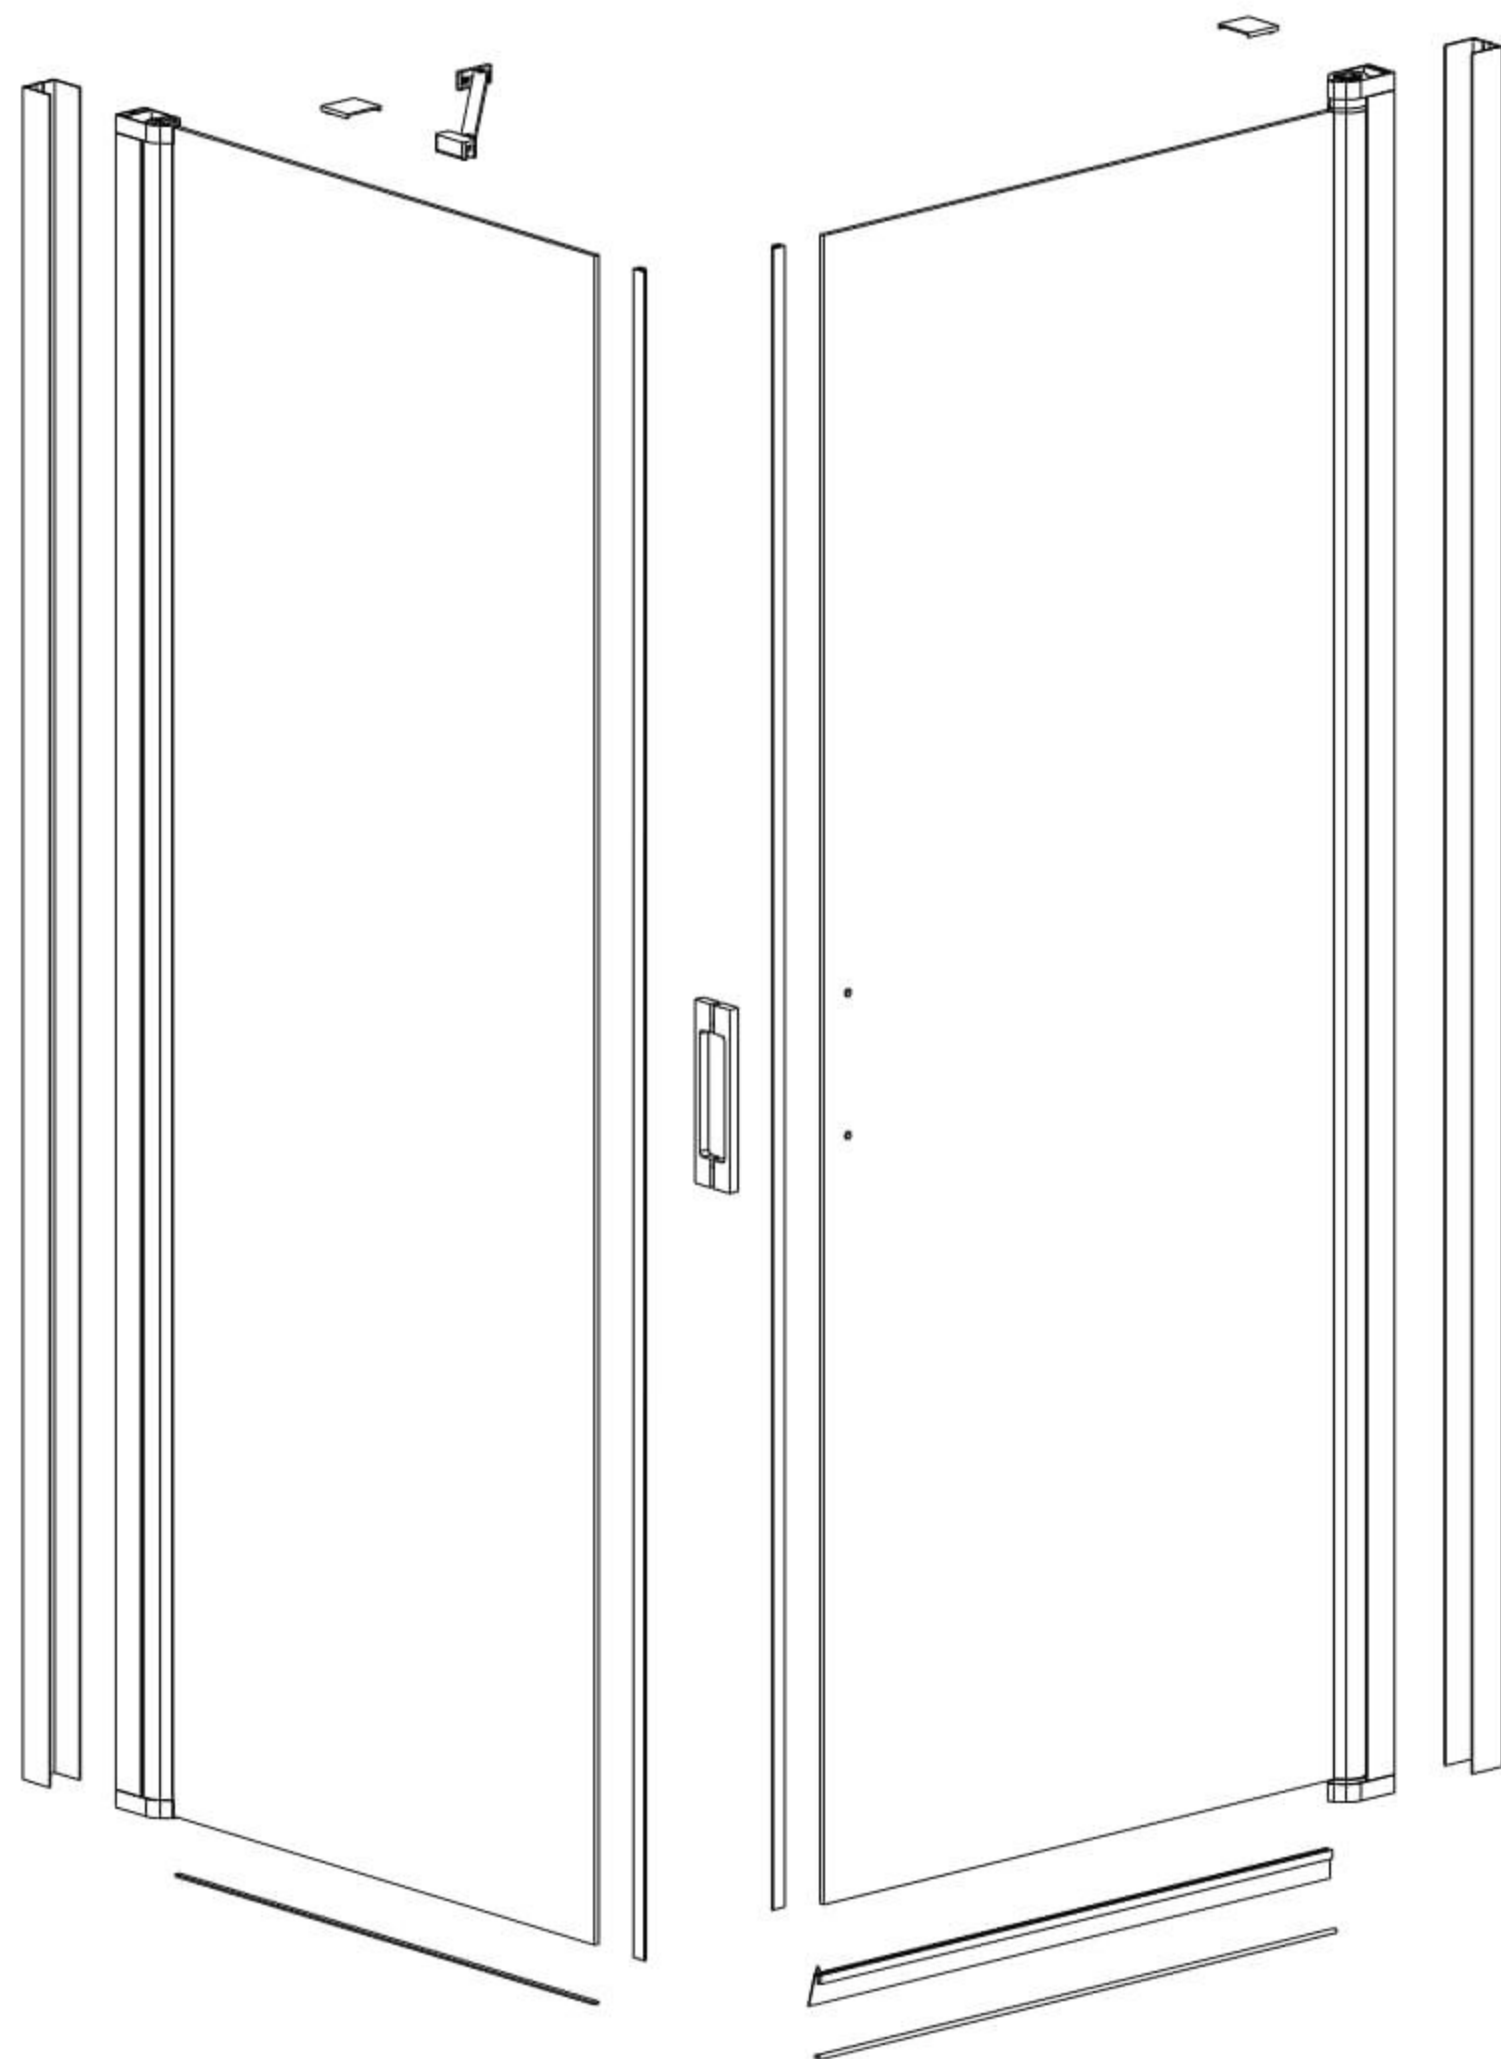











A

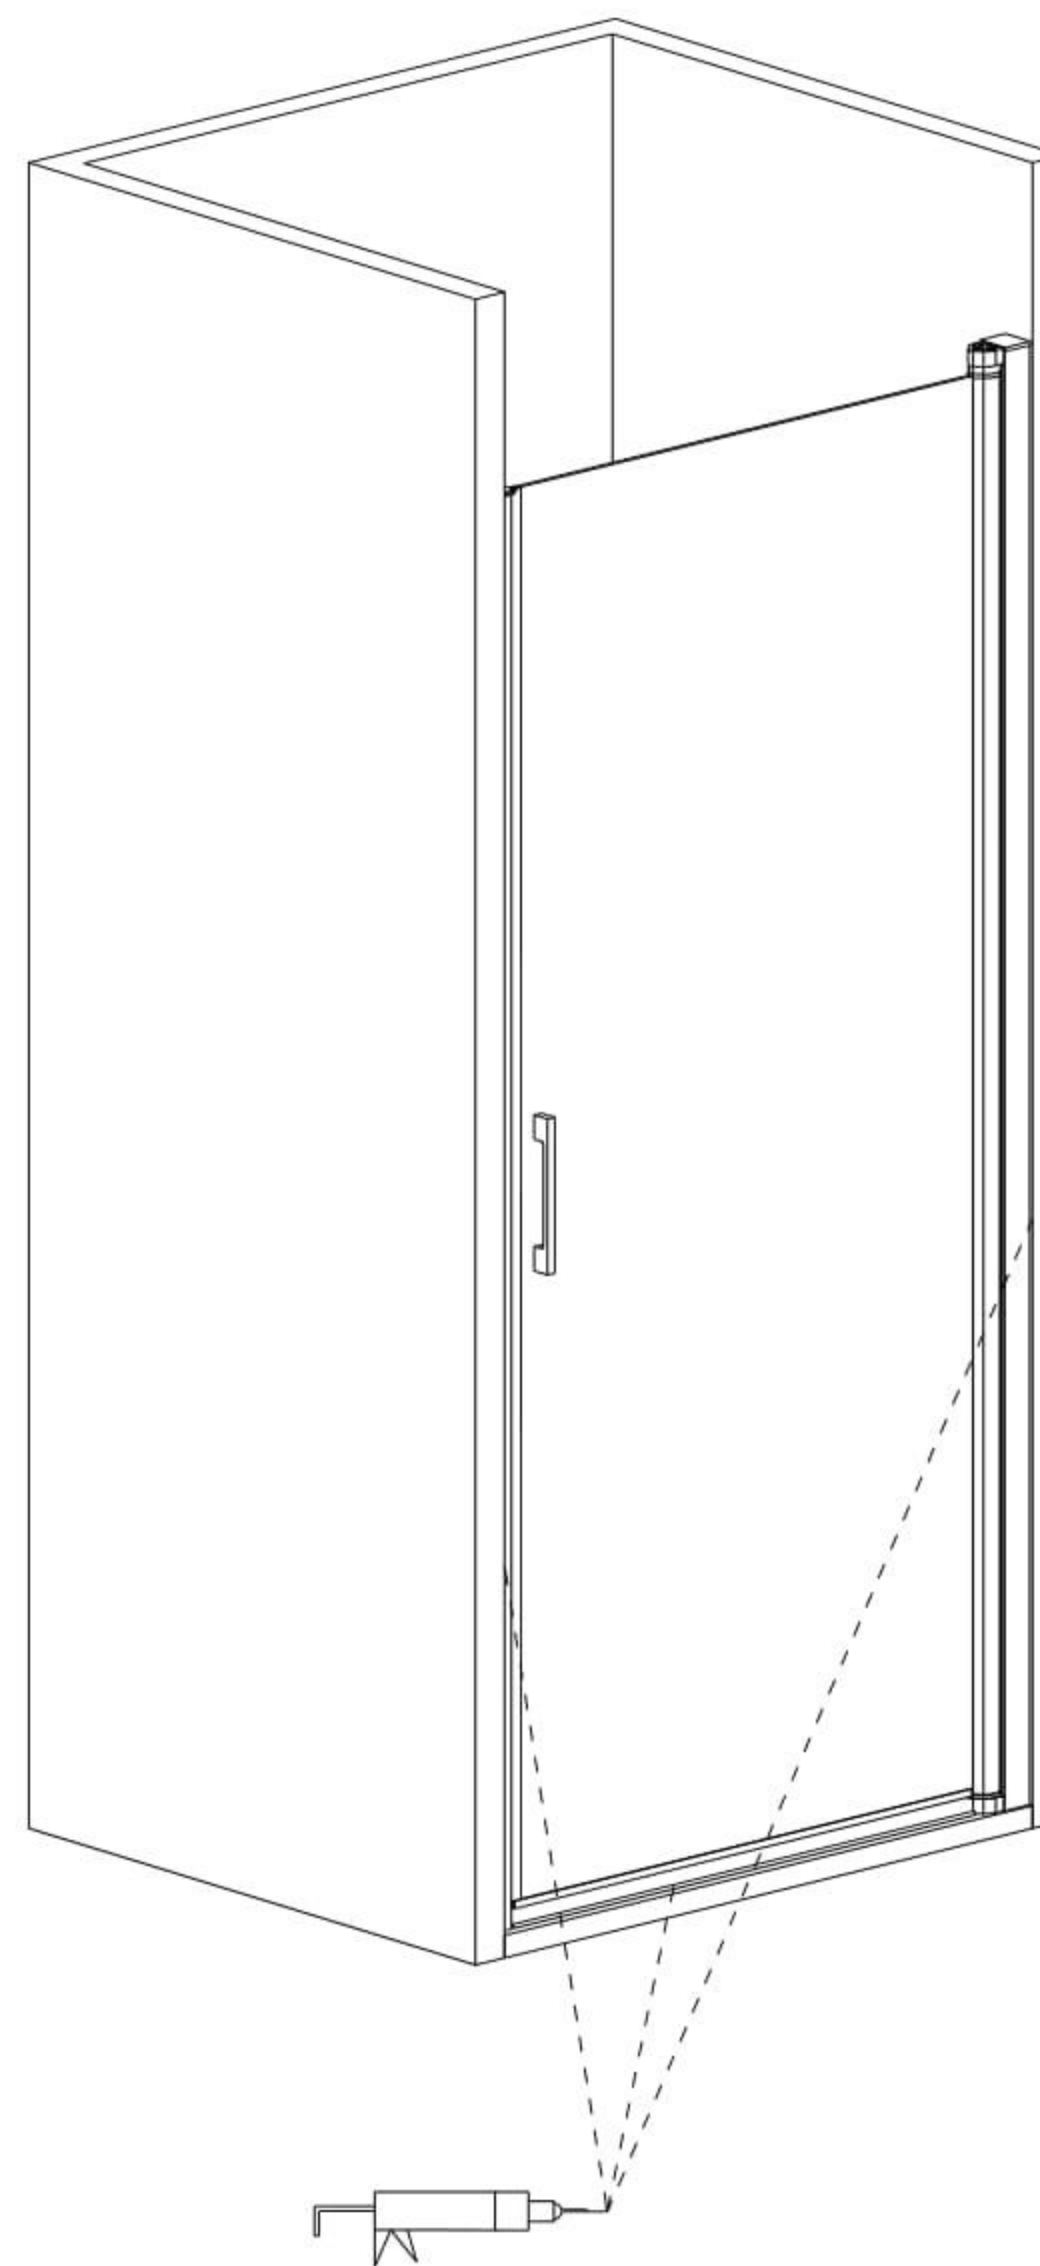



B

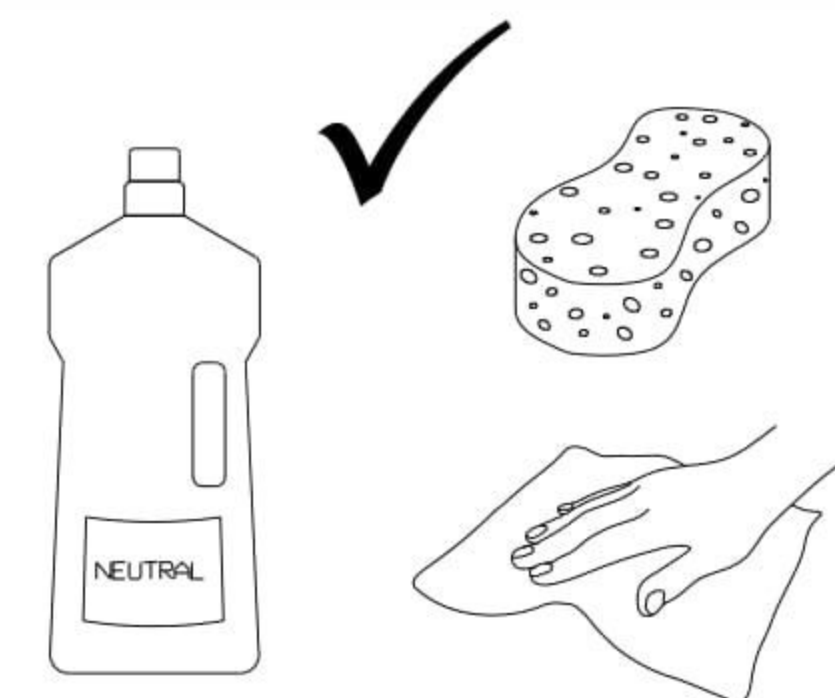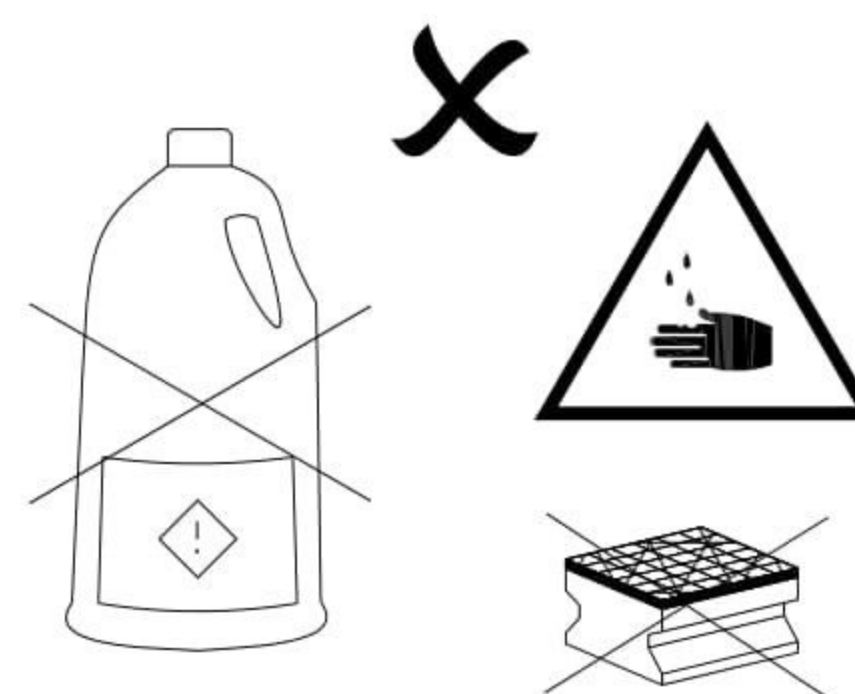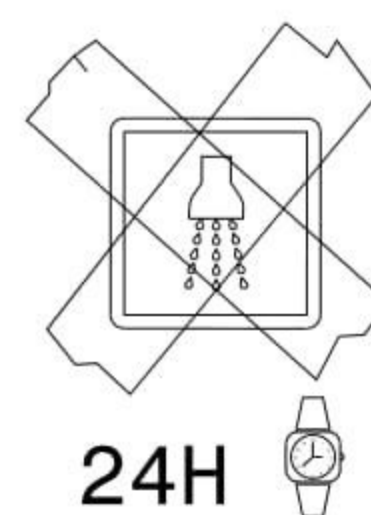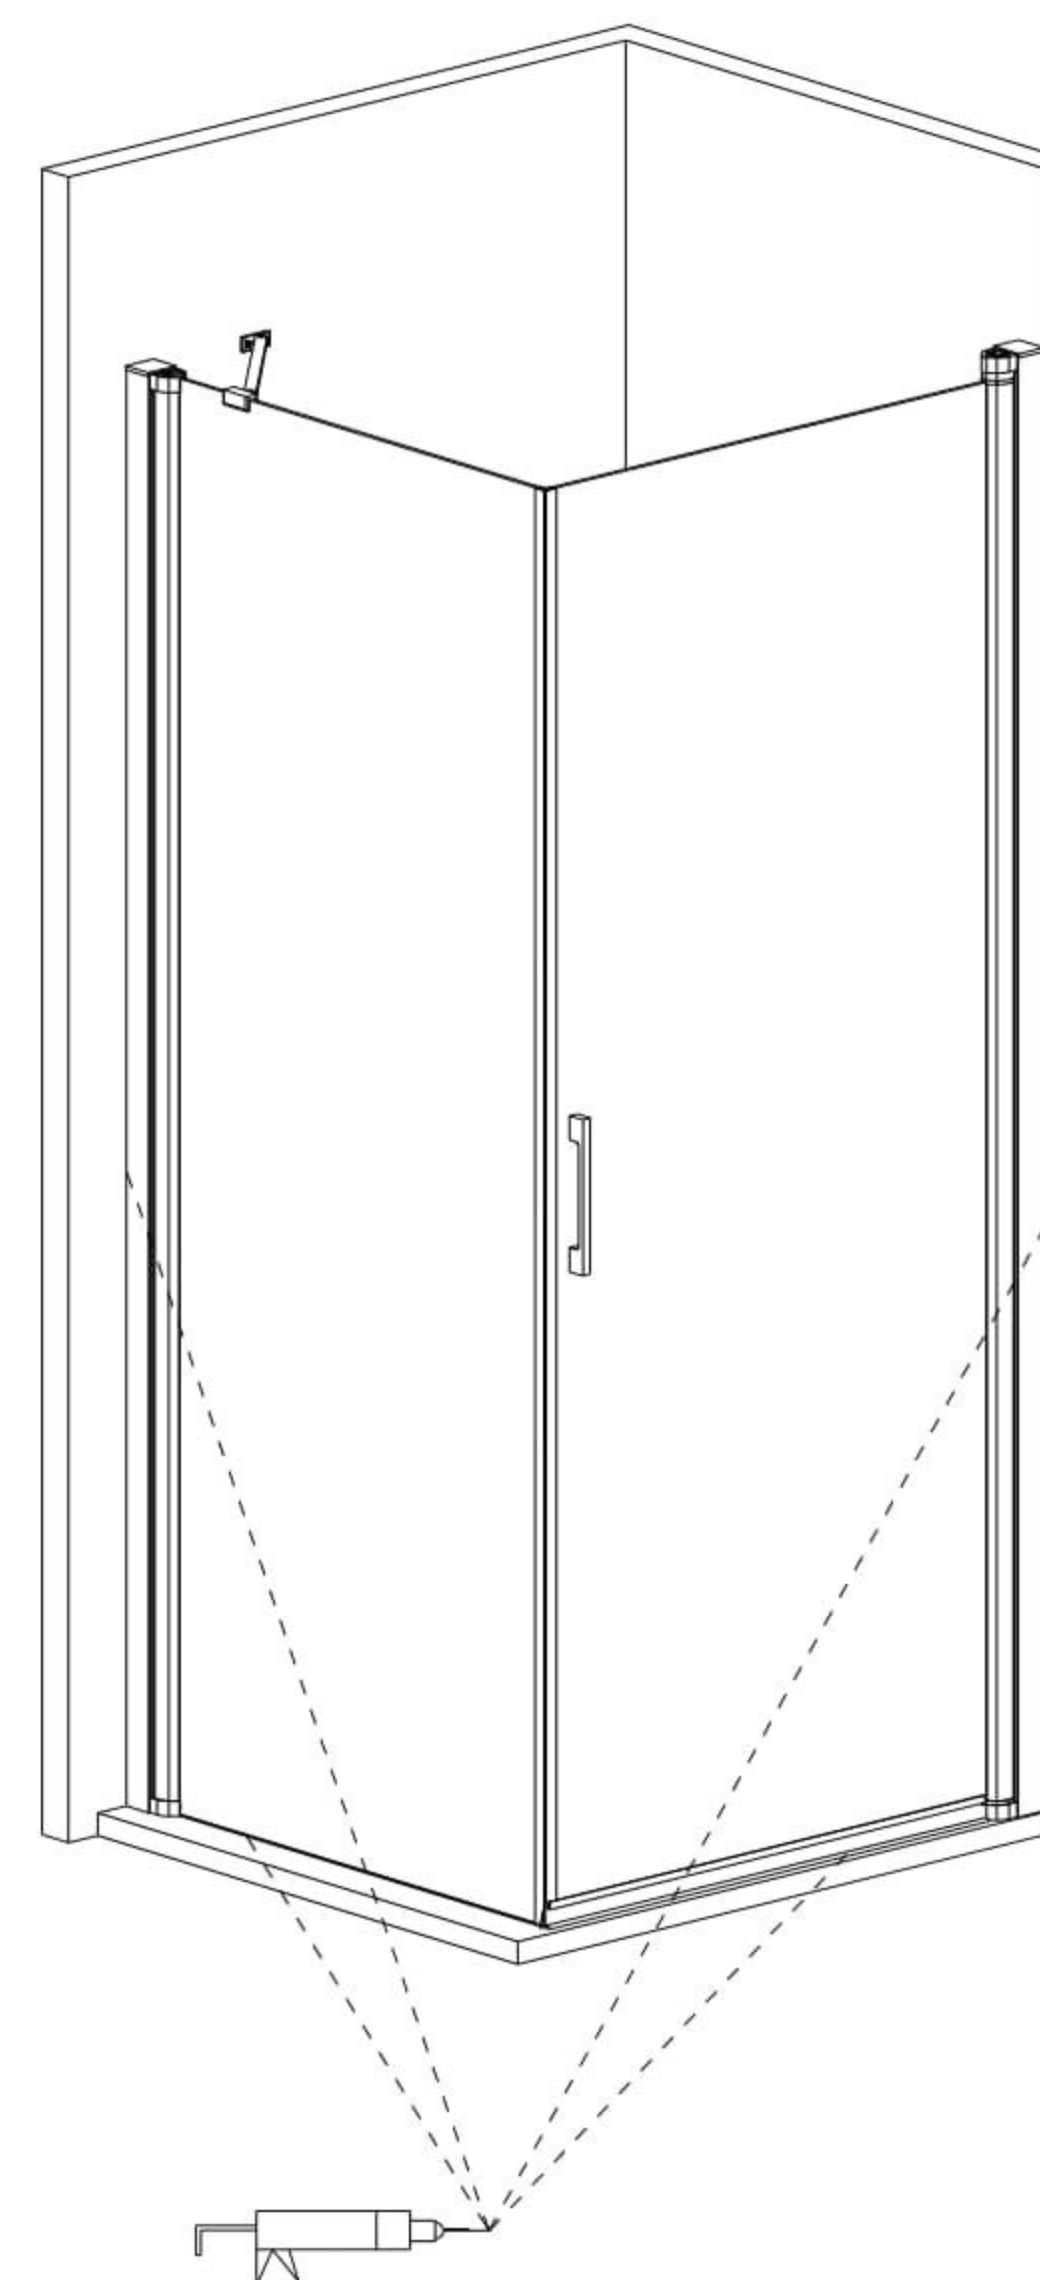

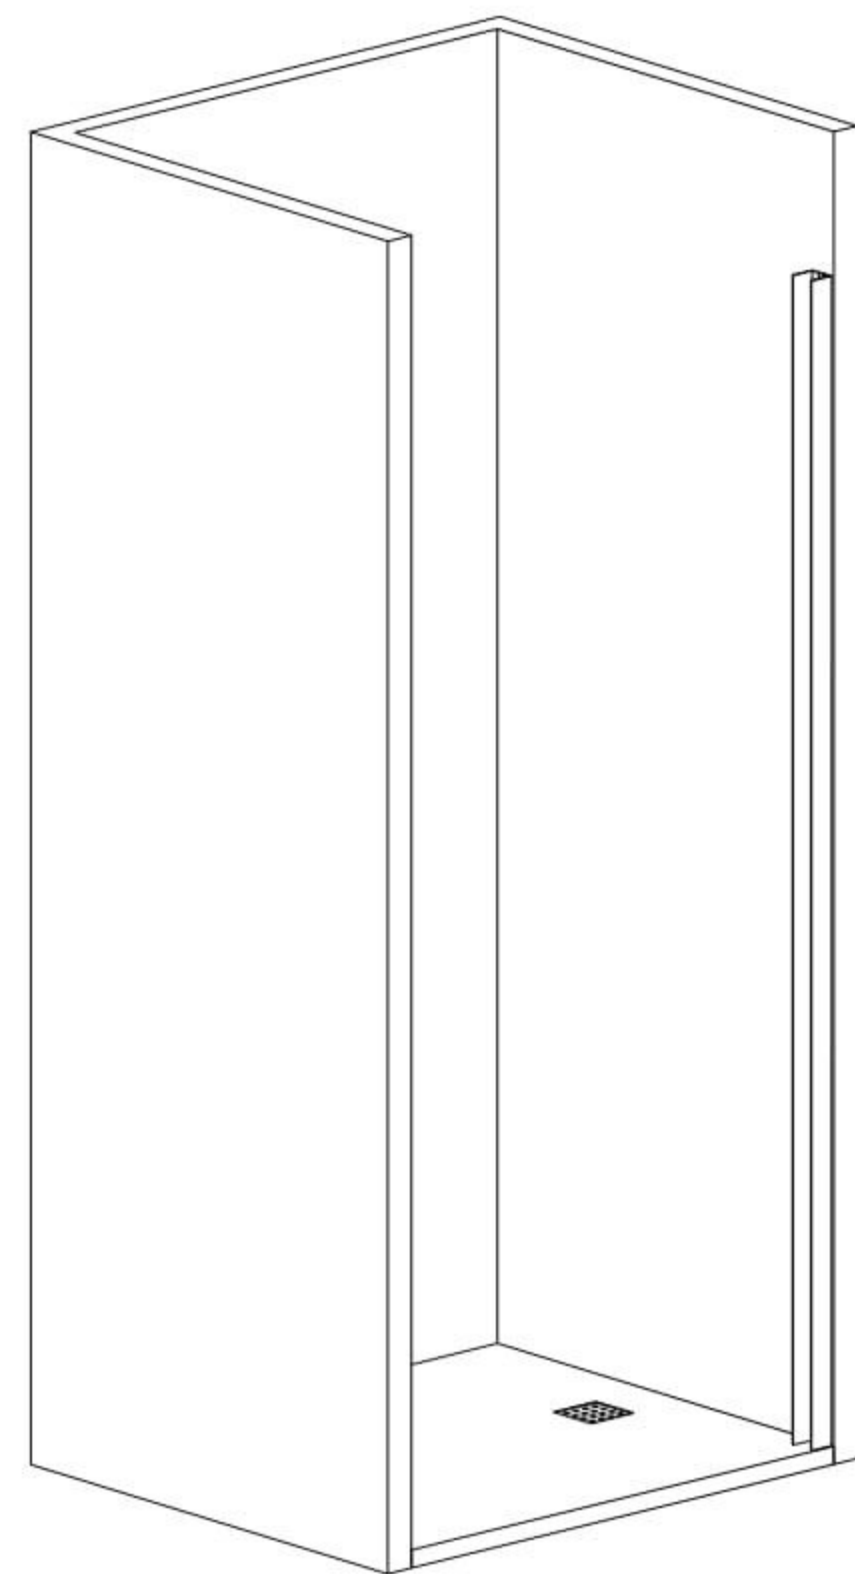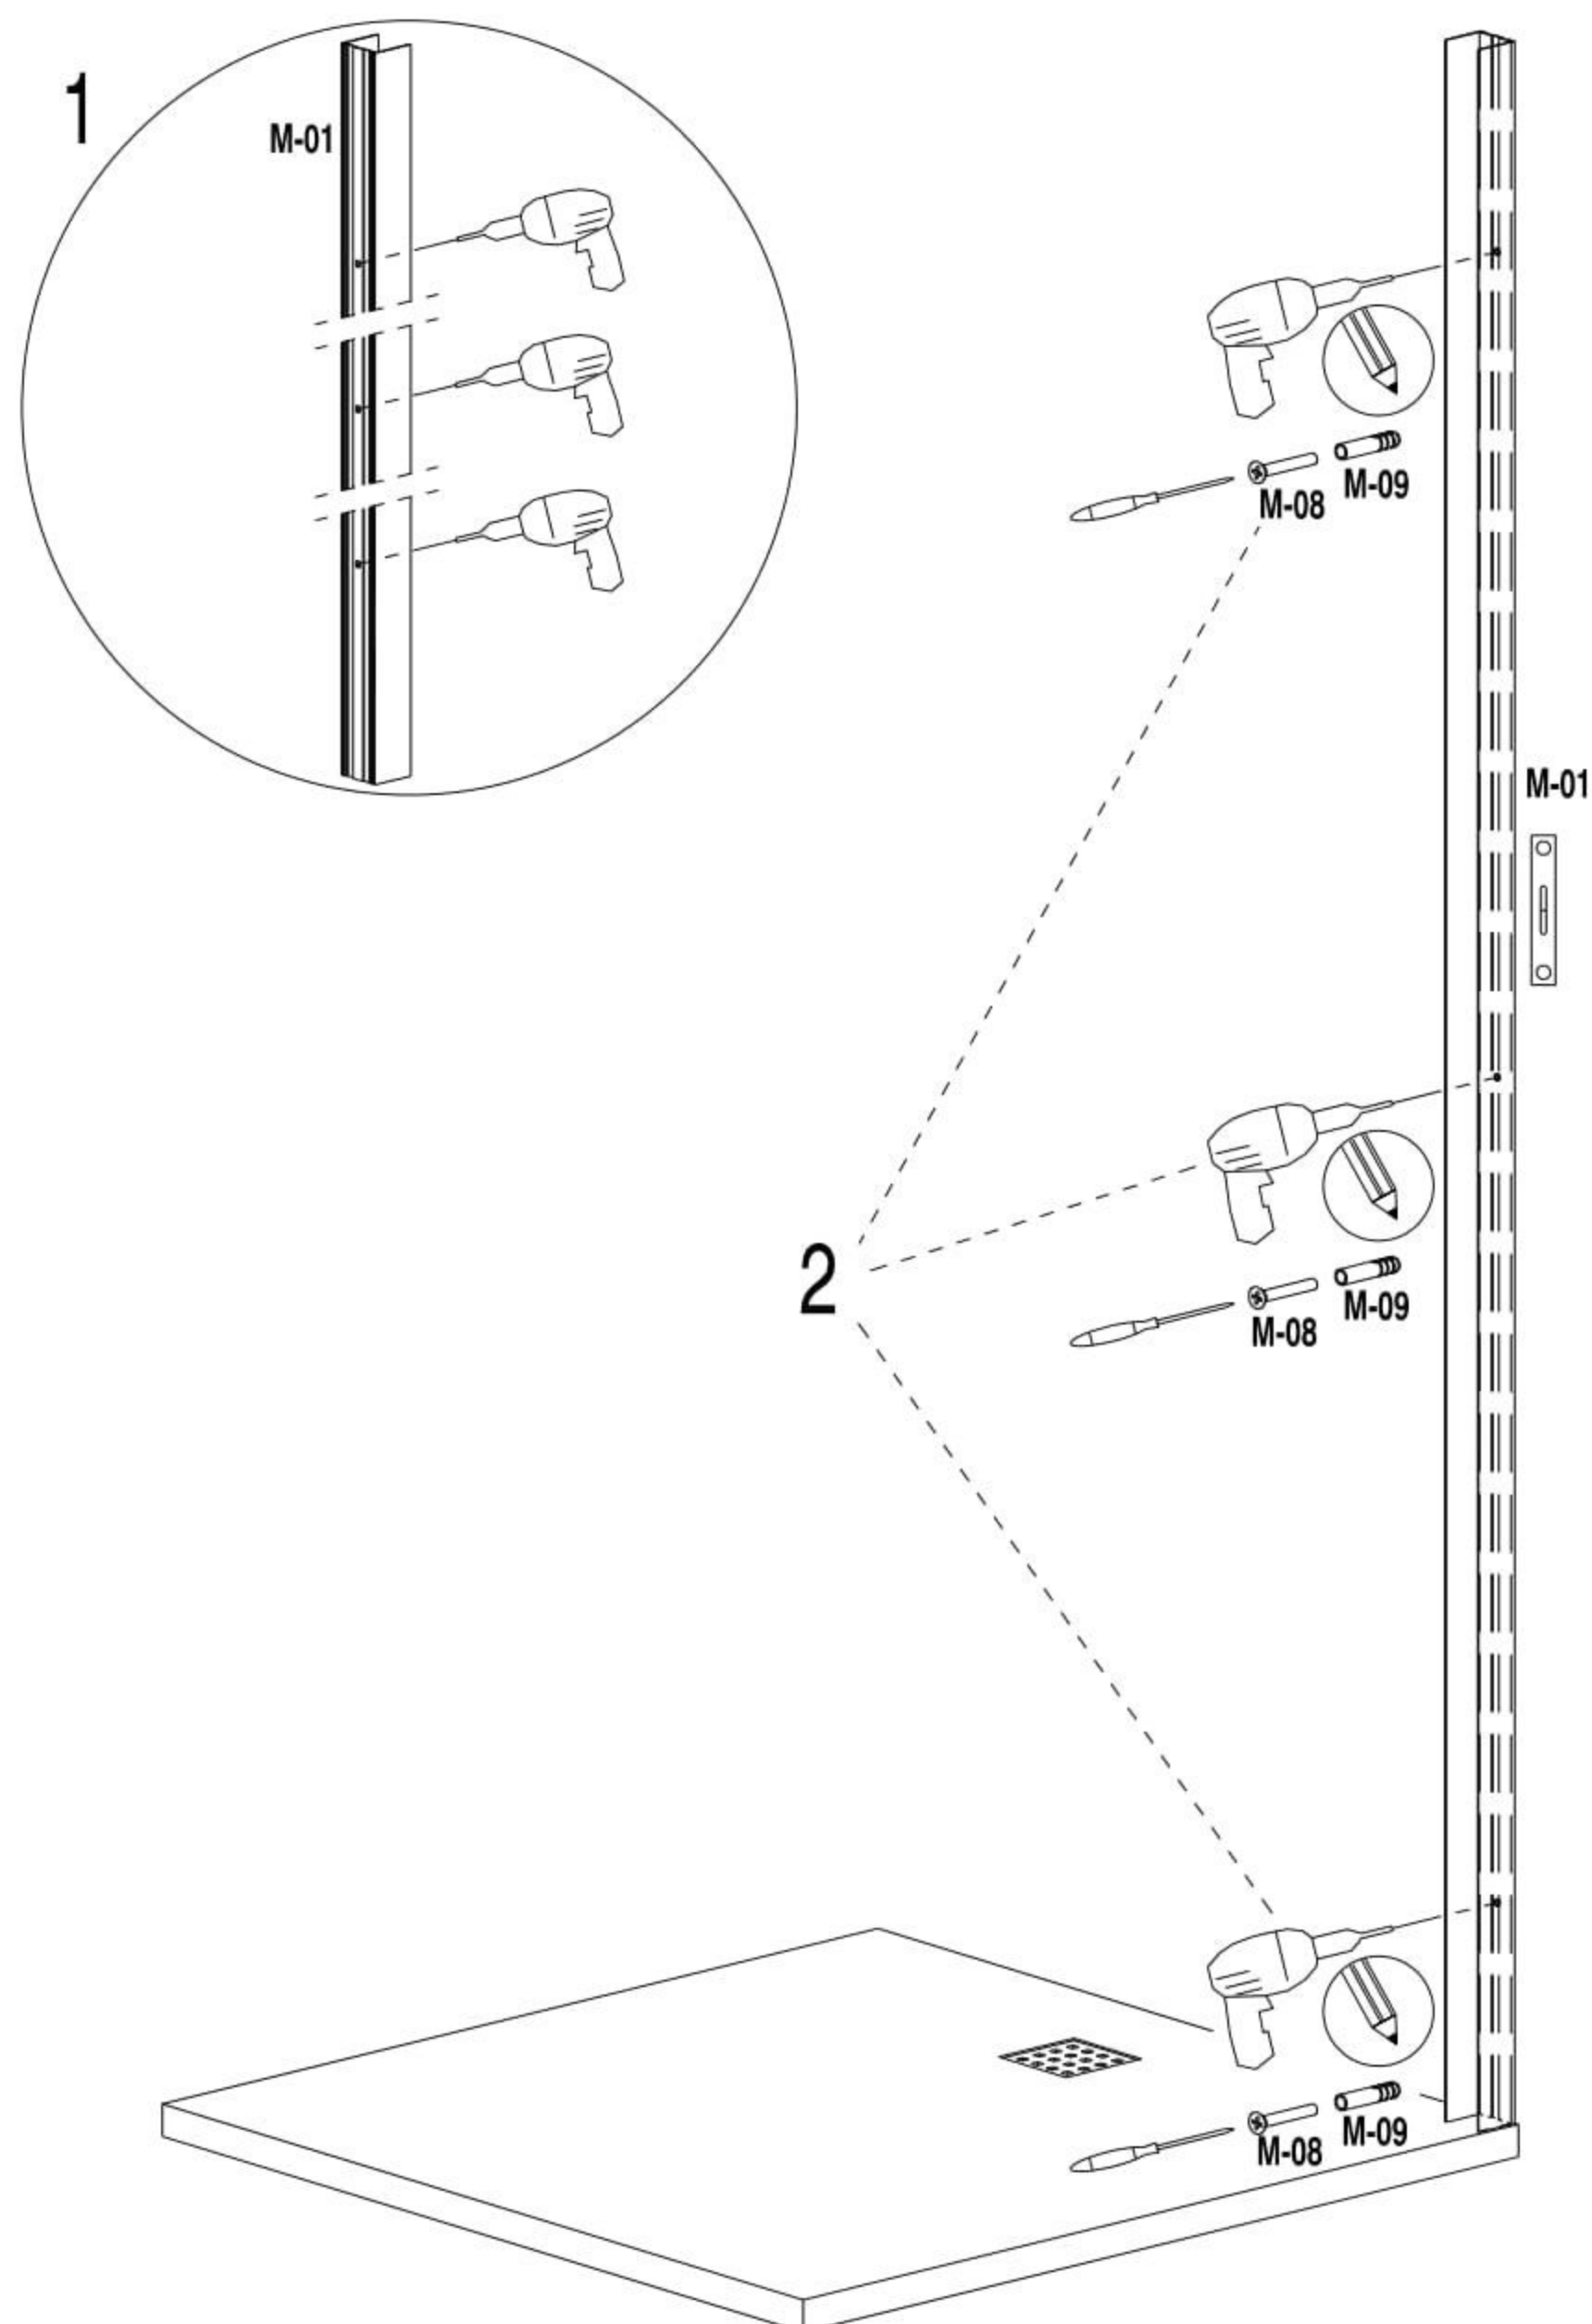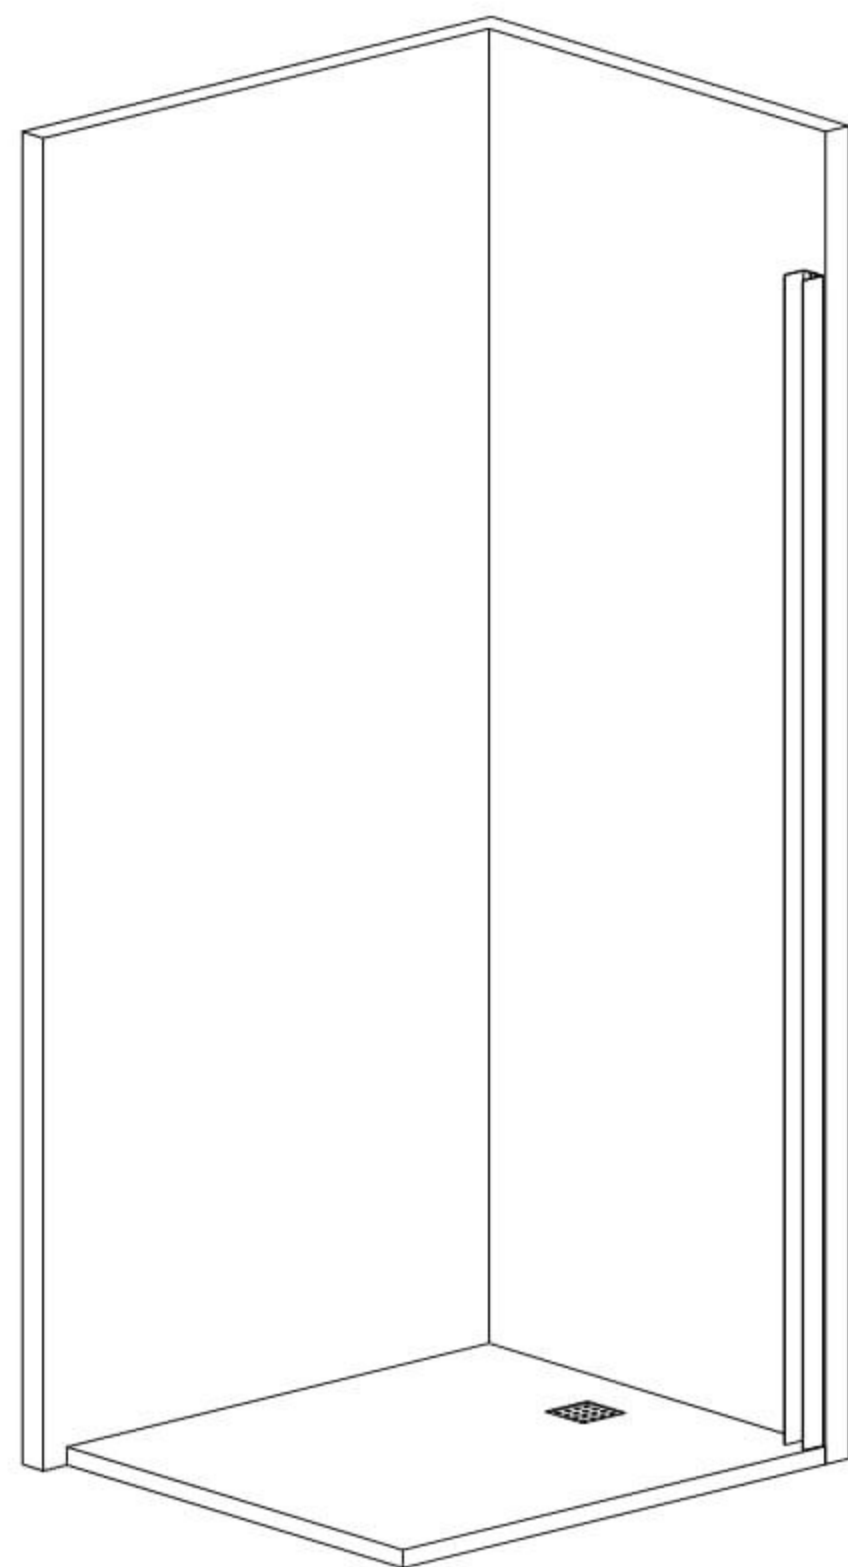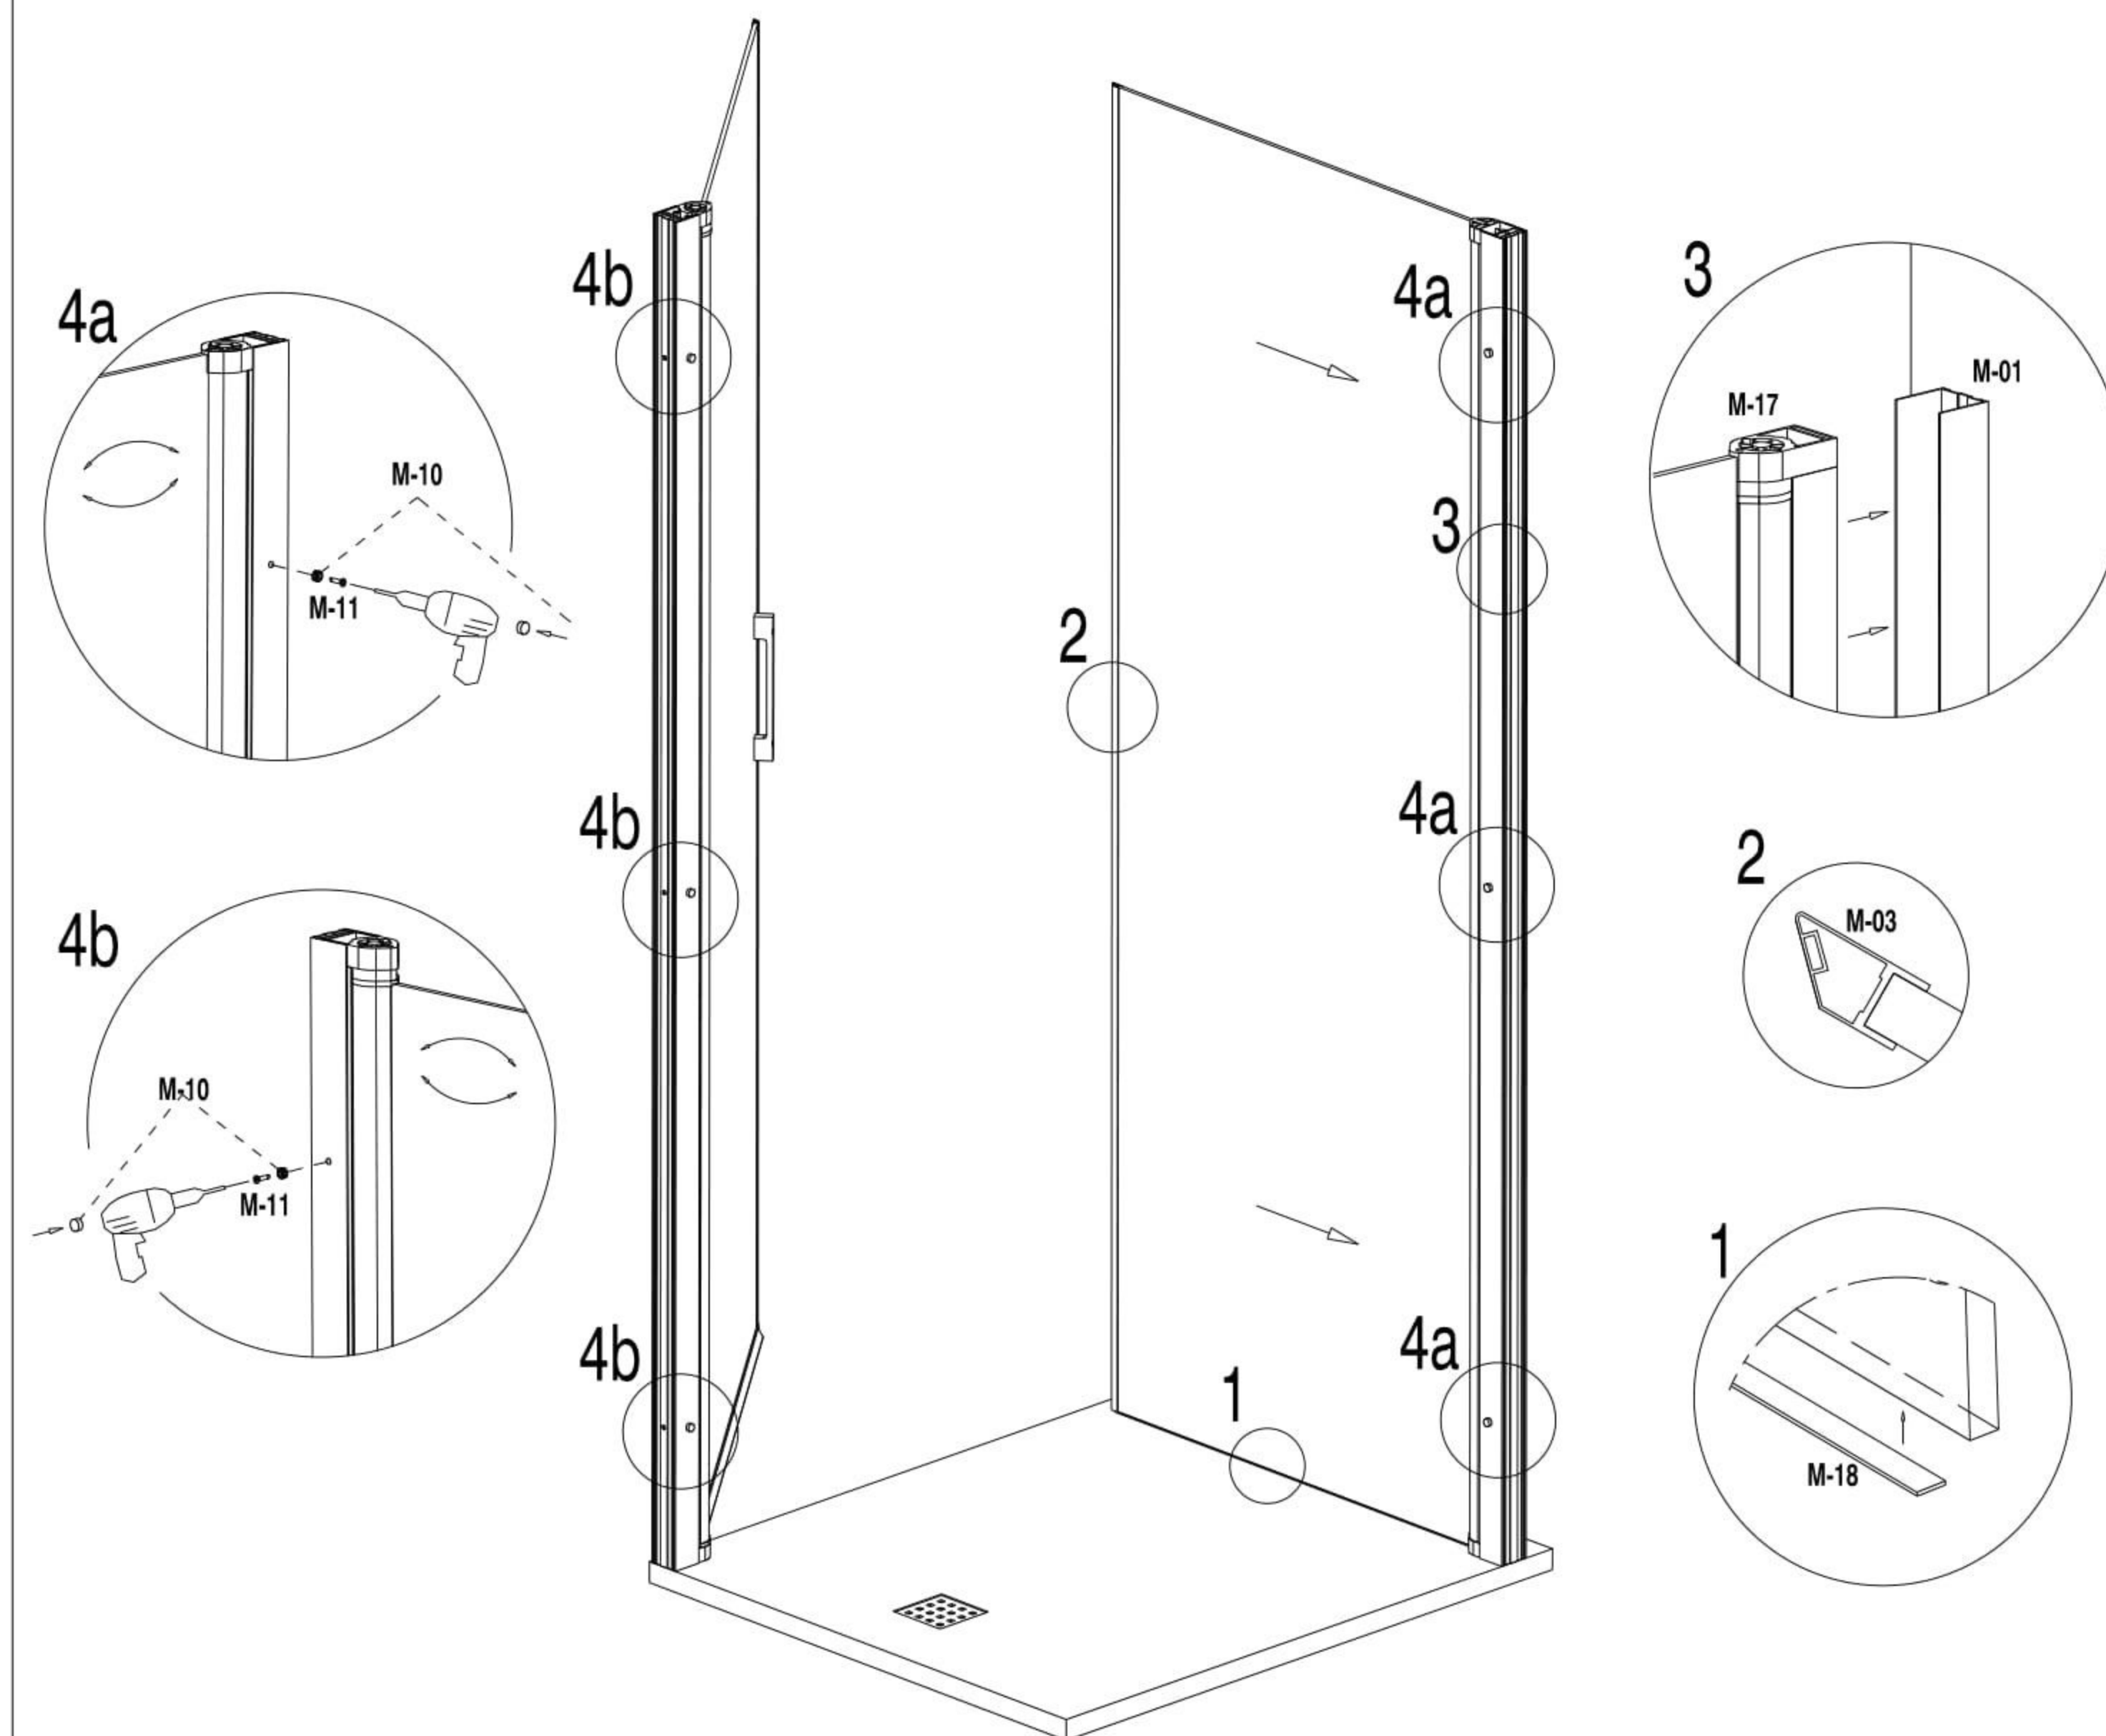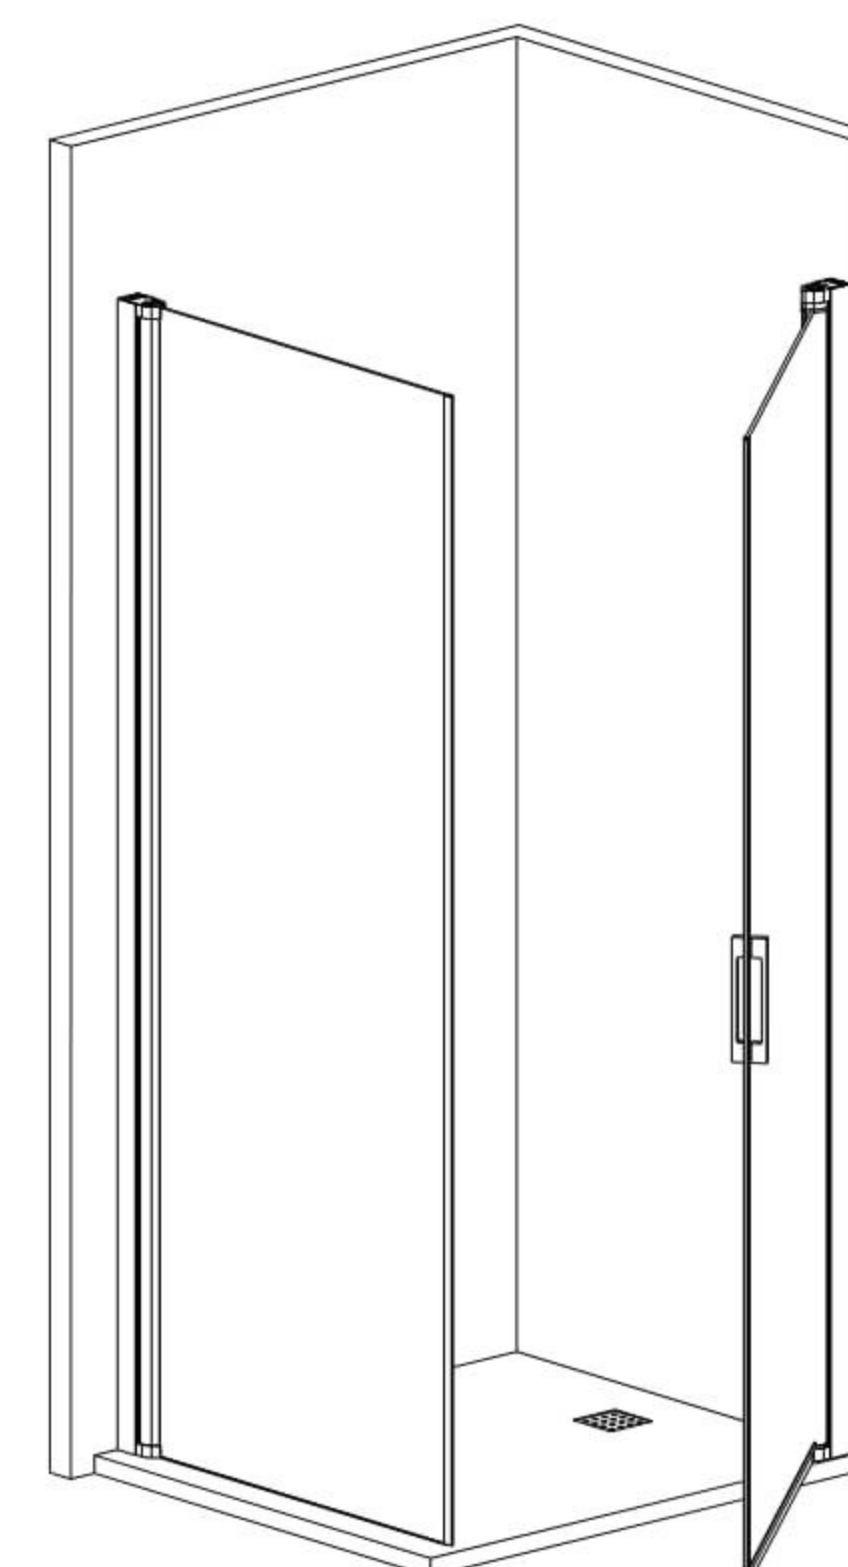A**B****B**

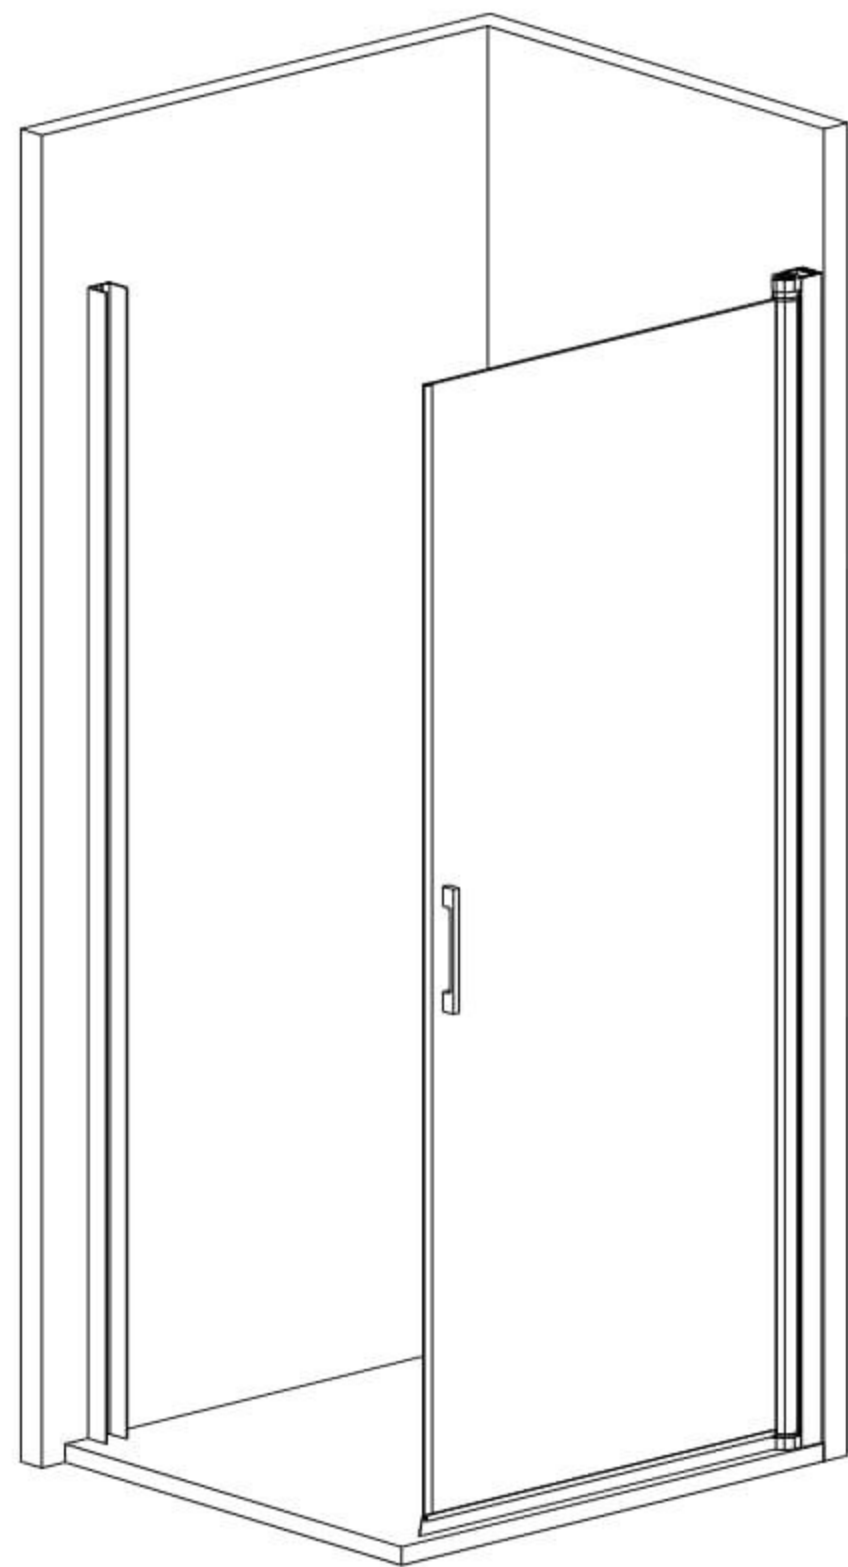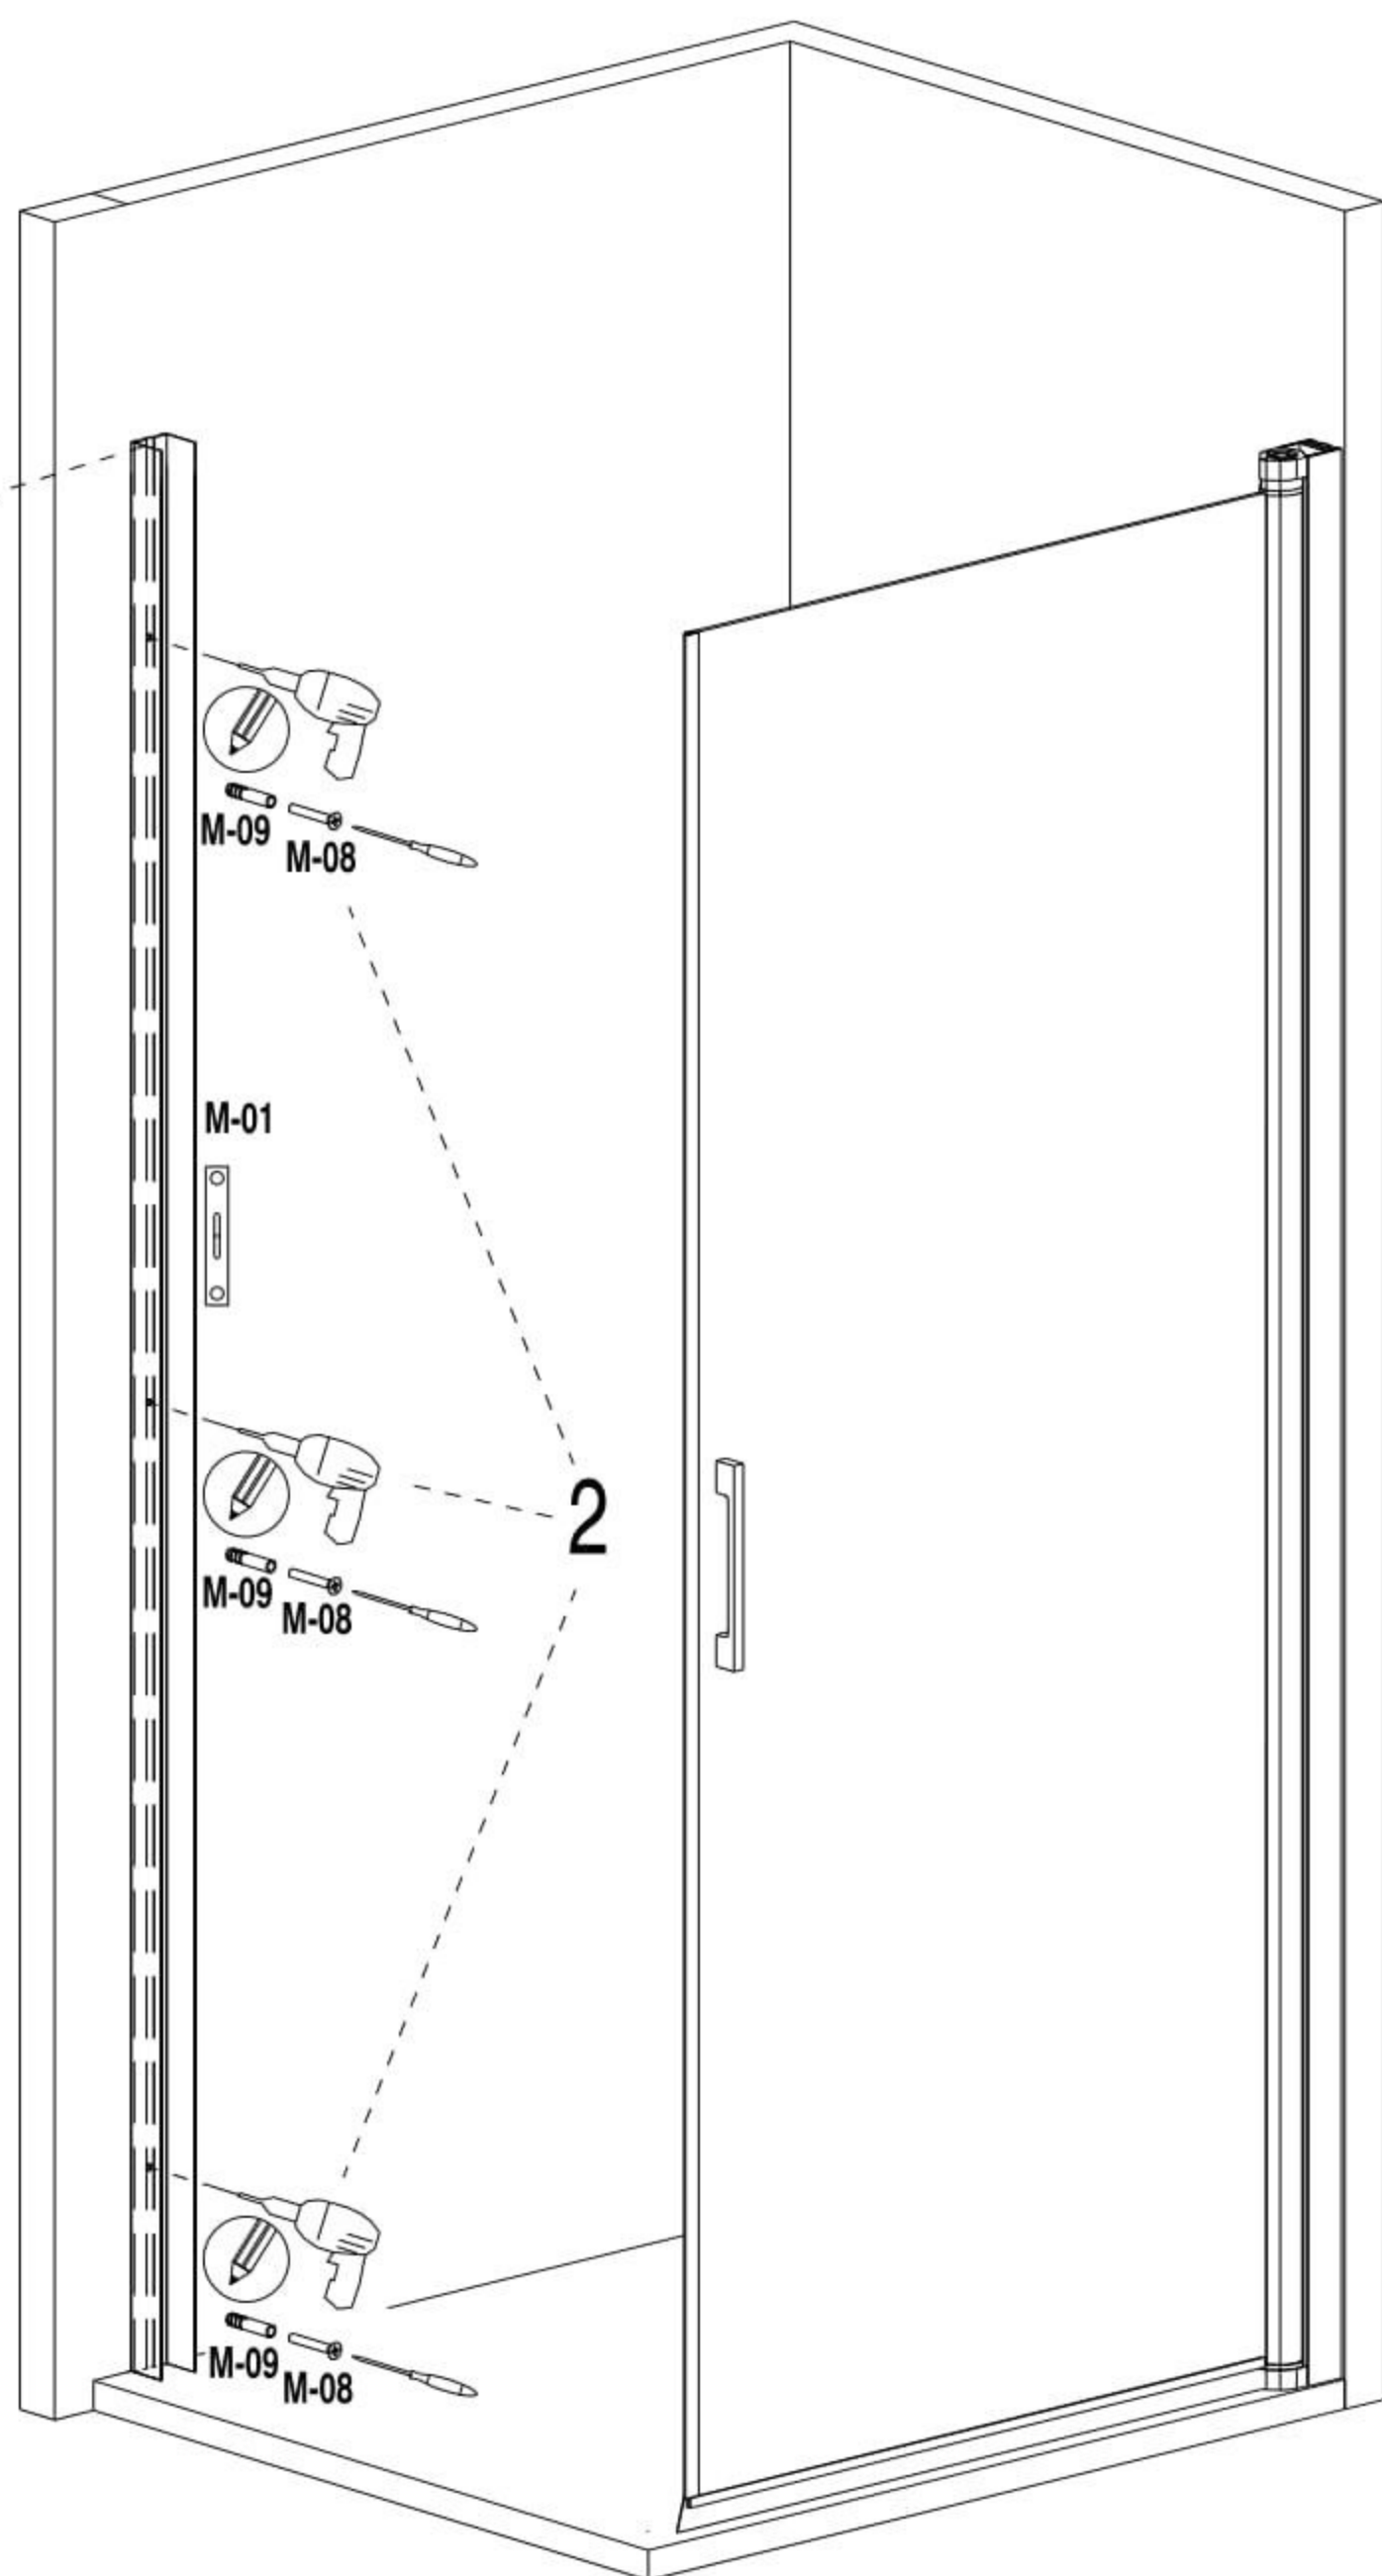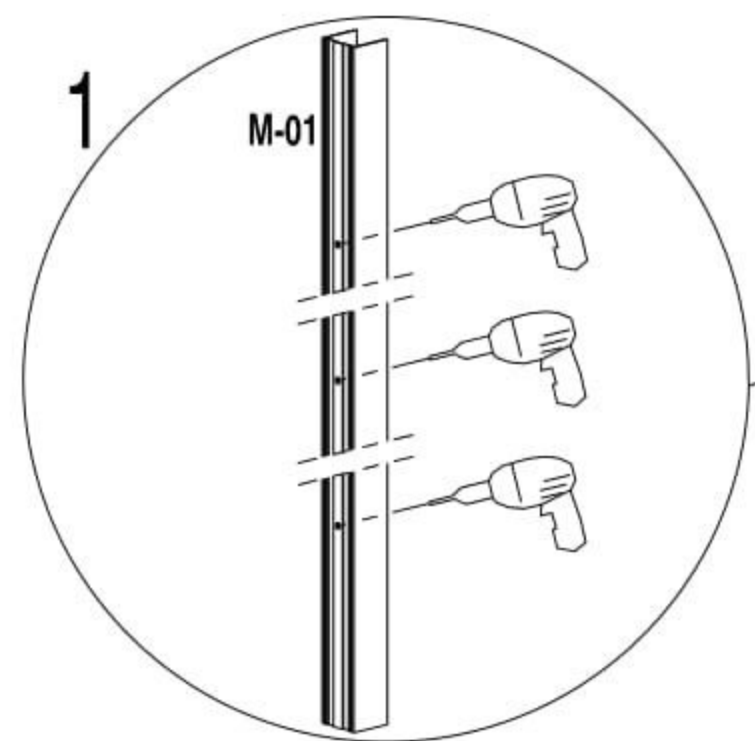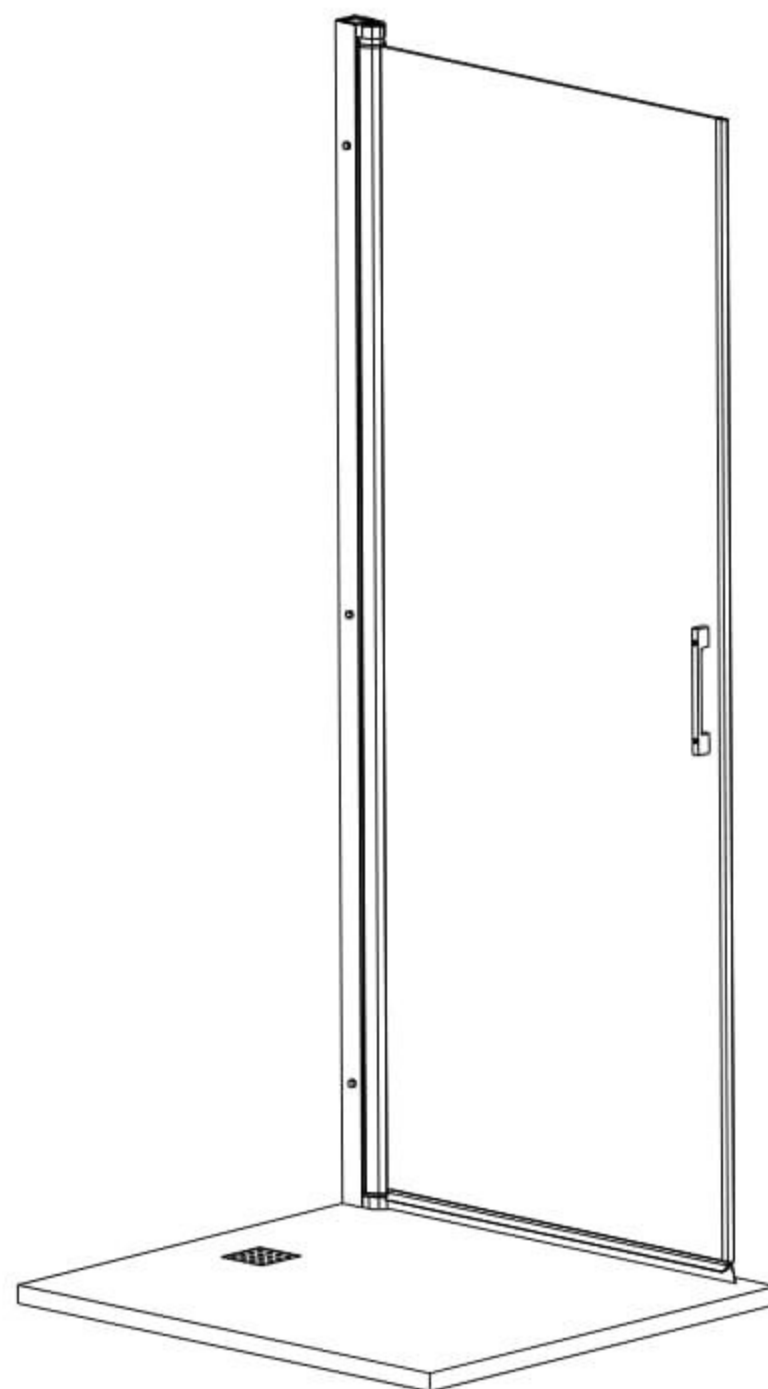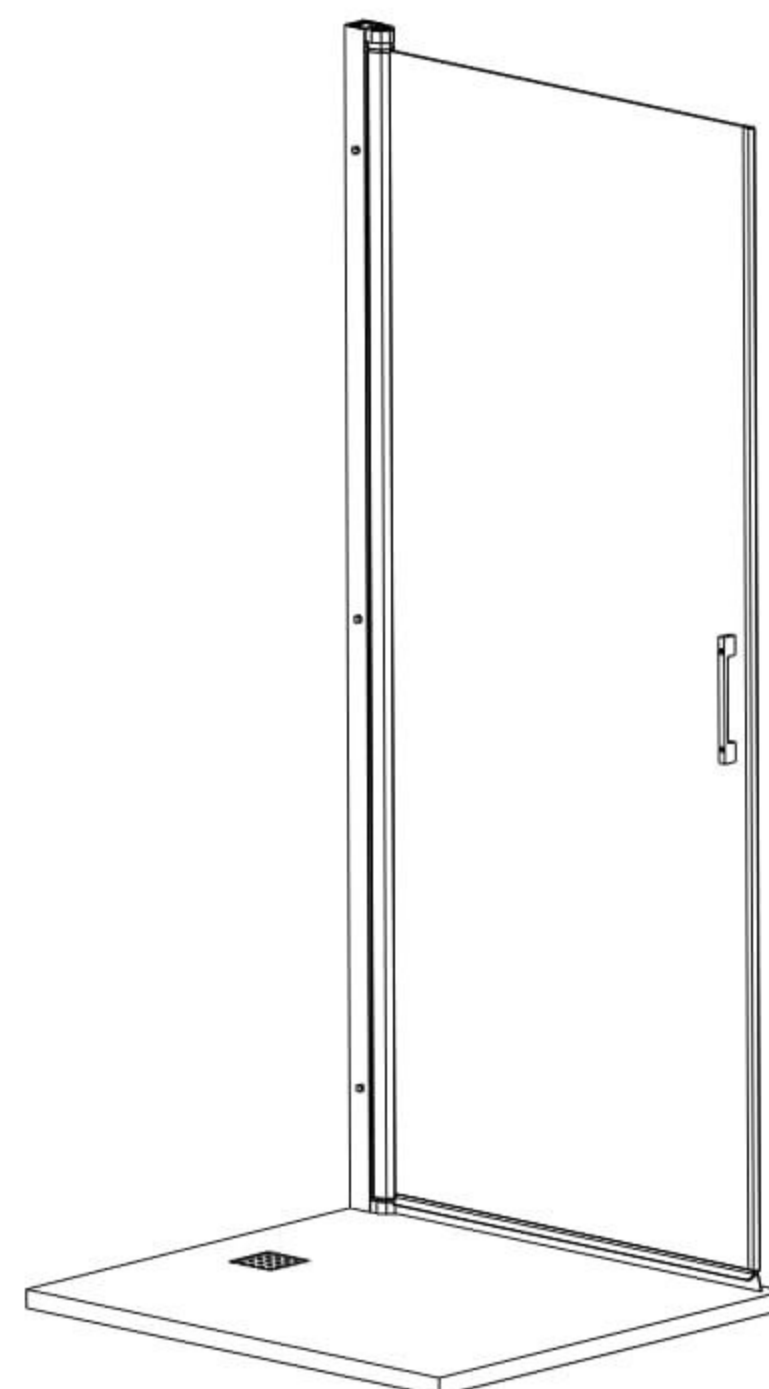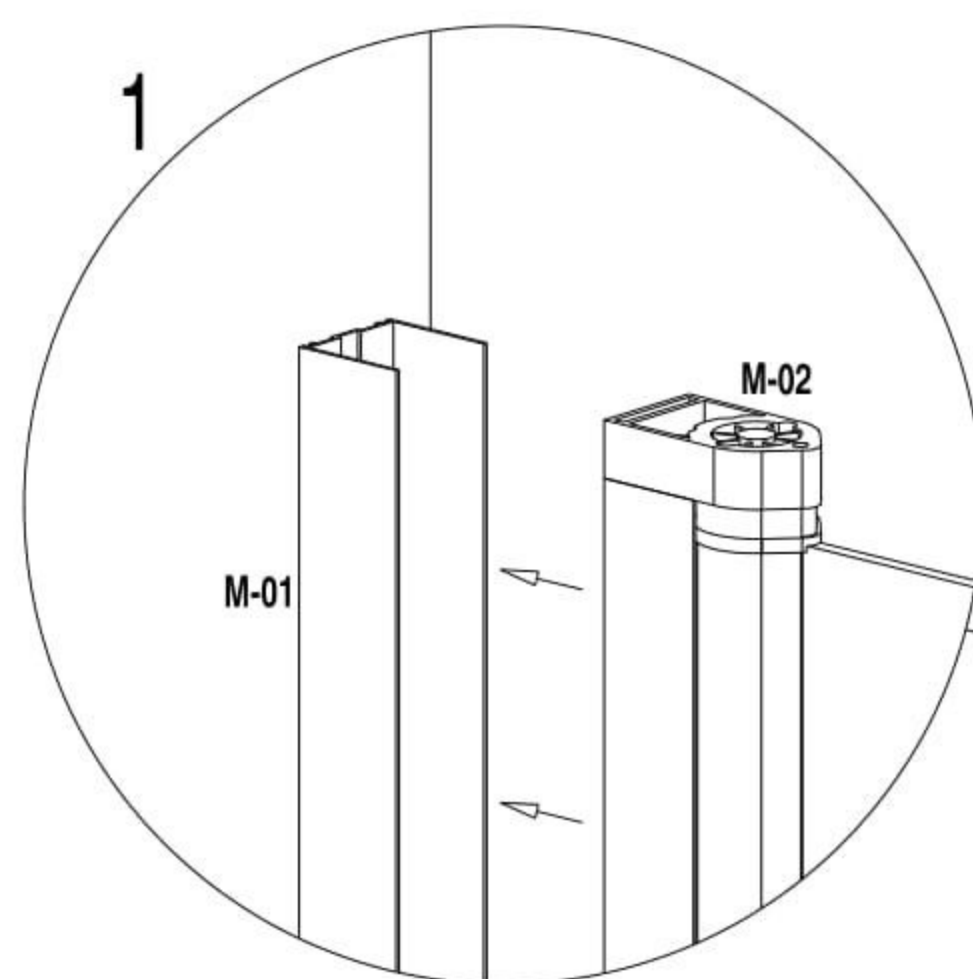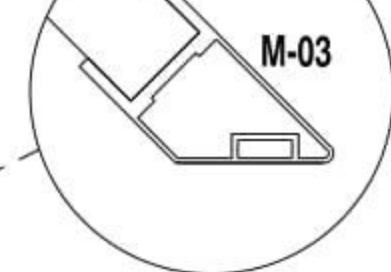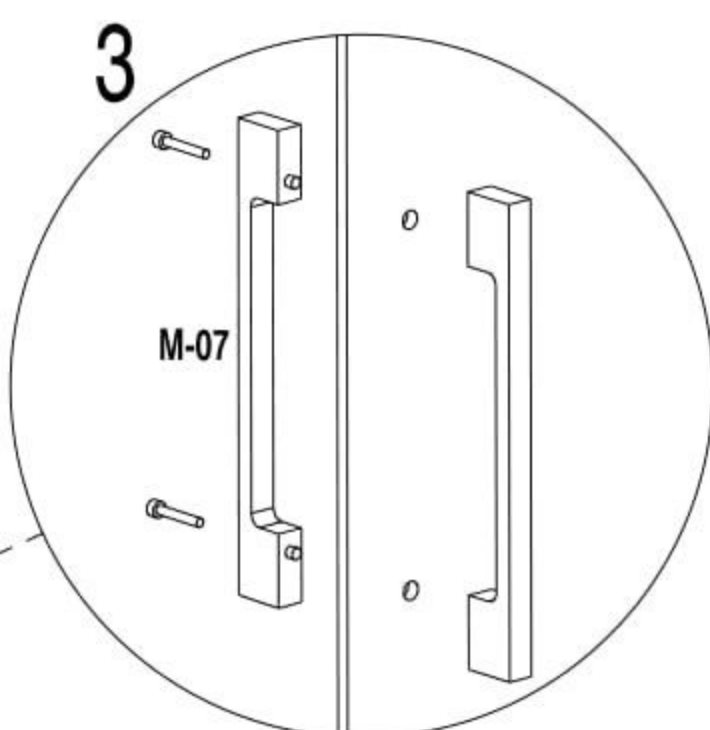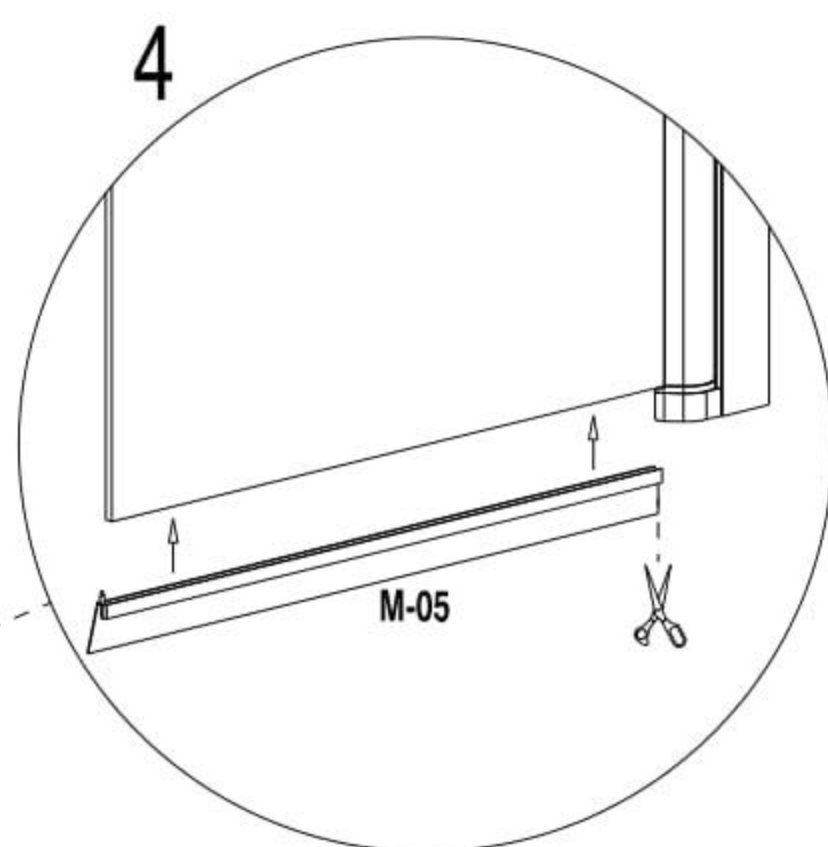B**1****M-01****M-08****M-09****M-01****M-08****M-09****M-08****M-09****2****A****B****1****M-01****M-02****2****M-03****3****M-07****4****M-05**

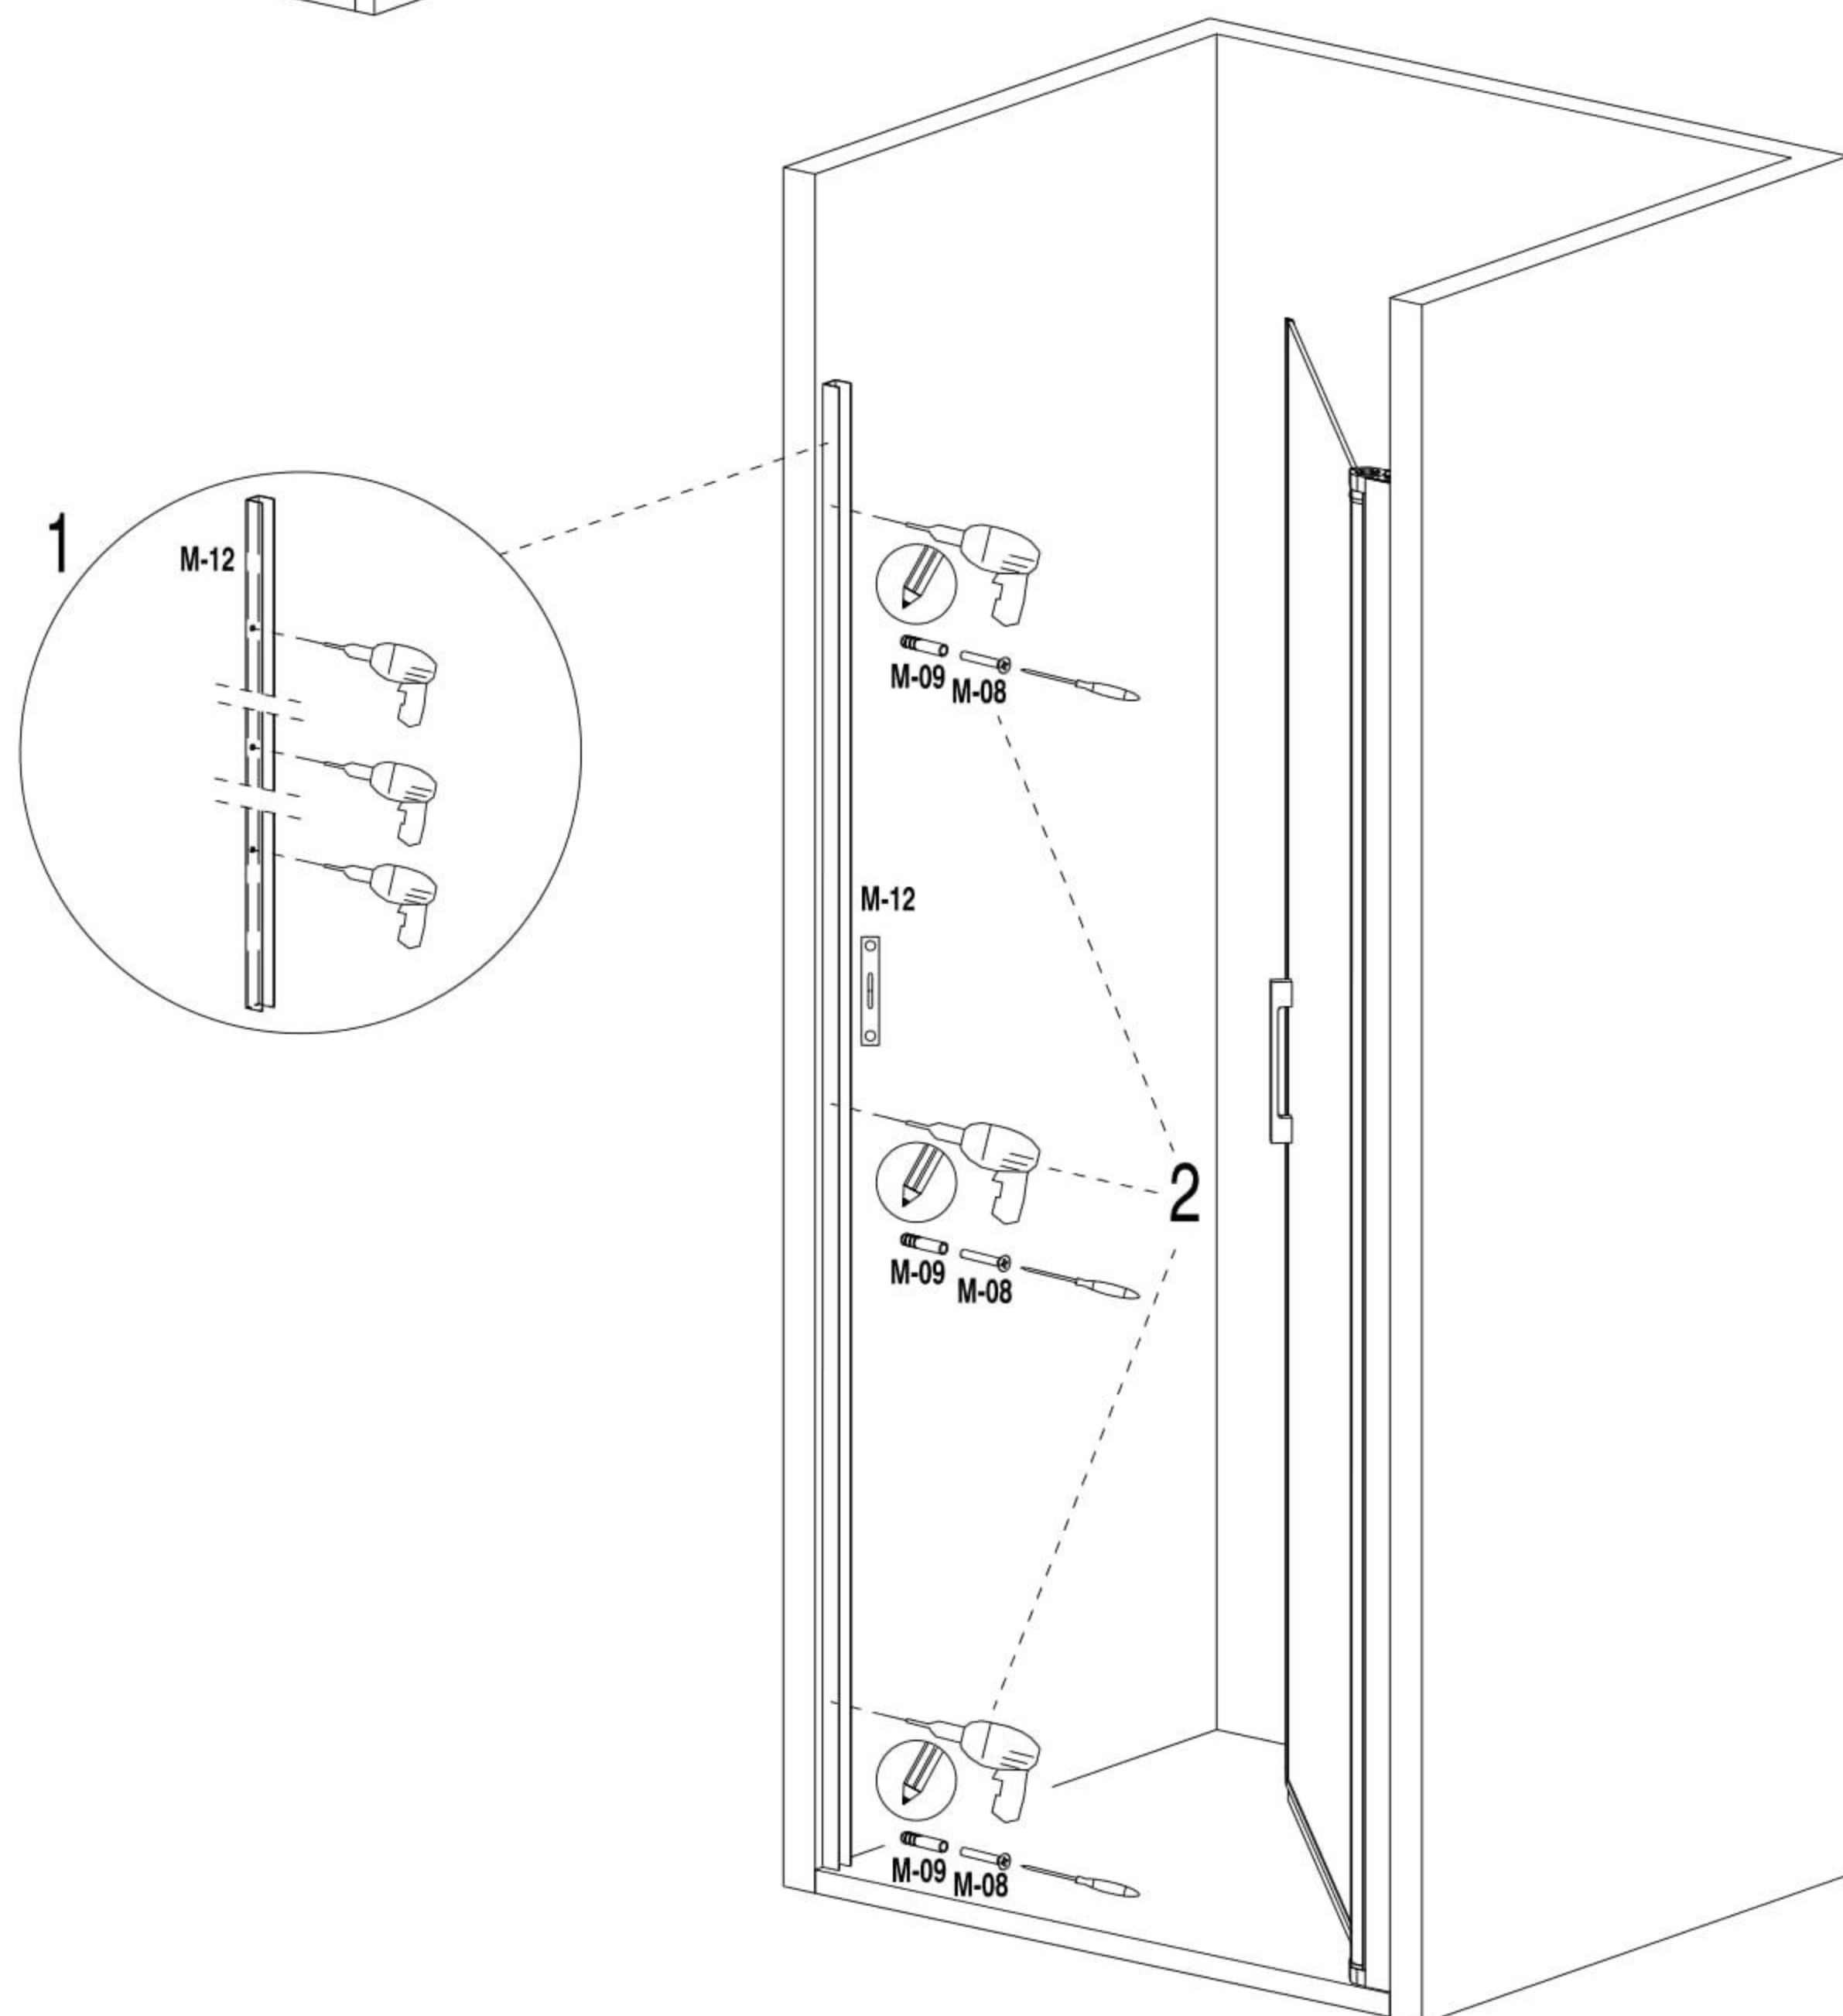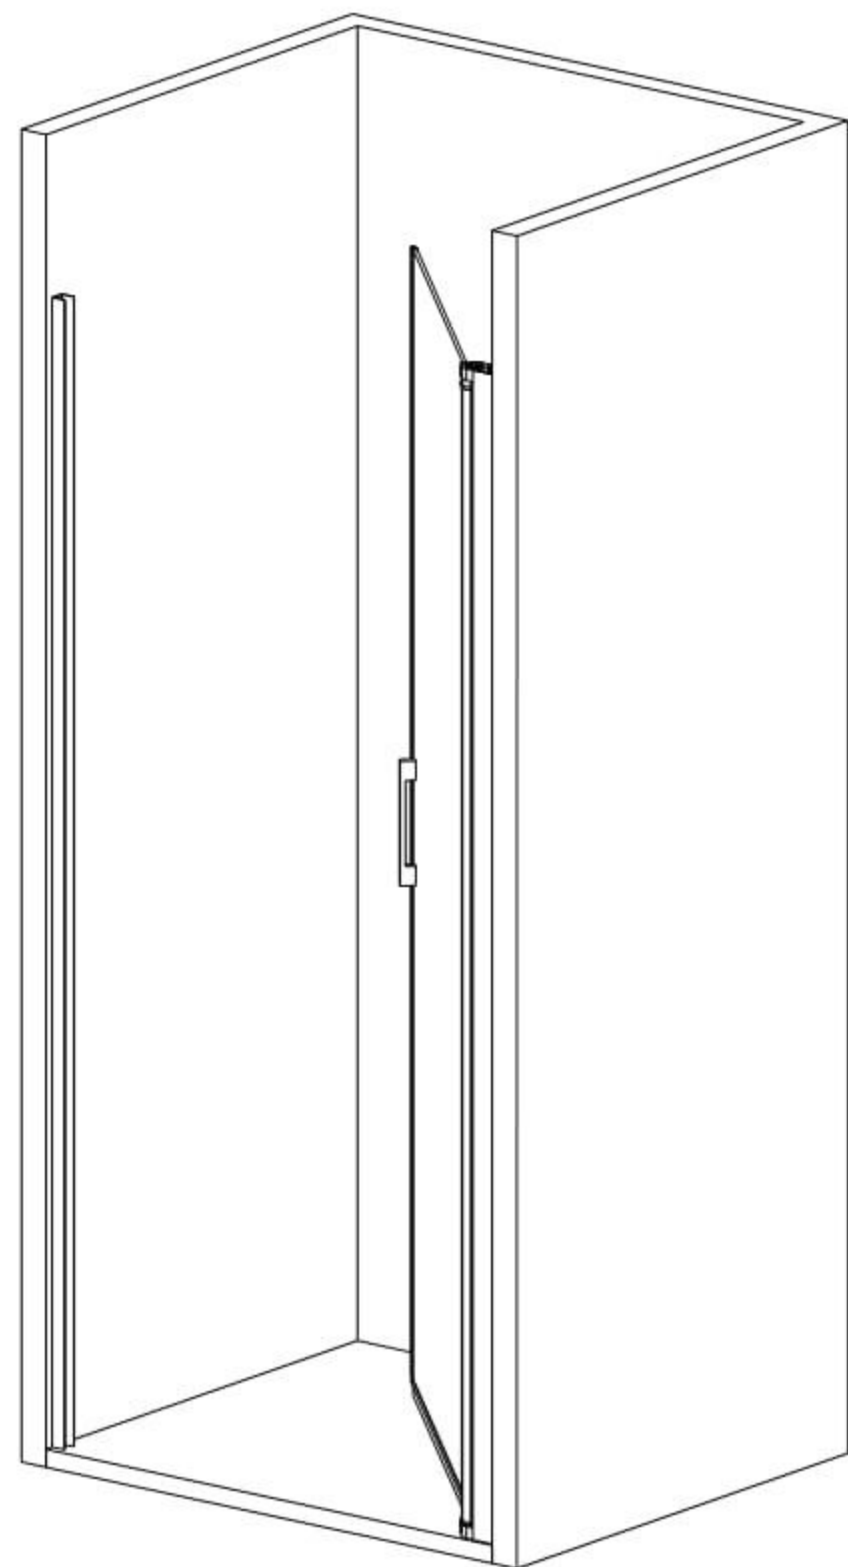A



A

